



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DREAMGEAR DGPS3-1353. You'll find the answers to all your questions on the DREAMGEAR DGPS3-1353 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DREAMGEAR DGPS3-1353  
User guide DREAMGEAR DGPS3-1353  
Operating instructions DREAMGEAR DGPS3-1353  
Instructions for use DREAMGEAR DGPS3-1353  
Instruction manual DREAMGEAR DGPS3-1353



**for/pour**  
**PS3™**

**shadow wireless** DUAL RUMBLE MOTORS

**dreamGEAR**  
www.dreamgear.net

**PACKAGE CONTENTS:**

- Customized Analog Sticks
- Dual Rumble Motors
- Enhanced L2 and R2 Buttons
- 2.4 GHz Wireless Technology
- Built-in Rechargeable Battery
- Rubberized Surface Texture
- Includes Mini USB Charge Cable
- User's Guide/Warranty Card
- Registration Card

**CHARGING SHADOW WIRELESS:**  
The Shadow Wireless controller features an internal rechargeable battery.

1. To charge the Shadow Wireless, use the included USB charge cable or your original Sony USB charge cable.
2. Connect the mini USB cable to the mini USB port located on the top of the Shadow Wireless controller.
3. Connect the standard USB plug to any available port on your PlayStation 3 game console. Your PlayStation 3 must be powered "ON" in order for the Shadow Wireless to charge. The DG/PS3 menu button will flash to indicate charging has begun. When the controller is fully charged the LED will become solid.

*Note: You can also charge Shadow Wireless from any powered USB port.*

**SHADOW WIRELESS SET-UP:**

1. Connect the included USB receiver to any available USB port on the PlayStation 3 game console.
2. Press the connect button on the USB receiver. The receiver LED will flash rapidly.
3. Press the DG/PS3 menu button. The LED on the receiver and controller will become solid when the controller is properly synced to the PlayStation 3.

**CHARGING WHILE PLAYING:**  
The Shadow Wireless controller can be charged during game play.

1. To charge the Shadow Wireless during game play, both the USB charge cable and USB receiver must both be connected to your PlayStation 3 game console.
2. To play and charge your Shadow Wireless controller, please follow the previous charge and set-up portion of this user's guide.

**Notes:**

- If the Shadow Wireless LED button flashes during connection the internal battery is becoming low.
- If the Shadow Wireless Controller will not function properly during proper set up or gameplay, press the reset button located on the back of the controller

**FCC NOTE:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try the interference by one of the following measures.

- Reorient to locate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications made on the system not expressly approved by the manufacturer could void the user's authority to operate equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**dreamGEAR**  
www.dreamgear.net

**FOR TECHNICAL SUPPORT PLEASE CONTACT:**  
1-877-999-DREAM  
or support@dreamgear.net



[You're reading an excerpt. Click here to read official DREAMGEAR DGPS3-1353 user guide](http://yourpdfguides.com/dref/3254172)  
<http://yourpdfguides.com/dref/3254172>

**Manual abstract:**

To charge the Shadow Wireless, use the included USB charge cable or your original Sony USB charge cable. 2. Connect the mini USB cable to the mini USB port located on the top of the Shadow Wireless controller. 3. Connect the standard USB plug to any available port on your PlayStation 3 game console. Your PlayStation 3 must be powered "ON" in order for the Shadow Wireless to charge. The DG/PS3 menu button will flash to indicate charging has begun. When the controller is fully charged the LED will become solid. Note: You can also charge Shadow Wireless from any powered USB port. SHADOW WIRELESS

SET-UP: 1.

Connect the included USB receiver to any available USB port on the PlayStation 3 game console. 2. Press the connect button on the USB receiver. The receiver LED will flash rapidly. 3.

Press the DG/PS3 menu button. The LED on the receiver and controller will become solid when the controller is properly synced to the PlayStation 3.

CHARGING WHILE PLAYING: The Shadow Wireless controller can be charged during game play. 1. @@2.

@@@@@@@@@@@@@@@@@ · Reorient to locate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications made on the system not expressly approved by the manufacturer could void the user's authority to operate equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. .



[You're reading an excerpt. Click here to read official DREAMGEAR DGPS3-1353 user guide](http://yourpdfguides.com/dref/3254172)  
<http://yourpdfguides.com/dref/3254172>