



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DREAMGEAR DGWII-1155. You'll find the answers to all your questions on the DREAMGEAR DGWII-1155 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DREAMGEAR DGWII-1155
User guide DREAMGEAR DGWII-1155
Operating instructions DREAMGEAR DGWII-1155
Instructions for use DREAMGEAR DGWII-1155
Instruction manual DREAMGEAR DGWII-1155



Wireless Charging Power Base Quad
USER'S GUIDE



PACKAGE CONTENTS:

- Wireless Charging Power Base
- 4 Rechargeable Batteries
- 110/240V AC adapter
- User's Guide/Warranty Card
- Registration Card

TO CHARGE THE BATTERY WHILE ATTACHED TO WII REMOTE:

1. Insert Rechargeable Battery into the Wii Remote by sliding the top teeth into the holes at the top of the battery compartment.
2. Press on the bottom of the Battery to snap the Battery into place.
3. Lay the Base on any flat surface.
4. Plug one end of the AC adapter into a wall outlet.
5. Plug the other end of the AC adapter into the back of the Wireless Charging Power Base.
6. Press the ON button on the front of the Base.
7. Place the Wii Remote with the Battery attached on one of the 4 designated slots with the directional button on the Wii Remote towards the top of the Base.
8. The LED in front should turn BLUE when charging, and FLASH BLUE when fully charged.

NOTE: You can place up to 4 Wii Remotes with Batteries attached on the Base at the same time. You can also leave the silicone covers on the Wii Remotes while charging.

TO CHARGE THE RECHARGEABLE BATTERY BY ITSELF:

1. Lay the Base on any flat surface.
2. Plug one end of the AC adapter into a wall outlet.
3. Plug the other end of the AC adapter into the back of the Wireless Charging Power Base.
4. Press the ON button on the front of the Base.
5. Place up to 4 Batteries onto the Base with the teeth of Battery towards the top of the Base.
6. The LED in front should turn BLUE when charging, and FLASH BLUE when fully charged.

NOTE: You can place up to 4 Rechargeable Batteries on the Base at the same time.

NOTE: The Wireless Power Base is ONLY compatible with dreamGEAR "Power Base" rechargeable battery packs.

dreamGEAR
www.dreamgear.net

dreamGEAR
www.dreamgear.net

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net



[You're reading an excerpt. Click here to read official DREAMGEAR DGWII-1155 user guide](#)

<http://yourpdfguides.com/dref/2458703>

Manual abstract:

@@2. Press on the bottom of the Battery to snap the Battery into place. 3. Lay the Base on any flat surface. 4. Plug one end of the AC adapter into a wall outlet. 5. @@6. Press the ON button on the front of the Base. 7.

@@8. @@NOTE: You can place up to 4 Wii Remotes with Batteries attached on the Base at the same time. You can also leave the silicone covers on the Wii Remotes while charging. TO CHARGE THE RECHARGEABLE BATTERY BY ITSELF: 1. Lay the Base on any flat surface.

2. Plug one end of the AC adapter into a wall outlet. 3. @@4. Press the ON button on the front of the Base.

5. @@6. @@@@Inserte la batería recargable en el control remoto Wii deslizando los dientes superiores hacia los orificios ubicados en la parte superior del compartimento para baterías. 2. Presione la parte inferior de la batería para encajarla en su lugar. 3. Coloque la base sobre una superficie plana. 4. @@5. @@6.

Presione el botón de encendido (ON) ubicado al frente de la base. 7. @@8. @@@@PARA CARGAR LA BATERÍA RECARGABLE POR SÍ SOLA: 1. Coloque la base sobre una superficie plana. 2. @@3. @@4. @@5. @@6.

@@@NOTA: La base de alimentación inalámbrica SÓLO es compatible con los paquetes de baterías recargables para base de alimentación dreamGEAR. PARA SOPORTE TÉCNICO CONTACTE AL: 1-877-999-DREAM o visítenos en la web @ www.dreamgear.net CONTENU DU PACK : · Chargeur Wireless Power Base · 4 Batteries Rechargeables · Adaptateur 110/240 AC · Le Manuel d'Utilisation / Carte de Garantie Produit · La Carte d'Enregistrement Produit POUR RECHARGER LA BATTERIE DE LA TÉLÉCOMMANDE WII: 1. Insérez la Batterie Rechargeable dans la Télécommande Wii en plaçant les ergots dans les trous vers le haut du compartiment.

2. Appuyez sur le bas de la Batterie pour la mettre en place. 3. Placez la Base sur n'importe quelle surface plate. 4.

Branchez l'Adaptateur AC dans la prise murale. 5. Branchez ensuite l'Adaptateur AC à l'arrière du Chargeur Wireless Power Base. 6. @@7. @@8.

@@@POUR RECHARGER LA BATTERIE RECHARGEABLE SEULE: 1. Placez la Base sur n'importe quelle surface plate. 2. Branchez l'Adaptateur AC dans la prise murale.

3. Branchez ensuite l'Adaptateur AC à l'arrière du Chargeur Wireless Power Base. 4. @@5. @@6. @@@@NOTE: La Wireless power Base est uniquement compatible avec les bloc-piles rechargeables "Power Base". POUR ASSISTANCE TECHNIQUE VEUILLEZ CONTACTER : 1-877-999-DREAM Ou visitez-nous sur le Web @ www.dreamgear.net .



[You're reading an excerpt. Click here to read official DREAMGEAR](#)

[DGWII-1155 user guide](#)

<http://yourpdfguides.com/dref/2458703>