




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DREAMGEAR LAVA GLOW. You'll find the answers to all your questions on the DREAMGEAR LAVA GLOW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DREAMGEAR LAVA GLOW User guide DREAMGEAR LAVA GLOW Operating instructions DREAMGEAR LAVA GLOW Instructions for use DREAMGEAR LAVA GLOW Instruction manual DREAMGEAR LAVA GLOW

Lava Glow wired Controller
USER'S GUIDE



for
PS2™

PACKAGE CONTENTS:


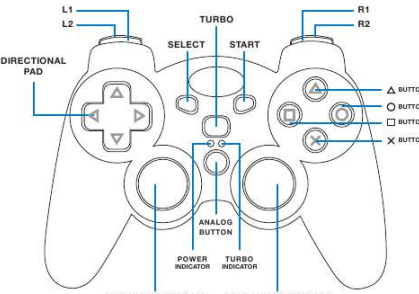
- 1 Lava Glow Controller
- 1 Lava Glow Controller plug
- User's Guide/Warranty Card
- Registration Card

1. With your Lava Glow Controller plugged in and your PlayStation®2 console powered "ON", press the "ANALOG" button to activate or deactivate this function.

NOTES:

- When in analog mode, the Left and Right analog sticks, L3 and R3 are active and all buttons except SELECT, START, L3 and R3 have pressure-sensitive functions.
- Some software titles will make this adjustment automatically.
- When using the controller in digital mode, the left and right analog sticks do not function. Also, the pressure-sensitive mode is turned off.
- Depending on the software, you may not be able to switch modes, even if you press the "ANALOG" button. Refer to the instructions supplied with the software for details.

The Lava Glow Wired Controller for PlayStation®2 is equipped with dual analog sticks and pressure-sensitive buttons.

CONNECTING THE CONTROLLER:

1. With your PlayStation®2 game console powered "OFF", insert the Lava Glow Controller plug into your console's controller port #1 (or other available controller port, if using multiple controllers) located on the front of your console.
2. Turn "ON" your PlayStation®2 console.
3. Begin playing your game.

ANALOG MODE SWITCHING:

The "ANALOG" mode button can be used to switch between analog and digital modes. Switch to the appropriate mode for use.

TURBO FUNCTION:

The Lava Glow Controller features a "TURBO" mode.

1. To activate "TURBO", press any button and the "TURBO" button at the same time to set "TURBO" to that button. To cancel the "TURBO" function, repeat step one.



NOTES:

- Do not unplug your Lava Glow Controller while the PlayStation®2 console is powered on.
- The Lava Glow Controller does not have "vibration" functions.

TROUBLESHOOTING:

The controller does not function:

- Check that the controller is properly connected to the PlayStation®2 controller port.
- Check to make sure that the controller cable is not damaged.
- Press the "RESET" button on the PlayStation®2 console.
- Check that the controller is set to the appropriate mode for the software. Refer to the instructions supplied with the software for details.
- Try using another controller that is compatible with the PlayStation®2 console. There may be a problem with the controller in use or the console may be malfunctioning.

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net



[You're reading an excerpt. Click here to read official DREAMGEAR LAVA GLOW user guide](http://yourpdfguides.com/dref/3197283)
<http://yourpdfguides.com/dref/3197283>

Manual abstract:

â When using the controller in digital mode, the left and right analog sticks do not function. Check to make sure that the controller cable is not damaged. With your PlayStation®2 game console powered "OFF", insert the Lava Glow Controller plug into your console's controller port #1 (or other available controller port, if using multiple controllers) located on the front of your console. 2. Turn "ON" your PlayStation®2 console.



[You're reading an excerpt. Click here to read official DREAMGEAR LAVA GLOW user guide](#)
<http://yourpdfguides.com/dref/3197283>