



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DREAMGEAR QUICK SHOT PRO. You'll find the answers to all your questions on the DREAMGEAR QUICK SHOT PRO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DREAMGEAR QUICK SHOT PRO  
User guide DREAMGEAR QUICK SHOT PRO  
Operating instructions DREAMGEAR QUICK SHOT PRO  
Instructions for use DREAMGEAR QUICK SHOT PRO  
Instruction manual DREAMGEAR QUICK SHOT PRO



[You're reading an excerpt. Click here to read official DREAMGEAR QUICK SHOT PRO user guide](http://yourpdfguides.com/dref/3632567)  
<http://yourpdfguides.com/dref/3632567>

**Manual abstract:**

*If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of dreamGEAR. This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes. for service on any defective product under the 120-day warranty policy , please contact Consumer Support to obtain a Return Authorization Number. @@@@ 2. @@ 3. Screw the battery compartment door shut tightly before using. @@@@ @@@@ @@@@ If your game requires the use of the Nunchuk, continue to step 4. 4. @@@@ If you are playing a game that does not require the Nunchuk, close the second latch and you are ready to play.*

*If your game requires the use of the Nunchuk, continue to step 4. 4. Through the back opening of the QUICK SHOT PRO, slip the connector plug of the Nunchuk under the back latch on the QUICK SHOT PRO and connect the Nunchuk to the Wii Remote. Make sure that the connector cover of the Wii Remote has been removed before inserting the connector plug of the Nunchuk into the External Extension Connector of the Wii Remote. 5.*

*Close the back latch. @@@@.*



[You're reading an excerpt. Click here to read official DREAMGEAR QUICK SHOT PRO user guide](http://yourpdfguides.com/dref/3632567)  
<http://yourpdfguides.com/dref/3632567>