




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DUALIT RAPIDO CAPSULE MACHINE. You'll find the answers to all your questions on the DUALIT RAPIDO CAPSULE MACHINE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DUALIT RAPIDO CAPSULE MACHINE
User guide DUALIT RAPIDO CAPSULE MACHINE
Operating instructions DUALIT RAPIDO CAPSULE MACHINE
Instructions for use DUALIT RAPIDO CAPSULE MACHINE
Instruction manual DUALIT RAPIDO CAPSULE MACHINE

Rapido Capsule Machine
Instruction Manual & Guarantee

Dualit 
Since 1945

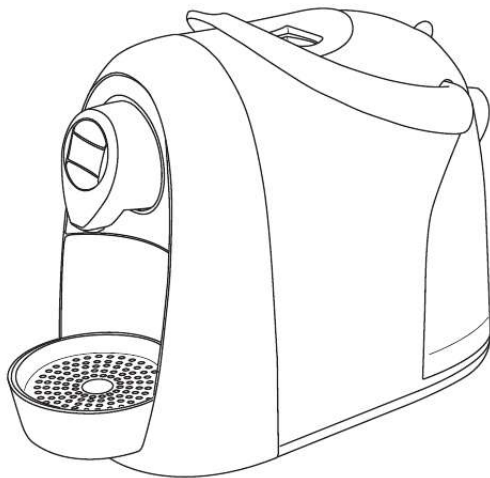

Caffitaly
SYSTEM



[You're reading an excerpt. Click here to read official DUALIT RAPIDO CAPSULE MACHINE user guide](http://yourpdfguides.com/dref/3235895)
<http://yourpdfguides.com/dref/3235895>

Manual abstract:

KEEP THESE INSTRUCTIONS SAFE FOR FUTURE REFERENCE. Always follow these safety precautions when using your capsule machine, for your own safety and to avoid damaging the machine. · Do not use the appliance if it is damaged in any way. At the first sign of defects or unusual noises or smells, turn off the appliance and unplug it. In such cases contact an Authorised Service Centre. Only use the appliance if the power cord is intact. If the cord is damaged, it should be replaced. Contact an Authorised Service Centre to prevent danger of electric shocks. Do not leave the power cord near hot surfaces, sharp edges or other sharp objects. When disconnecting the appliance, pull the plug, not the cord; otherwise it may be damaged.

Only connect the appliance to power 3 · outlets complying with the requirements of law. Make sure that the power supply voltage matches the rating shown on the data plate on the bottom of the appliance. To avoid the risk of fire, set the appliance on a flat, heat-resistant surface. Only use and store the appliance indoors. Do not let the power cord dangle! Position the cord so there is no risk of tripping.

Do not allow the appliance to be used by children or persons with impaired mental, physical or sensory faculties or insufficient experience and/or skills, unless they are under the careful supervision and guidance of a person responsible for their safety. @@Always close the lever. Never open the lever while the appliance is operating. Always use the appliance with the drip tray and grill in place. @@Never place your hands inside the capsule compartment.

Danger of injury! Never remove parts of the appliance. Do not insert objects into the openings. This could cause electric shocks! @@@@ · Clean the appliance carefully and regularly. If it is not cleaned, the build-up that forms may be hazardous to your health. Unplug the appliance and allow it to cool before cleaning. Descale the appliance regularly, following the instructions provided. If you do not, the appliance may be damaged and may become harmful to your health. Make sure the electrical elements, plug and cord are dry. Never submerge the appliance in water. Protect the appliance from sprays and drips.

Water and electricity together constitute a risk of electrocution If you do not expect to use the appliance for a long period of time, unplug it. · · The appliance is made to brew coffee and dispense hot water. It is intended for domestic use and must be used in accordance with these instructions. Use only Caffitaly System capsules. Any other use is to be considered improper. Use of the appliance in any manner other than as directed herein could cause harm to persons and void the guarantee. The manufacturer will not be responsible for injury or damage resulting from improper use of the appliance. The appliance has been manufactured using high quality materials that can be reused or recycled. Dispose of the appliance in a suitable waste collection centre. When you decide to dispose of the appliance, unplug it from the power outlet.

Then cut off the power cord as close to the body of the appliance as possible. Directions for correct disposal of the product according to European Directive 2002/96/EC. At the end of its useful life, the product should not be disposed of with unsorted household waste. It should be taken to a suitable selective waste collection centre set up by the local authorities or returned to a retailer who provides this service. Separate collection of an electric household appliance avoids a possible negative impact on the environment and health arising from improper disposal and enables the materials it is 5 · made of to be recovered so as to achieve significant savings of energy and resources.

The crossed-out wheellie bin symbol applied on the product highlights the need to dispose of electric appliances separately. Improper disposal of the product by the user shall be subject to specific administrative sanctions as provided for under current regulations. The packaging is made from recyclable materials.

Contact the relevant authorities for information regarding local legislation. The Caffitaly System plastic capsule cups are recyclable.

The foil cover is not and should be removed from the capsule cup and disposed of with unsorted household waste. @@@@@N.B.

@@@@@@@@@@@@@@@@@@@@The selected coffee button will blink. @@@@@@@@@@@@@@@@@@The selected coffee button will blink. The drawer.

Close the lever. @@@@Fill the tank with fresh, still water. @@If the lever is raised while a beverage is being dispensed..

. ... the indicator light will blink Close the lever. and an intermittent beep will be emitted. @@The volume can be changed according to your personal taste and the size of the cups. 2 LARGE CUPS 3 TURN OVER GRILL 1 INSERT CAPSULE 2 PLACE CUP 3 PRESS BUTTON AND HOLD Espresso Espresso Small cup Mug Long espresso The appliance can be adjusted for the use of mugs or espresso cups. The appliance is initially set for the use of large cups. In order to use espresso cups, you must lift and turn the grill on top of the drip tray.

Insert the capsule, pressing it x3 gently into place (see page10). Place a cup under the coffee dispensing spout depending on the type of coffee you wish to programme. Press and hold the desired coffee button. 4 ESPRESSO CUPS 4 RELEASE BUTTON 5 FACTORY STANDARD VOLUMES 35ml 60ml 110ml x3

In this way you can obtain the best results when using small espresso cups. On reaching the desired amount of coffee in a cup, release the button. The appliance will emit 3 beeps. Now the button is reprogrammed. 14 The factory standard volumes are: espresso 35ml, long espresso 60ml and filter coffee 110ml. 15 CHOOSING THE TEMPERATURE The temperature of coffee dispensed can be preprogrammed according to personal taste. SAVING ENERGY

The machine features a function which automatically reduces energy consumption by around 98% after one hour has elapsed from last use.

1 LIFT THE LEVER 1 O 2 PRESS BUTTON AND HOLD 3 CHANGE TEMPERATURE 1 ACTIVATE 2 DEACTIVATE 3 WAIT 60 SECONDS 1 O 1 O x1 x1 x1

x1 Press and hold down the buttons simultaneously and press the power on/off switch. Ensure both buttons are firmly pressed. The indicator light will be illuminated and one beep will be emitted. +1oc x1 Press the temperature selector button until you reach the temperature required. The machine will emit a beep. x1 The machine will automatically reduce consumption one hour after the last. The buttons will blink intermittently. To restore normal operating conditions, press any button or raise the lever. 60 SEC Swich the machine off and lift the lever. The appliance will warm up.

Wait 60 seconds. 4 Standard temperature 5 ACTIVATE CHANGES 4 READY +1oc Standard temperature Standard temperature +2 c o +1oc +3 c o 1 O 60 N.B. The button illuminated denotes coffee temperature setting. To scroll through options press the long espresso button (see image 3 above).



[You're reading an excerpt. Click here to read official DUALIT](http://yourpdfguides.com/dref/3235895)

[RAPIDO CAPSULE MACHINE user guide](http://yourpdfguides.com/dref/3235895)

<http://yourpdfguides.com/dref/3235895>

+2oc Switch off and on to activate the changes. o +2oc +3 c SEC 60 When the appliance is ready the butising to the top Press the desired coffee button The appliance will resume brewing What do I do if I can't access, drain or descale feature? . . . Press down in the centre of the button Ensure you feel the button engage See active button zones highlighted 1 TURN OFF 2 EMPTY WATER TANK 3 TURN ON I O I O . . . Turn the machine off. I O Remove and empty the water tank. I O Press and hold down the buttons simultaneously and press the power on/off switch. Ensure both buttons are firmly pressed.

Two people may be required to do this. What if the coffee is not hot enough? . . . Preheat the cup (see page 9) The cup may be cold or there may be a build up of scale in the machine Descal the machine 4 WAIT 30 SECONDS 5 DRAINAGE CYCLE 6 TURN OFF What if the lever cannot be lowered? . The used capsule drawer may be full or there may be a capsule stuck inside the x1 machine Empty out the used capsule drawer Remove the used capsule 30 SEC . . 30 SEC x1 30 SEC x1 The machine will carry out a drainage cycle. At the end the indicator light blinks and the appliance emits a beep. I O The indicator light will blink. Wait 30 seconds Turn the machine off.

The next time you turn it on you will have to carry out a new start-up procedure (see page 8). 23 22 GUARANTEE This appliance is of excellent quality and construction. However, if any defects in materials or workmanship do appear during the relevant Guarantee period we will, at our discretion, either repair or replace the defective parts free of charge, subject to the terms and conditions of our Guarantee shown below. This Guarantee covers both parts and labour. Carriage is not included.

@ @ @ @ @ @ @ @ a till receipt) Give exact details of the nature of the defect . . . This Guarantee does not cover any other claims whatsoever, including, without limitation, any liability for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of Dualit. If replacement parts are fitted to the product this will not extend the period of the Guarantee. For further advise contact the Dualit customer helpline on +44 (0)1293 652 500 (09:00 to 17:00 Monday to Friday). Alternatively, email Dualit at info@dualit.com or visit www.dualit.com. 24 Before returning any product under this Guarantee, please check that: . You have followed the product instructions correctly Dualit Limited County Oak Way Crawley West Sussex RH11 7ST Telephone: +44 (0) 1293 652 500 Facsimile: +44 (0) 1293 652 555 Email: info@dualit.com Web: www.dualit.com.

com GB0710 .



[You're reading an excerpt. Click here to read official DUALIT RAPIDO CAPSULE MACHINE user guide](http://yourpdfguides.com/dref/3235895)
<http://yourpdfguides.com/dref/3235895>