




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DUALIT XL I 500. You'll find the answers to all your questions on the DUALIT XL I 500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DUALIT XL I 500**  
**User guide DUALIT XL I 500**  
**Operating instructions DUALIT XL I 500**  
**Instructions for use DUALIT XL I 500**  
**Instruction manual DUALIT XL I 500**

XL I 500 Food Processor  
Instruction Manual & Guarantee

**Dualit**   
Since 1945

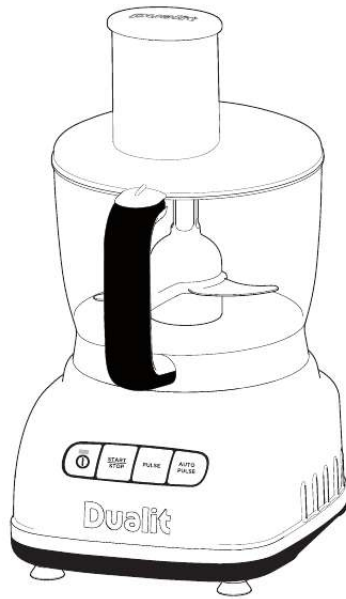

[You're reading an excerpt. Click here to read official DUALIT XL I 500 user guide](http://yourpdfguides.com/dref/3645380)  
<http://yourpdfguides.com/dref/3645380>

**Manual abstract:**

**KEEP THESE INSTRUCTIONS SAFE FOR FUTURE REFERENCE.** Always follow these safety precautions when using your food processor, for your own safety and to avoid damaging the processor. · This appliance is designed to operate with an AC power supply. Make sure your network voltage corresponds to the voltage shown on the rating plate underneath the food processor. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Never use a plug without the fuse cover fitted. Always make sure a replacement fuse is the same rating as the original. Replacement fuses should be approved to BS 1362 3 · **NOTE:** Any plug cut from its power supply cord should be disposed of immediately. Inserting any cut-off plug into an electrical socket is dangerous. Unplug the unit when not in use, before fitting or removing parts and before cleaning. To unplug it, hold the plug and pull it out of the socket. Never pull it out by the power cord. For model DFP2M only: This appliance must be earthed. Do not use the food processor outdoors. This product is for domestic use only. Do not use the processor on a sloping surface. Make sure the power cord doesn't hang over the edge of the table or countertop. Make sure the cord or plug isn't in contact with anything hot or wet. Never leave the processor unattended when it is plugged into a wall socket or switched on. Children should be supervised to ensure that they do not play with the appliance. Ensure that the processor, the toolbox and all accessories are always kept well out of reach . . . . . Unpack the box with care, keeping all the packaging materials until you are satisfied everything is present and in working order.

Once satisfied remove any tags from the food processor and recycle the packaging appropriately. All illustrations are for representation only, your model may have a different appearance from illustrations shown. . . . 2 · This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. When moving the processor, use both hands and lift holding the base unit. Never lift the processor using the bowl handle. Never tamper with the safety systems. @@@@ Never use your fingers or utensils; this could cause severe injury and also damage the appliance. Do not overfill the bowls; ingredients need room to move around.

Use the maximum loading chart on page 21 for reference. Always turn the power off via the control knob before opening the lid. Switch off the appliance and disconnect from supply before changing accessories or approaching moving parts while in use. Never remove the bowl or lid until the blades or discs have come to a complete stop. Never touch moving parts or insert your hand or utensils into the bowl. Use the food pusher provided to guide ingredients through the feed tube. · The processor features an overheat cut-out that cuts the power if it becomes too hot for any reason. If this occurs turn the control knob to the OFF position. Once it cools down, the safety cut-out will automatically reset itself within one hour and the power will be restored. Do not submerge the motor housing, cord or plug in water or any other liquids. Clean all parts after each use; please refer to the cleaning instructions on page 18. If your ingredients include raw meat, make sure the bowls and attachments are cleaned thoroughly, immediately after use. When using a dishwasher, always set it to the lowest setting (max 40°C) and keep bowls and accessories well away from the heating elements. Avoid the drying cycle.

. . . . . **SAVE THESE INSTRUCTIONS** In the interest of improving products, Dualit Ltd. reserves the right to change the product specification without prior notice. . . . . 5 **KNOW YOUR FOOD PROCESSOR STAY FRESH LID** Chopping blades Chops, minces, blends and mixes in a matter of seconds. Dough blade Perfect for making bread dough and pastries. Spindle Use on the bowl drive to attach accessories. **FOOD PUSHER** Features easy to read measurement markings. Large bowl Use this bowl for all liquids (it has a sealed drive). It offers the maximum working capacity. Medium bowl Use this as a secondary bowl. This is also the best bowl when using slightly smaller quantities.

Small bowl Perfect for everyday processing tasks like chopping herbs or puréeing baby food. The small bowl must sit inside the medium bowl. **LID WITH FEED TUBE** Easy to assemble and clean. **WORK BOWL WITH SEALED DRIVE** Features the largest working capacity. Grating/shaving disc Ideal for grating hard cheeses and shaving chocolate. Shredding disc Can shred most vegetables into fine food. Julienne disc Quick preparation for stir-fry's and salads. **POWER INDICATOR LIGHT CONTROLS** Adjustable slicer A precision sharp slicing blade, height adjustable for different thickness slicing. E-Disc Will emulsify liquids and whisk egg whites in seconds. Spatula For quick and easy removal of ingredients.

Main On/Off, Start/Stop, Pulse and Auto Pulse Use the toolbox for storing most of the accessories 6 **SUCKER FEET** 7 **HANDLE GRIPS** **CORD STORAGE** 1st **PROCESSING BOWLS & LID** You will always need to use the large bowl first, no matter what other bowls and attachments you wish to use. 2nd **BLADES & SPINDLE** 2nd 3rd 2nd Do not Use blades for longer than 45 seconds at a time. Allow processor to cool if you go over the max run time. **CAUTION, BLADES ARE VERY SHARP** . 1st 1 **POSITION BODY** 2 **LARGE BOWL** 3 **LOCK LARGE BOWL** 1 **LARGE BLADE** 1st 2 **MEDIUM BLADE** 1st 3 **SMALL BLADE** 3rd 2nd 2nd **CLICK CLICK** 2nd 1st 1st 1st Before you assemble the food processor, ensure that the power cord is unplugged, and placed facing you on a dry, level surface.

Push down on the body to secure firmly. Place the large bowl onto the main body, with the handle pointing to the right (four o'clock). Hold the handle and turn it clockwise until you hear and feel it lock in to place. Handle blades and attachment **CLICK** using only the central plastic section. The large chopping blade locates directly onto the bowl drive, once the large bowl is locked in place.

The medium chopping blade also locates directly onto the bowl drive, once both large and medium bowls are in place. The small chopping blade needs to be used with the spindle. This must be attached to the bowl drive once the large and medium bowls are in place, and before locating the small bowl.



[You're reading an excerpt. Click here to read official DUALIT XL I](http://yourpdfguides.com/dref/3645380)

[500 user guide](http://yourpdfguides.com/dref/3645380)

<http://yourpdfguides.com/dref/3645380>

1 ADDITIONAL BOWLS 2 ALIGN BOWLS 3 ATTACH LID & LOCK INTO PLACE 2nd 1 SPINDLE IN LARGE BOWL 2 SPINDLE IN MEDIUM BOWL 3 SPINDLE IN 3rd 2nd SMALL BOWL 2nd 2nd 1st 1st LOCK 1st 1st 2nd When using the medium bowl, insert this into the large bowl. When using the small bowl insert this into the medium bowl. Small bowl must be used with the medium bowl. The medium bowl will self-locate into the large bowl. The groove on the small bowl must align with the pip on the medium bowl. 8 To attach the lid, place it on the large bowl aligning to the slots on the bowl rim. To lock, hold the large bowl handle, and with your other hand, hold the base of the feed tube and rotate clockwise.

The spindle locates on to the bowl drive on the large processing bowl. When using the medium bowl, place it in the large bowl then the spindle on the bowl drive. When using the small bowl with blade, place in the large 1st bowl with medium bowl, spindle in position, then place the small bowl and small blade on the spindle. 9 GRATING & SHREDDING DISC Do not Use Discs for longer than 45 seconds at a time. Allow processor to cool if you go over the max run time. Do not use Discs with Auto pulse. VARIABLE SLICING & JULIENNE DISC take caution as blades are sharp. Do not use with Auto pulse. 1 SELECT GRATE 2 LOCK ON SPINDLE 3 LOCATE ON BOWL 1 SLICE THICKNESS 2 LOCK ON SPINDLE 3 FOR LARGE & MEDIUM BOWLS OR OR OR Select the fine or coarse side Place the reversible grating of the grating/shaving disc to disc on the spindle and push suit your requirement. down firmly to locate. NOTE: Very sharp. Hold plastic hub to avoid injury. Place the spindle and grating disc assembly onto the bowl drive of large processing bowl. To adjust the slicing thickness, Fit the slicing disc over the rotate the outer spindle spindle and press firmly into anti-clockwise to make slices place. thicker, or clockwise to make thinner slices.

NOTE: Very sharp. Hold plastic to avoid injury. The adjustable slicing disc can only be used with the large and medium bowls. It creates any slice thickness between 0.5mm and 7.

5mm. 1 SELECT SHRED 2 LOCK ON SPINDLE 3 LOCATE ON BOWL 1 CORRECT WAY UP 2 LOCK ON SPINDLE 3 FOR LARGE & MEDIUM BOWLS OR Select the fine or coarse side of the shredding disc to suit your requirement. NOTE: Very sharp. Hold plastic hub to avoid injury. Place the reversible shredding disc on the spindle and push down firmly to locate. Place the spindle and shredding disc assembly onto the bowl drive of large processing bowl. The julienne disc must be Fit the julienne disc over the inserted with the cutting face spindle and press firmly into place. upwards. NOTE: Very sharp. Hold plastic hub to avoid injury.

@@@Place the dough blade directly onto the bowl drive in the large bowl. Liquids can be added slowly Add dry ingrediorm pieces before you begin processing, the finished results will be more uniform. @@@@sultanas into a scone mix. @@Turn off and dismantle the processor, clean and dry all parts. @@Do not lock the bowl lid whilst in storage. This can damage the safety mechanism built into the bowl. @@Warning: Use extreme caution, as blades are sharp. Always handle the chopping blade by its central plastic section. @@@@The more firmly you push, the thicker the slices or shreds. Do not use excessive force or you may damage the food processor.

@@@@NEVER USE ABRASIVE CLEANERS ON ANY OF THE PARTS. @@Dry immediately. @@@@Do not lock the bowl lid whilst in storage. This can damage the safety mechanism built into the bowl. 4 CLEAN IMMEDIATELY 5 DISHWASHER 6 POSITIONING 4 USE TOOL TRAY 5 CORD TIDY 6 STORE IN A SAFE PLACE 40oC Wash the bowl, lid, blades and discs immediately after each use with warm soapy water.

Use a small brush to get to hard-to-reach areas. All attachments and bowls excluding the main body are suitable for dishwasher use. Use a wash cycle below 40°C. Remove prior to drying cycle. 18 TOP RACK ONLY Only put the food processor parts on the top rack of your dishwasher and keep them well away from the heating elements.

TOP RACK ONLY TOP RACK ONLY The chopping blades, dough blade, spindle, spatula and all discs should be stored in the toolbox provided. Excess power cord can be stored in TOP RACK the cord tidy on the underside of the ONLY processor. Remember to store all accessories in the same manner you would store sharp knives, away from children and away from the edge of a shelf. 19 TROUBLESHOOTING What do I do if my processor does not turn on? · · Ensure the bowl and lid are locked in position. Check that the small bowl has properly located onto the medium bowl. If not the lid will not locate properly and the processor will not turn on. Check the plug is correctly fitted in the outlet and the power supply is switched on. Check the fuse in the plug. Ensure the new fuse is the same current value as original. What if it doesn't chop uniformly? · · Blades or discs may not be attached properly.

You may be exerting too much force on the food while pushing down the feeder tube. MAXIMUM LOADING CHART Use the chart below as a guide to determine the maximum amount of ingredients to be processed at one time in the large bowl. Ingredients Bread Dough Minced Meat Soup Victoria sponge mix Shortcrust pastry Sliced food Egg Whites Large Bowl 1.4Kg 1.45Kg 2.25L using Auto Pulse 8 eggs 1.4Kg 1.8Kg 3-8 · What if my egg whites won't stiffen up? · You may not be using enough eggs (we recommend a minimum of two eggs). You may be using the wrong accessory; for egg whites you need the E-disc and the large bowl. You may not be whisking for long enough.

Your bowl must be completely clean and dry. · · What if it switches itself off while I'm using it? · The motor may have overheated. To prevent damage, the unit will automatically cut all power. If this happens, turn switch to 'OFF', unplug and allow the unit to cool for approximately one hour. Once cool the overheat safety feature will reset and you can carry on using the processor.

Check the lid or large bowl has not become loose. · · What if the drive shaft is sticking or the motor is struggling to turn the mixture? · The mixture may be too dense, remove some of the mixture and process in batches. Run the motor for no more than 15 seconds allowing for a one minute pause between cycles. This allows the machine to cool down to room temperature before next use. After five cycles the appliance should be cooled down to room temperature before the next use.

· · · 20 21 GUARANTEE This appliance is of excellent quality and construction. However, if any defects in materials or workmanship do appear during the relevant guarantee period, we will, at our discretion, either repair or replace the defective parts, free of charge, subject to the terms and conditions of our Guarantee shown below.



[You're reading an excerpt. Click here to read official DUALIT XL I 500 user guide](http://yourpdfguides.com/dref/3645380)  
<http://yourpdfguides.com/dref/3645380>

*This Guarantee covers both parts and labour. Carriage is not included. Your guarantee period is as follows: · · 12 year guarantee on the motor, 3 year guarantee on parts. · · Your mains electricity supply is functional. The defect is not due to a blown fuse. If you wish to claim under this Guarantee you should:*

- Send the product, postage or carriage paid, to the dealer from whom it was purchased or to Dualit direct. Ensure that the product is clean and packed carefully (preferably in its original carton). @ @ a till receipt).*

*@ @ @ @ @ It does not cover liability in respect of or replacement of plugs, cables or fuses and also does not cover defects due to: · · · · · Failure to use or maintain product in accordance with Dualit's instructions. The product being connected to an unsuitable electricity supply. Accidental damage to or abuse or misuse of the product. The product has not been modified except by Dualit or approved agent. Dismantling of or interference with the product. Theft or attempted theft of the product. · · · This Guarantee does not cover any other claims whatsoever, including, without limitation, any liability for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of Dualit. If replacement parts are fitted to the product this will not extend the period of the Guarantee. For further advice contact the Dualit customer helpline on +44 (0)1293 652 500 (09:00 to 17:00 Monday to Friday). Alternatively, email Dualit at info@dualit.com or visit www.dualit.com 22 Before returning any product under this Guarantee, please check that:*

- You have followed the product instructions correctly.*

*Dualit Limited County Oak Way Crawley West Sussex RH11 7ST Telephone: +44 (0) 1293 652 500 Facsimile: +44 (0) 1293 652 555 Email: info @ dualit.com Web: www. dualit.com GB1110 .*



[You're reading an excerpt. Click here to read official DUALIT XL I  
500 user guide  
http://yourpdfguides.com/dref/3645380](http://yourpdfguides.com/dref/3645380)