



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON ACULASER CX37DTNF. You'll find the answers to all your questions on the EPSON ACULASER CX37DTNF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON ACULASER CX37DTNF**  
**User guide EPSON ACULASER CX37DTNF**  
**Operating instructions EPSON ACULASER CX37DTNF**  
**Instructions for use EPSON ACULASER CX37DTNF**  
**Instruction manual EPSON ACULASER CX37DTNF**

**EPSON**  
EXCEED YOUR VISION

Epson AcuLaser **CX37 Series**

## **Safety Information Guide**

NP04500-00



[You're reading an excerpt. Click here to read official EPSON ACULASER CX37DTNF user guide](http://yourpdfguides.com/dref/5197834)  
<http://yourpdfguides.com/dref/5197834>

**Manual abstract:**

Caution must be observed to avoid damage to your equipment. Note contain important information and useful tips on the operation of your printer. Important Safety Instructions Setting up the printer □ Because the printer weighs approximately 32.5 kg (71.6 lb) with consumable products installed, one person should not lift or carry it. Two people should carry the printer, lifting it by the correct positions as shown below. □ When moving the printer, always keep it horizontal. □ If you are unable to insert the AC plug into the electrical outlet, contact an electrician. @@ Use only the power cord that comes with this product. Use of the another cord may result in fire or electric shock.

This product's power cord is for use with this product only. Use with other equipment may result in fire or electric shock. @@@@ □ Use a grounded outlet that matches the printer's power plug. do not use an adapter plug. □ Avoid using an electrical outlet that is controlled by wall switches or automatic timers. @@ □ Make sure that there is no dust on the socket. □ Be sure to insert the plug completely into the electrical outlet. □ Do not handle the plug with wet hands. @@@@ Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation. If it has been dropped or the cabinet has been damaged.

Avoid using outlets on the same circuit as photocopiers or air control systems that regularly switch on and off. Safety Instructions 3 Epson AcuLaser CX37 Series Safety Information Guide □ Connect your printer to an electrical outlet that meets the power requirements of this printer. Your printer's power requirements are indicated on a label attached to the printer. If you are not sure of the power supply specifications in your area, contact your local power company or consult your dealer. □ If you use an extension cord, make sure that the total of the ampere ratings on the products plugged into the extension cord does not exceed the extension cord ampere rating. □ When connecting this product to a computer or other device with a cable, ensure the correct orientation of the connectors. Each connector has only one correct orientation. @@@@ □ Do not put your printer where the cord will be stepped on. □ Do not use printer in a damp environment. @@ □ Do not place the printer on an unstable surface.

@@ Do not block or cover them. @@ □ Keep the entire computer and printer system away from potential sources of interference, such as loudspeakers or the base units of cordless telephones. □ Leave adequate room around the printer to allow for sufficient ventilation. Safety Instructions 4 Epson AcuLaser CX37 Series Safety Information Guide Using the printer □ Be careful not to touch the fuser, which is marked CAUTION, or the surrounding areas. If the printer has been in use, the fuser and the surrounding areas may be very hot. If you must touch one of these areas, wait 40 minutes to allow the heat to subside before doing so. \* CAUTION □ Do not insert your hand deep into the fuser unit as some components are sharp and may cause injury. □ Never push objects of any kind through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. □ Do not sit or lean on the printer. Do not put heavy objects on the printer.

□ Do not use any kind of combustible gases in or around the printer. □ Never force the printer's components into place. Although the printer is designed to be sturdy, rough handling can damage it. □ Do not leave jammed paper inside the printer. This can cause the printer to overheat.

□ Never spill liquid of any kind on the printer. @@@@ □ Do not disconnect the plug while the printer is on. @@ □ Unplug this printer from the wall outlet before cleaning. @@ □ When moving the printer, always keep it horizontal. □ Do not remove jammed paper by force.

@@@ □ Do not pull the power cable when disconnecting the plug. Always be sure to hold the plug when disconnecting it. @@@ be sure to disconnect all cables. @@ dispose of them according to local regulations. @@@ □ Do not attempt to modify an imaging cartridge or take it apart. □ Do not touch the toner. Always keep toner away from your eyes. @@ □ If toner is spilled, use a broom and dustpan or a damp cloth with soap and water to clean it up. Because the fine particles can cause a fire or explosion if they come into contact with a spark, do not use a vacuum cleaner. Safety Instructions 6 Epson AcuLaser CX37 Series Safety Information Guide □ Wait at least one hour before using an imaging cartridge after moving it from a cool to a warm environment to prevent damage from condensation.

□ To get the best print quality, do not store the imaging cartridge in an area subject to direct sunlight, dust, salty air, or corrosive gases (such as ammonia). @@@@ the imaging cartridge contains a light-sensitive drum. @@@ □ Be careful not to scratch the surface of the drum. @@@@ Your printer is a Class 1 laser product as defined in the IEC60825 specifications. A label similar to the one shown below is attached to the back of the printer in countries where required. Safety Instructions 7 Epson AcuLaser CX37 Series Safety Information Guide Internal laser radiation There is a Class III b Laser Diode Assembly that has an invisible laser beam inside the printer head unit. The printer head unit is NOT A SERVICE ITEM, therefore, the printer head unit should not be opened under any circumstances. An additional laser warning label is affixed to the inside of the printer. ozone safety Ozone emission Ozone gas is generated by laser printers as a by-product of the printing process. Ozone is produced only when the printer is printing.

ozone exposure limit The Epson laser printer generates less than 3 mg/h of continuous printing. @@@@ For more details on available collection facilities please contact your local government office or the retailer where you purchased this product. Use of the chemical symbols Pb, Cd or Hg indicates if these metals are used in the battery. For at beskytte miljø og helbred skal dette produkt og dets batterier bortskaffes separat, så disse dele kan genbruges på en måde, der er god for miljøet. This information only applies to customers in the European Union, according to DIRECTIVE 2006/66/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL OF 6 September 2006 on batteries and accumulators and waste batteries and accumulators and repealing Directive 91/157/EEC and legislation transposing and implementing it into the various national legal systems.

For other countries, please contact your local government to investigate the possibility of recycling your product. .



[You're reading an excerpt. Click here to read official EPSON](#)

[ACULASER CX37DTNF user guide](#)

<http://yourpdfguides.com/dref/5197834>