



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION HOME XP-235. You'll find the answers to all your questions on the EPSON EXPRESSION HOME XP-235 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON EXPRESSION HOME XP-235

User guide EPSON EXPRESSION HOME XP-235

Operating instructions EPSON EXPRESSION HOME XP-235

Instructions for use EPSON EXPRESSION HOME XP-235

Instruction manual EPSON EXPRESSION HOME XP-235



[You're reading an excerpt. Click here to read official EPSON EXPRESSION HOME XP-235 user guide](http://yourpdfguides.com/dref/5835781)

<http://yourpdfguides.com/dref/5835781>

Manual abstract:

Sn Visit the website to start the setup process, install software, and configure network settings. @@ Visit the website for more information. Not all cartridges are available in all regions. For information on Epson's ink cartridge yields, please visit the website. IOS / Android Do not connect a USB cable unless instructed to do so. Sn Visit the website to install Epson iPrint application, start the setup process, and configure network settings. You can open the User's Guide (PDF) and Network Guide (PDF) from the shortcut icon, or download the latest versions from the following website. Caution; must be followed carefully to avoid bodily injury. @@@@ Flashes when an ink cartridge is running low on ink. printing is still possible.

@@@ Otherwise, the ink remaining in the print head nozzles may dry out. @@ Slide the edge guide against the paper, and flip the guard back. Hold down for more than three seconds to make network settings using the WPS button on a wireless router. Press both buttons simultaneously to scan your original and save it as PDF on your PC. A Copying Copie Kopieren Kopiëren Copia Copia A Flip the feeder guard, and then slide out the paper support and the output tray.

@@@ Align the original with the front right corner of the glass. @@@@ OO Hold down y and press one of the x buttons to make 20 copies. QQ QQ C Open the scanner unit and press y. The print head moves. @@@@ Press y repeatedly until it moves to the replacement position.

@@ Wait until the light stops flashing. @@@@ Squeeze the tab on the ink cartridge and lift it out. E G QQ You do not need to shake the color ink cartridges.

@@ Insert the new ink cartridge and press it down firmly. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Be sure your AC power cord meets the relevant local safety standard. @@(b) Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity. (a) A Print a nozzle check pattern to check if the print head nozzles are clogged. Turn off the printer, and then turn it back on while holding down y.

If you notice any missing segments or broken lines as shown in (b), go to step B. @@@@ Keep this product at least 22 cm away from cardiac pacemakers.

@@@ If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. @@ Always keep this guide handy. B Do not let the power cord become damaged or frayed. Keep ink cartridges out of the reach of children. Россия Срок службы: 3 года The contents of this manual and the specifications of this product are subject to change without notice. Run the print head cleaning. Hold down y for 3 seconds until the power light starts flashing. @@@@.



[You're reading an excerpt. Click here to read official EPSON EXPRESSION HOME XP-235 user guide](http://yourpdfguides.com/dref/5835781)
<http://yourpdfguides.com/dref/5835781>