



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION HOME XP-247. You'll find the answers to all your questions on the EPSON EXPRESSION HOME XP-247 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON EXPRESSION HOME XP-247**

**User guide EPSON EXPRESSION HOME XP-247**

**Operating instructions EPSON EXPRESSION HOME XP-247**

**Instructions for use EPSON EXPRESSION HOME XP-247**

**Instruction manual EPSON EXPRESSION HOME XP-247**



[You're reading an excerpt. Click here to read official EPSON EXPRESSION HOME XP-247 user guide](http://yourpdfguides.com/dref/5917376)  
<http://yourpdfguides.com/dref/5917376>

**Manual abstract:**

@@ Using your mobile device, you can print from any location worldwide to your Epson Connect compatible printer. Visit the website for more information.

Not all cartridges are available in all regions. For information on Epson's ink cartridge yields, please visit the website. IOS / Android You can open the User's Guide (PDF) from the shortcut icon, or download the latest versions from the following website. [Eu/pageyield](#) Do not connect a USB cable unless instructed to do so. Sn Visit the website to install Epson iPrint application, start the setup process, and configure network settings. Caution; must be followed carefully to avoid bodily injury. Press this to replace an ink cartridge when an ink cartridge is expended. Turns on when an ink cartridge is expended, invalid, or not installed correctly.

Flashes when an ink cartridge is running low on ink. printing is still possible. Leave an expended or low-ink-level cartridge installed until you have obtained a replacement. Otherwise, the ink remaining in the print head nozzles may dry out. In addition, ink cartridges with a low ink level cannot be used even if they are reinserted into the printer.

Slide the edge guide against the paper, and flip the guard back. Hold down for more than three seconds to make network settings using the WPS button on a wireless router. @@@@ @@@@ Align the original with the front right corner of the glass. @@@@ @@@@ The print head moves. @@@@ Press y repeatedly until it moves to the replacement position.

Never touch the ink cartridges while the print head is moving. Wait until the light stops flashing. @@@@ Squeeze the tab on the ink cartridge and lift it out. G E Insert the new ink cartridge and press it down firmly. @@ QQ You do not need to shake the color ink cartridges. @@ Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Be sure your AC power cord meets the relevant local safety standard. @@ Do not let the power cord become damaged or frayed. @@ QQ If you see missing segments or broken lines in your printouts, try the following solutions.

Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity. Take care not to spill liquid on the product and not to handle the product with wet hands. Keep this product at least 22 cm away from cardiac pacemakers. Radio waves from this product may adversely affect the operation of cardiac pacemakers. Keep ink cartridges out of the reach of children. (a) A (b) Print a nozzle check pattern to check if the print head nozzles are clogged. Turn off the printer, and then turn it back on while holding down y. If you notice any missing segments or broken lines as shown in (b), go to step B. Be careful when you handle used ink cartridges, as there may be some ink around the ink supply port. If ink gets on your skin, wash the area thoroughly with soap and water.

If ink gets into your eyes, flush them immediately with water. @@ If ink gets into your mouth, see a doctor right away. Always keep this guide handy. Com/ Run the print head cleaning. Hold down y for 3 seconds until the power light starts flashing.

@@@@.



[You're reading an excerpt. Click here to read official EPSON EXPRESSION HOME XP-247 user guide](http://yourpdfguides.com/dref/5917376)  
<http://yourpdfguides.com/dref/5917376>