



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION HOME XP-345. You'll find the answers to all your questions on the EPSON EXPRESSION HOME XP-345 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON EXPRESSION HOME XP-345**

**User guide EPSON EXPRESSION HOME XP-345**

**Operating instructions EPSON EXPRESSION HOME XP-345**

**Instructions for use EPSON EXPRESSION HOME XP-345**

**Instruction manual EPSON EXPRESSION HOME XP-345**



[You're reading an excerpt. Click here to read official EPSON EXPRESSION HOME XP-345 user guide](http://yourpdfguides.com/dref/5917387)  
<http://yourpdfguides.com/dref/5917387>

**Manual abstract:**

Do not connect a USB cable unless instructed to do so. Visit the website for more information. Visit the website to start the setup process, install software, and configure network settings. Not all cartridges are available in all regions. For information on Epson's ink cartridge yields, please visit the website. Visit the website to install Epson iPrint application, start the setup process, and configure network settings. You can open the User's Guide (PDF) from the shortcut icon, or download the latest versions from the following website. Caution; must be followed carefully to avoid bodily injury. C\_Final2 A3 size Basic Operations / Opérations courantes / Grundlegende Arbeitsgänge / Basisbewerkingen / Operazioni di base / Funcionamiento básico Guide to Control Panel Guide du panneau de contrôle Erklärung des Bedienfelds Uitleg bij bedieningspaneel Guida al pannello di controllo Guía del panel de control XP-440 Series Starts the operation you selected. Stops the ongoing operation or initialize the current settings.

For XP-340 Series, this also allows you to return to the previous screen. Icons showing the network status are displayed at the top-right of the LCD screen. B Copying Copie Kopieren Kopiëren Copia Copia Load paper with the printable side face-up against the right side of the sheet feeder. Press the OK button to enter the selected menu. The LCD D paper setup screen is displayed on printer screen. Select the paper size and paper type you loaded in the L'écran de définition du papier est affiché sur l'écran LCD. Open the document cover and place your original face-down on the scanner glass. Align the original with the front right corner of the glass. B QQ Do not load paper above H mark inside the edge guide.

Open the scanner unit and press OK. Insert the new ink cartridge and press it down firmly. F Never touch the ink cartridges while the print head is moving. D H QQ You do not need to shake the color ink cartridges. Squeeze the tab on the ink cartridge and lift it out.

Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Keep ink cartridges out of the reach of children. If ink gets into your eyes, flush them immediately with water. If ink gets into your mouth, see a doctor right away.

(a) A (b) Print a nozzle check pattern to check if the print head nozzles are clogged. select Setup > Maintenance > Nozzle Check. If you notice any missing segments or broken lines as shown in (b), go to step B. Be sure your AC power cord meets the relevant local safety standard. Take care not to spill liquid on the product and not to handle the product with wet hands. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Keep this product at least 22 cm away from cardiac pacemakers. Radio waves from this product may adversely affect the operation of cardiac pacemakers. B Follow the on-screen instructions to perform head cleaning. The cleaning uses some ink from all cartridges, so run the cleaning only if print quality declines on your prints.

Do not let the power cord become damaged or frayed. Place the printer near a wall outlet where the power cord can be easily unplugged. If the LCD screen is damaged, contact your dealer. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. Always keep this guide handy.

@@.



[You're reading an excerpt. Click here to read official EPSON EXPRESSION HOME XP-345 user guide](http://yourpdfguides.com/dref/5917387)  
<http://yourpdfguides.com/dref/5917387>