



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION HOME XP-435. You'll find the answers to all your questions on the EPSON EXPRESSION HOME XP-435 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON EXPRESSION HOME XP-435**

**User guide EPSON EXPRESSION HOME XP-435**

**Operating instructions EPSON EXPRESSION HOME XP-435**

**Instructions for use EPSON EXPRESSION HOME XP-435**

**Instruction manual EPSON EXPRESSION HOME XP-435**



[You're reading an excerpt. Click here to read official EPSON EXPRESSION HOME XP-435 user guide](http://yourpdfguides.com/dref/5835670)  
<http://yourpdfguides.com/dref/5835670>

**Manual abstract:**

Sn Visit the website to start the setup process, install software, and configure network settings. @@ Visit the website for more information. Not all cartridges are available in all regions. For information on Epson's ink cartridge yields, please visit the website. IOS / Android Do not connect a USB cable unless instructed to do so. Sn Visit the website to install Epson iPrint application, start the setup process, and configure network settings. You can open the User's Guide (PDF) and Network Guide (PDF) from the shortcut icon, or download the latest versions from the following website. Caution; must be followed carefully to avoid bodily injury. Stops the ongoing operation or initialize the current settings. @@@@ Press the OK button to enter the selected menu. The the LCD D paper setup screen is displayed on printer. screen. @@ Open the document cover and place your original face-down on the scanner glass.

Align the original with the front right corner of the glass. B QQ Do not load paper above H mark inside the edge guide.

Flip the feeder guard, and then slide out the paper support and the output tray. Make sure you place the paper against the right side of the sheet feeder. @@D Set the number of copies, and then select Color or B&W. Use u or d to item paper F setting. @@@@ Insert the new ink cartridge and press it down firmly.

@@@@@@@ QQ You do not need to shake the color ink cartridges. B Squeeze the tab on the ink cartridge and lift it out. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Be sure your AC power cord meets the relevant local safety standard. @@@@ Keep ink cartridges out of the reach of children. @@ If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away.

@@ select Setup > Maintenance > Nozzle Check. @@ Follow the on-screen instructions to perform head cleaning. @@@@ Keep this product at least 22 cm away from cardiac pacemakers. Radio waves from this product may adversely affect the operation of cardiac pacemakers. Do not let the power cord become damaged or frayed. Place the printer near a wall outlet where the power cord can be easily unplugged. If the LCD screen is damaged, contact your dealer.

@@ If the liquid crystal solution gets into your eyes, flush them immediately with water. @@ Always keep this guide handy. @@.



[You're reading an excerpt. Click here to read official EPSON  
EXPRESSION HOME XP-435 user guide  
http://yourpdfguides.com/dref/5835670](http://yourpdfguides.com/dref/5835670)