



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION PHOTO XP-55. You'll find the answers to all your questions on the EPSON EXPRESSION PHOTO XP-55 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON EXPRESSION PHOTO XP-55 User guide EPSON EXPRESSION PHOTO XP-55 Operating instructions EPSON EXPRESSION PHOTO XP-55 Instructions for use EPSON EXPRESSION PHOTO XP-55 Instruction manual EPSON EXPRESSION PHOTO XP-55

XP-55

EN Start Here
FR Démarez ici

DE Hier starten
NL Hier beginnen

© 2014 Epson America, Inc.
All rights reserved.
P6666000002

Windows is a registered trademark of Microsoft Corporation.
Mac OS is a trademark of Apple, registered in the US, and other countries.
Android™ is a registered trademark of Google Inc.
Microsoft and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.
The contents of this manual and the specific details of the product are subject to change without notice.

2

Windows

If the Renewal alert appears, allow access for Epson applications.
Si un avertissement relatif au pare-feu s'affiche, autorisez l'accès pour les applications Epson.
Wenn die Firewall-Warnung angezeigt wird, den Zugriff für Epson-Anwendungen erlauben.
Verlenen Epson-toepassingen toegang alleen firewallwaarschuwing wordt weergegeven.

No CD/DVD drive / Mac OS X

→ <http://epson.com>

Visit the website to start the setup process, install software, and configure network settings.
Consultez le site Web pour procéder à la configuration, à l'installation des logiciels et à la définition des paramètres réseau.
Rufen Sie die Website auf, um den Setup zu starten, Software zu installieren und Netzwerkverbindungen zu konfigurieren.
Ga naar de website om het installatieproces te starten, software te installeren en netwerkinstellingen te configureren.

iOS / Android

→ <http://ipr.to/a>

Visit the website to install Epson iPrint application, start the setup process, and configure network settings.
Consultez le site Web pour procéder à l'installation de l'application Epson iPrint, à la configuration et à la définition des paramètres réseau.
Rufen Sie die Website auf, um die Anwendung Epson iPrint zu installieren, den Setup zu starten und Netzwerkverbindungen zu konfigurieren.
Ga naar de website om Epson iPrint te installeren, het installatieproces te starten en netwerkinstellingen te configureren.

Epson Connect

→ <https://www.epsonconnect.com/>

Using your mobile device, you can print from any location worldwide to your Epson Connect compatible product. Visit the website for more information.
À l'aide de votre appareil mobile, vous pouvez imprimer depuis n'importe où dans le monde sur votre appareil compatible Epson Connect. Consultez le site Web pour plus d'informations.
Mit einem mobilen Gerät können Sie von jedem Standort weltweit auf ein Epson Connect-kompatibles Gerät drucken. Weitere Informationen finden Sie auf der Website.
Met uw mobiele telefoon of tablet u waar te wereldwijd kunt drukken op uw met Epson Connect compatibele apparaat. Ga naar de website voor meer informatie.

Questions?

You can open the User's Guide (PDF) and Network Guide (PDF) from the start button icon, or download the latest versions from the following website.
Vous pouvez ouvrir le Guide d'utilisation (le fichier PDF) et le Guide réseau (le fichier PDF) depuis l'icône de raccourci ou télécharger les versions les plus récentes à partir du site Web suivant.
Sie können das Benutzerhandbuch (PDF) und das Netzwerkhandbuch (PDF) über die Verknüpfung öffnen oder die aktuellsten Versionen von der angegebenen Website herunterladen.
U kunt de Gebruikershandleiding (PDF) en Netwerkhandleiding (PDF) openen via het pictogram of de laatste versie downloaden van de volgende website.

→ <http://www.epson.eu/Support>

Basic Operations / Opérations de base / Standardbediening / Standaardgebruik

Guide to Control Panel / Guide du panneau de contrôle / Erklärung des Bedienfelds / Uitleg bij bedieningspaneel

Green light (left) turns on while the printer is connected to a wireless (Wi-Fi) network.
Yellow light (right) turns on while the printer is connected to a wired network.
Le voyant vert (à gauche) s'allume lorsque l'imprimante est connectée à un réseau sans fil (Wi-Fi).
Le voyant jaune (à droite) s'allume lorsque l'imprimante est connectée à un réseau câblé.
Die grüne Lampe (links) leuchtet, solange das Gerät mit einem drahtlosen Netzwerk (Wi-Fi) verbunden ist.
Die gelbe Lampe (rechts) leuchtet, solange das Gerät mit einem kabelgebundenen Netzwerk verbunden ist.
Het groene lampje (links) brandt wanneer de printer verbinding heeft met een draadloos (Wi-Fi) netwerk.
Het gele lampje (rechts) brandt wanneer de printer verbinding heeft met een vast netwerk.

Turns the printer on or off.
Appuie sur la touche d'alimentation pour ouvrir ou fermer l'imprimante.
Schalten den Drucker ein oder aus.
Printer aan- / uitzetten.

Hold this button down for more than three seconds to perform Wi-Fi auto setup (WPS/NPS). When a network error occurs, pressing this button cancels the error. See the Network Guide for more details.
Maintenez cette touche enfoncée pendant plus de trois secondes pour procéder à la configuration Wi-Fi automatique (WPS/NPS). En cas de erreur réseau, appuyez sur cette touche pour effacer l'erreur. Reportez-vous au Guide réseau pour plus de détails.
Halten Sie diese Taste länger als 3 Sekunden gedrückt, um den automatischen Wi-Fi-Setup durchzuführen (WPS/NPS). Bei einem Netzwerkfehler kann der Fehler mit dieser Taste gelöscht werden. Ausführliche Informationen finden Sie im Netzwerkhandbuch.
Druk knop langer dan drie seconden ingedrukt houden om Wi-Fi automatisch in te stellen (WPS/NPS). Wanneer een netwerkfout optreedt, annuleert u de fout met een druk op deze knop. Zie de Netwerkhandleiding voor meer informatie.

Press this button to stop printing and eject the paper or CD/DVD.
Appuyez sur cette touche pour arrêter l'impression et éjecter le papier ou le CD/DVD.
Drücken Sie diese Taste, um den Druck zu stoppen und das Papier oder die CD/DVD auszuwerfen.
Op deze knop drukken om het afdrukken te stoppen en het papier of de cd/dvd uit te werpen.

Turn on or flash when an error occurs such as when the output tray is not extended or the printer cover is open.
S'allume ou clignote en cas de erreur (le bac de sortie n'est pas déplié ou le capot de l'imprimante est ouvert, par exemple).
Leucht auf oder blinkt, wenn ein Fehler auftritt, z. B. wenn das Ausgabefach nicht ausgezogen oder die Druckabdeckung offen ist.
Bij een fout knippert of gaat de lamp knippen, bijvoorbeeld wanneer de uitvoertray is uitgeklapt of de papierbak open is.

See the online User's Guide for additional functions you can perform with different combinations of buttons.
Reportez-vous au Guide d'utilisation en ligne pour plus de détails concernant les autres fonctions que vous pouvez effectuer en associant les touches.
Weitere Funktionen, die mit verschiedenen Tastenkombinationen verfügbar sind, finden Sie im online Benutzerhandbuch.
Zie de online Gebruikershandleiding voor meer functies die u kunt uitvoeren met verschillende combinaties van knoppen.



You're reading an excerpt. Click here to read official EPSON EXPRESSION PHOTO XP-55 user guide <http://yourpdfguides.com/dref/5754872>

Manual abstract:

The contents of this manual and the specifications of this product are subject to change without notice. no CD/DVD drive / Mac OS X <http://epson>. Sn Visit the website to start the setup process, install software, and configure network settings. You can open the User's Guide (PDF) and Network Guide (PDF) from the shortcut icon, or download the latest versions from the following website. @@The PIN code for PIN Code Setup (WPS) is also printed. Press this button to load paper or CD/DVD. Turns on or flashes when paper is out or a paper jam occurs. @@Hold this button down for three seconds to run print head cleaning. @@Press this button to stop printing and eject the paper or CD/DVD. Turns on or flashes when an error occurs such as when the output tray is not extended or the printer cover is open.

See the online User's Guide for additional functions you can perform with different combinations of buttons. To/a Green light (left) turns on while the printer is connected to a wireless (Wi-Fi) network. Yellow light (right) turns on while the printer is connected to a wired network. Hold this button down for more than three seconds to perform Wi-Fi auto setup (AOSS/WPS) . When a network error occurs, pressing this button cancels the error.

See the Network Guide for more details. Visit the website to install Epson iPrint application, start the setup process, and configure network settings. Do not open the ink cartridge package until you are ready to install it in the product. The cartridge is vacuum packed to maintain its reliability. Com/ Do not connect a USB cable unless instructed to do so.

Using your mobile device, you can print from any location worldwide to your Epson Connect compatible product. Visit the website for more information. Loading paper in the paper cassette Chargement de papier dans l'unité papier Einlegen von Papier in die Papierkassette Papier in de papiercassette laden F Completely extend the output tray. @@@@The ink cartridges move to the ink cartridge replacement position. Slide the edge guides to the sides of the paper cassette. B C C Slide the edge guide to adjust to the paper size you will use. Send the print data from the computer. Make sure you select the rear paper feed slot as the paper source. @@@@Open the printer cover and press the H button. Remove new ink cartridge from its package, and then remove the cap.

@@@E Open the rear paper feed slot cover and raise the paper support. Slide the edge guides to the edges of the paper. @@@@It is finished, the P light stops flashing and Ink charging starts. Details of the error are displayed on the computer screen. @@@@The printer cover is open. @@You are ready to print from the rear paper feed slot. 2-sided printing is not available for the paper size you loaded. You are ready to insert the CD/DVD tray. The CD/DVD tray is not inserted correctly. Load paper in the paper cassette 1 or 2, and then press the button.

Holding down the H button the printer. When the P B While on, release the H button. @@Hold down H for three seconds, and light flashes, release H. Pull out the rear cover and carefully remove the jammed paper. Load a single sheet of paper, and then press the button.

Load the correct size of paper, and then press the button. @@Open the rear cover and carefully remove the jammed paper. @@For information on Epson's ink cartridge yields, please visit the website. Paper is not loaded correctly in the rear paper feed slot or a paper jam has occurred. Eu/pageyield Light/Voyant/Lampe/Lampje Situation/Problème/Situation/Toestand Paper is ejected, as the paper is too far inside the rear paper feed slot.

The paper size you loaded differs from the paper size selected in the print settings. An ink cartridge is expended or there is insufficient ink in the cartridge to charge the ink. An ink cartridge has not been recognized, even when you install a new ink cartridge. You can print until the H light turns on.

Solution/Solution/Lösung/Oplossing Load paper correctly in the rear paper feed slot, and then press the button. Load the CD/DVD correctly, and then press the button. Solution/Solution/Lösung/Oplossing Note the following and set up the Wi-Fi network again. o Set the Wi-Fi access point to Wi-Fi setup mode. @@@@Wait for a while, and then try again. @@If the error is not cleared, contact Epson support.

Follow the steps below to try to update the firmware again. 1. Connect the computer and the printer with a USB cable. 2. Visit your local Epson website to download the latest firmware and start installing. See the instructions on the download page for more details. Remove the jammed paper, and then press the button. Load the correct size of paper in the printer, and then press the button. Replace with a new ink cartridge. A security error has occurred when connecting to a Wi-Fi network.

The firmware update failed (recovery mode). Prepare a new ink cartridge. You can check the ink levels from the computer. .



[You're reading an excerpt. Click here to read official EPSON EXPRESSION PHOTO XP-55 user guide](http://yourpdfguides.com/dref/5754872)
<http://yourpdfguides.com/dref/5754872>