



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION PREMIUM XP-540. You'll find the answers to all your questions on the EPSON EXPRESSION PREMIUM XP-540 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON EXPRESSION PREMIUM XP-540

User guide EPSON EXPRESSION PREMIUM XP-540

Operating instructions EPSON EXPRESSION PREMIUM XP-540

Instructions for use EPSON EXPRESSION PREMIUM XP-540

Instruction manual EPSON EXPRESSION PREMIUM XP-540



[You're reading an excerpt. Click here to read official EPSON EXPRESSION PREMIUM XP-540 user guide](http://yourpdfguides.com/dref/5917514)

<http://yourpdfguides.com/dref/5917514>

Manual abstract:

The cartridge is vacuum packed to maintain its reliability. **QQ** Do not connect a USB cable unless instructed to do so. If the Firewall alert appears, allow access for Epson applications. Using your mobile device, you can print from any location worldwide to your Epson Connect compatible printer. Visit the website for more information. Not all cartridges are available in all regions. For information on Epson's ink cartridge yields, please visit the website. Ink Cartridge Code in Australia BK You can open the User's Guide (PDF) from the shortcut icon, or download the latest version from the following website.

Caution; must be followed carefully to avoid bodily injury. Press OK to confirm the setting you have selected and go to next screen.

Starts the operation you selected. Stops the ongoing operation or initialize the current settings. Icons that show the network status are displayed at the upper right on the LCD screen. Load paper toward the edge guide with printable side face-down, and check that the paper is not sticking out from the end of the cassette. Printing Photos Impression de photos Drucken von Fotos Foto's afgedruken Stampa di foto Impresión de fotos A F Insert a memory card and enter the Print Photos mode from the home screen.

B Slide the edge guides to the edges of the paper. @@ Open the front cover and pull out the paper cassette. @@C G The paper setup screen is displayed on the LCD screen. Select the paper size and paper type you loaded in the printer. @@Slide the edge guides to the sides of the paper cassette.

D H Slide the edge guide to adjust to the paper size you will use. Pull out the output tray. Never touch the ink cartridges while the print head is moving.

@@@@@ Close the scanner unit and follow the on-screen instruction. @@B B Remove the cap from the new cartridge. @@@@ Pull out the paper cassette. B Open the rear cover and carefully remove the jammed paper. Remove the jammed paper from the cassette. @@Use of another cord may cause fire or shock. Do not use the cord with any other equipment.

Be sure your AC power cord meets the relevant local safety standard. Align the edge guides to the edges of the paper. @@@@ @@@@ If the LCD screen is damaged, contact your dealer. @@If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately. Keep ink cartridges out of the reach of children. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Do not let the power cord become damaged or frayed. Place the printer near a wall outlet where the power cord can be easily unplugged. Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity.

Be careful when you handle used ink cartridges, as there may be some ink around the ink supply port. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, see a doctor right away.

Always keep this guide handy. @@@@ @@@@.



**[You're reading an excerpt. Click here to read official EPSON
EXPRESSION PREMIUM XP-540 user guide](http://yourpdfguides.com/dref/5917514)**
<http://yourpdfguides.com/dref/5917514>