



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION PREMIUM XP-635. You'll find the answers to all your questions on the EPSON EXPRESSION PREMIUM XP-635 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON EXPRESSION PREMIUM XP-635

User guide EPSON EXPRESSION PREMIUM XP-635

Operating instructions EPSON EXPRESSION PREMIUM XP-635

Instructions for use EPSON EXPRESSION PREMIUM XP-635

Instruction manual EPSON EXPRESSION PREMIUM XP-635



[You're reading an excerpt. Click here to read official EPSON EXPRESSION PREMIUM XP-635 user guide](http://yourpdfguides.com/dref/5840246)

<http://yourpdfguides.com/dref/5840246>

Manual abstract:

If the Firewall alert appears, allow access for Epson applications. @@@@ Visit the website to start the setup process, install software, and configure network settings. @@ Visit the website for more information. Not all cartridges are available in all regions. @@ Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability. Eu/pageyield iOS / Android Ink Cartridge Code in Australia Do not connect a USB cable unless instructed to do so. Sn Visit the website to install Epson iPrint application, start the setup process, and configure network settings.

Press OK to confirm the setting you have selected and go to next screen. XP-630 Series Stops the ongoing operation or initialize the current settings. C G The paper setup screen is displayed on the LCD screen. Select the paper size and paper type you loaded in the printer. Slide the edge guides to the sides of the paper cassette. @@ Slide the edge guide to adjust to the paper size you will use. E XP-830 Series Pulls out or close the output tray.

You can also scroll the screen by flicking it. When you finished printing, press to close the tray. @@ A Slide the edge guides to the edges of the paper. @@@@ Insert a memory card and enter the Print Photos mode from the home screen. B E B C Press Settings (XP-830) or d (XP-630), and then make the print settings.

Remove the cap from the new cartridge. Insert the ink cartridge diagonally into the cartridge holder and gently push it down until it clicks into place. Open the rear cover and carefully remove the jammed paper. @@ Close the scanner unit and follow the on-screen instruction. @@@@ Pull out the rear cover and carefully remove the jammed paper. @@@@ Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Be sure your AC power cord meets the relevant local safety standard. @@ Keep this product at least 22 cm away from cardiac pacemakers. @@ If the LCD screen is damaged, contact your dealer.

If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately. Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning. @@@@ If ink gets into your eyes, flush them immediately with water. @@ If ink gets into your mouth, spit it out immediately and see a doctor right away. Align the edges of the paper. @@ Except as specifically explained in your documentation, do not attempt to service the printer yourself. Do not let the power cord become damaged or frayed.

Place the printer near a wall outlet where the power cord can be easily unplugged. @@@@ @России Срок службы: 3 года The contents of this manual and the specifications of this product are subject to change without notice. Always keep this guide handy. Keep ink cartridges out of the reach of children. .



[You're reading an excerpt. Click here to read official EPSON
EXPRESSION PREMIUM XP-635 user guide
http://yourpdfguides.com/dref/5840246](http://yourpdfguides.com/dref/5840246)