



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION PREMIUM XP-645. You'll find the answers to all your questions on the EPSON EXPRESSION PREMIUM XP-645 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON EXPRESSION PREMIUM XP-645

User guide EPSON EXPRESSION PREMIUM XP-645

Operating instructions EPSON EXPRESSION PREMIUM XP-645

Instructions for use EPSON EXPRESSION PREMIUM XP-645

Instruction manual EPSON EXPRESSION PREMIUM XP-645



[You're reading an excerpt. Click here to read official EPSON EXPRESSION PREMIUM XP-645 user guide](http://yourpdfguides.com/dref/5917415)
<http://yourpdfguides.com/dref/5917415>

Manual abstract:

The cartridge is vacuum packed to maintain its reliability. **QQ** Do not connect a USB cable unless instructed to do so. If the Firewall alert appears, allow access for Epson applications. Using your mobile device, you can print from any location worldwide to your Epson Connect compatible printer. Visit the website for more information. Not all cartridges are available in all regions. For information on Epson's ink cartridge yields, please visit the website. **Caution;** must be followed carefully to avoid bodily injury. Press OK to confirm the setting you have selected and go to next screen. Stops the ongoing operation or initialize the current settings.

C G The paper setup screen is displayed on the LCD screen. Select the paper size and paper type you loaded in the printer. Slide the edge guides to the sides of the paper cassette. **D QQ** Slide the edge guide to adjust to the paper size you will use. You need to pull out and close the output tray manually. Starts the operation you selected. **A** Load paper toward the edge guide with printable side face-down, and check that the paper is not sticking out from the end of the cassette. **F** Insert a memory card and enter the Print Photos mode from the home screen. **B** Slide the edge guides to the edges of the paper. **@@** Open the front cover and pull out the paper cassette 1 (upper one).

B E B C Press **d**, and then make the print settings. Remove the cap from the new cartridge. Insert the ink cartridge diagonally into the cartridge holder and gently push it down until it clicks into place. Open the rear cover and carefully remove the jammed paper. **@@** Close the scanner unit and follow the on-screen instruction. **@@@@** Pull out the rear cover and carefully remove the jammed paper. **@@@@** Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Be sure your AC power cord meets the relevant local safety standard. **@@** Keep this product at least 22 cm away from cardiac pacemakers.

@@B Remove the jammed paper from the cassette. **C** Align the edges of the paper. **@@@@** Do not let the power cord become damaged or frayed. **@@@@** If the LCD screen is damaged, contact your dealer. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately. Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning. Do not use a telephone to report a gas leak in the vicinity of the leak.

Always keep this guide handy. Keep ink cartridges out of the reach of children. Be careful when you handle used ink cartridges, as there may be some ink around the ink supply port. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water.

If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, see a doctor right away.
@@@@



[You're reading an excerpt. Click here to read official EPSON EXPRESSION PREMIUM XP-645 user guide](http://yourpdfguides.com/dref/5917415)
<http://yourpdfguides.com/dref/5917415>