



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON EXPRESSION PREMIUM XP605. You'll find the answers to all your questions on the EPSON EXPRESSION PREMIUM XP605 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON EXPRESSION PREMIUM XP605
User guide EPSON EXPRESSION PREMIUM XP605
Operating instructions EPSON EXPRESSION PREMIUM XP605
Instructions for use EPSON EXPRESSION PREMIUM XP605
Instruction manual EPSON EXPRESSION PREMIUM XP605

EPSON
EXCEED YOUR VISION

XP-600 Series
XP-700 Series

EN Basic Guide
FR Guide de base
DE Grundlagenhandbuch
NL Basishandleiding
IT Guida di base
ES Guía básica
PT Guia básico



[You're reading an excerpt. Click here to read official EPSON EXPRESSION PREMIUM XP605 user guide](http://yourpdfguides.com/dref/5446601)
<http://yourpdfguides.com/dref/5446601>

Manual abstract:

Removing jammed paper from inside the product. Removing jammed paper from the paper cassette. 5 Into the rear paper feed slot. @@@@See this guide when using this product with a computer, or when using advanced features such as 2 sided copying. To view the PDF manual, you need Adobe Acrobat Reader 5.0 or later, or Adobe Reader. □ Network Guide (HTML): Provides network administrators with information on both the printer driver and network settings. □ Help (on the product display): Provides basic operating and troubleshooting instructions on the product's LCD screen. Select the Help menu on the control panel. Must be Important c must be observed to avoid damage to your equipment.

note contain useful tips and restrictions on product operation. Using Epson Connect Service Using Epson Connect and other companies' services, you can easily print directly from your smartphone, tablet PC or laptop, anytime and practically anywhere even across the globe! For more information about printing and other services, visit the following URL; <https://www.Eu/> (Europe only) You can view the Epson Connect guide by double-clicking the shortcut icon on the desktop. Safety Instructions Read and follow these instructions to ensure safe use of this product. Make sure you keep this guide for future reference.

Also, be sure to follow all warnings and instructions marked on the product. Caution, Important and Note Caution, Important and Note in this manual are indicated as below and have the following meaning. 2 Basic Guide Control Panel Overview □ Be sure your AC power cord meets the relevant local safety standard. □ Never disassemble, modify, or attempt to repair the power cord, plug, printer unit, scanner unit, or options by yourself, except as specifically explained in the product's guides. □ Unplug the product and refer servicing to qualified service personnel under the following conditions: The power cord or plug is damaged; liquid has entered the product; the product has been dropped or the casing damaged; the product does not operate normally or exhibits a distinct change in performance.

Do not adjust controls that are not covered by the operating instructions. @@@@□ Keep this product at least 22 cm away from cardiac pacemakers. @@□ If the LCD screen is damaged, contact your dealer. @@□ If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately. Note: The following provides safety instructions for ink cartridges. & "Replacing Ink Cartridges" on page 15 Control Panel Overview Note: □ Control panel design varies depending on location. □ Although the control panel design and what displayed on the LCD screen such as menu names and option names may differ from your actual product, the method of operation is the same. 3 English □ Use only the power cord supplied with the product and do not use the cord with any other equipment. Use of other cords with this product or the use of the supplied power cord with other equipment may result in fire or electric shock.

□ Take care not to spill liquid on the product and not to handle the product with wet hands. If your product has a touch panel, you can scroll the screen by swiping the LCD screen. Try swiping a bit harder if the touch panel is slow to respond. Menus are displayed depending on the action you perform, such as inserting a memory card. If the menu you want is not displayed, press. To disable automatic menu selection, turn off each item in the Auto Selection Mode menu. setup > Guide Functions > Auto Selection Mode* Press l, u, r, d to select menus. Press OK to confirm the setting you have selected and go to next screen. sets the number of copies and prints. Stops the current operation or initializes the current settings.

* Auto Selection Mode is not available for the XP-600 Series. @@@@Flashes slowly when the product is in sleep mode. stays on while the printer is connected to a network. @@@@That is why the paper type setting is so important. @@The table below lists the settings you should choose for your paper.

@@@@See the PDF User's Guide for more information. For instructions on loading envelopes or a Photo Stickers sheet, see the User's Guide PDF.

Note: When using Legal-size paper, remove the CD/DVD tray, and then extend cassette 2 as shown in the illustration. Note: If the output tray has been ejected, close it before pulling out the paper cassette. D Slide the edge guide to adjust to the paper size you will use.

b Pull out the paper cassette. E Load paper toward the edge guide with printable side face-down, and check that the paper is not sticking out from the end of the cassette. C Slide the edge guides to the sides of the paper cassette. Note: □ Fan and align the edges of the paper before loading. □ For plain paper, do not load paper above the line just arrow mark inside the edge guide. Under the For Epson special media, make sure the number of sheets is less than the limit specified for the media. When you select Cassette 1>Cassette 2 as the Paper Source, load the same size and type of paper in both cassettes. □ 6 Basic Guide Paper and Media Handling G Keep the cassette flat and insert it back into the product carefully and slowly. c Slide the edge guide. Note: □ Leave enough space in front of the product for the paper to be fully ejected.

□ Do not remove or insert the paper cassette while the product is operating. D Load a single sheet of paper with the printable side face-up at the center of the rear paper feed slot, and then set the edge guide. The printable side is often whiter or brighter than the other side. Into the rear paper feed slot Note: □ Rear paper feed slot may not be available for some models. □ Even though you can print on paper with a thickness of 0.05 to 0.6 mm, some hard paper may not be fed correctly even if the thickness is within this range. A Send your print job to the product (from your computer, or by using the control panel). Note: Before sending your print job, you cannot load paper into the rear paper feed slot. 7 English F Slide the edge guides to the edges of the paper.

B Open the rear paper feed slot cover and then pull out the paper support. @@@@ c E Press x. Remove the CD/DVD tray from the product. Note: The paper ejects automatically after a certain period of time. @@@@ note: You can also print on a Blu-ray Disc.

□ A B Press on the control panel, and then select Load CD/DVD. @@@@ □ Memory Stick Micro B C Lower the control panel. @@A Open the cover, and insert one card at a time. @@The following memory cards are supported. @@Note: The cover may not be available depending on the product.

@@ it should not be fully inserted. □ Do not remove the memory card while the light is flashing. The data in the memory card may be lost. @@@@Select the group that contains the image you want to print. Images are sorted by the date they were taken.



[You're reading an excerpt. Click here to read official EPSON EXPRESSION PREMIUM XP605 user guide](http://yourpdfguides.com/dref/5446601)
<http://yourpdfguides.com/dref/5446601>

Close the cover gently. Placing a CD Place the CD in the center. You can preview the copy results before you start copying.
change the 2-sided or layout settings as necessary. Press x to start copying.

Copying Printing Photos Follow the steps below to copy documents. A B C D E F Load paper in the cassette 2. Enter Print Photos mode from the Home menu. Note: You can crop and enlarge your photo. Pr. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away. If you remove the cartridge from the product for later use or to dispose of it, make sure you put the cap back on the cartridge's ink supply port to prevent ink from drying out or to prevent surrounding areas from getting smeared by ink. Do not push hard or squeeze the ink cartridges, or be careful not to drop them.

Doing so may cause ink leakage. precautions Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic product behavior. Information about non-genuine ink levels may not be displayed.

To maintain optimum print head performance, some ink is consumed from all cartridges not only during printing but also during maintenance operations such as ink cartridge replacement and print head cleaning. Be careful not to let dust or any objects get inside the ink cartridge holder. Anything inside the holder may adversely affect the printing results or result in an inability to print. For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when reinserted.

Do not open the ink cartridge package until you are ready to install it in the product. The cartridge is vacuum packed to maintain its reliability. Install all ink cartridges; otherwise, you cannot print. Open the scanner unit. Note: You do not need to shake the color ink cartridges and the Photo Black ink cartridge. Do not shake cartridges after opening the package, as they may leak. Important: Do not touch the flat white cable connected to the ink cartridge holder. B Remove the ink cartridge from its package and then remove the cap from the bottom of the cartridge. Note: If the ink cartridge holder does not move to the ink cartridge replacement position, follow the instruction below. Home > Setup & give your original correctly.

& "Loading Paper" on page 5 & "Placing Originals" on page 10 Check the paper size settings and the paper type settings. & "Selecting Paper" on page 5
The print head may be clogged. Perform a nozzle check first and then clean the print head. If the error message still appears, contact Epson support (Neem contact op met Epson Support als de foutboodschap nog steeds wordt weergegeven). Para este papel Tipo de papel en la LCD Papel normal Papel normal Epson Ultra Glossy Photo Paper (Papel fotográfico satinado extra) Epson Premium Glossy Photo Paper (Papel fotográfico satinado Premium) Epson Premium Semigloss Photo Paper (Papel fotográfico semibrillo) Epson Glossy Photo Paper (Papel fotográfico satinado) Epson Photo Paper (Papel fotográfico) Epson Photo Quality Ink Jet Paper (Papel especial HQ) Epson Matte Paper-Heavyweight (Papel mate - alto gramaje) Epson Double-Sided Matte Paper (Papel mate - doble cara) Satinado extra Satinado Prem. .



[You're reading an excerpt. Click here to read official EPSON
EXPRESSION PREMIUM XP605 user guide
http://yourpdfguides.com/dref/5446601](http://yourpdfguides.com/dref/5446601)