

Manual abstract:

Cc OO Use the ink bottles that came with your printer. OO Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties. @@K Turn on the printer and wait until P stops flashing. Ink may splatter when the ink tanks are filled or refilled with ink. If ink gets on your clothes or belongings, it may not come off. @@D L Snap off, remove, and then close tightly. Cc Important; must be observed to avoid damage to your equipment. @@Press y for 3 seconds until P starts flashing. Wait until the light turns on.

@@OO Do not open the ink bottle package until you are ready to fill the ink tank. The ink bottle is vacuum packed to maintain its reliability. OO Even if some ink bottles are dented, the quality and quantity of ink are guaranteed, and they can be used safely. Visit the web site to start the setup process, install software, and configure network settings. QQ Do not pull the tubes.

Visit the website to install Epson iPrint application, start the setup process, and configure network settings. CA3 size cc Make sure to hook the tank unit before printing. Do not lay the unit down, or position it higher or lower than the printer. Hold down for 3 seconds or more to make network settings using the WPS push button. While pressing, turn on the product to return the network settings to their defaults.

Press both buttons simultaneously to scan your original and save it as PDF on your PC. C QQ OO To increase the number of monochrome or color copies by up to 20 copies, press the same x button within intervals of one second. OO Hold down y and press one of the x buttons to copy in draft mode. Load paper with the printable side face-up. Com/ Slide the edge guide against the paper, then close the feeder guard. Using your mobile device, you can print from any location worldwide to your Epson Connect compatible printer. Visit the website for more information. If you see missing segments or broken lines in your printouts, try the following solutions. @@@@Align the original with the front right corner of the glass. @@Turn off the printer, and then turn it back on while holding down y.

@@@B Slide the edge guide to the left. Run the print head cleaning. Hold down y for 3 seconds until the power light starts flashing. @@@@No paper is loaded, or multiple sheets were fed at the same time. Load paper in the rear paper feed correctly and press x r or r x. @@@@Load correctly, and then the x buttons. Remove all of the paper inside, including any torn pieces. @@Doing so may cause a malfunction. @@@@Make sure you visually check the ink levels. @@Use of another cord may cause fire or shock.

Do not use the cord with any other equipment. Be sure your AC power cord meets the relevant local safety standard. @@Keep this product at least 22 cm away from cardiac pacemakers. @@@@Ink Bottles / Flacons d'encre / Recipientes para tinta / Garrafas de tinta BK 664 C 664 M 664 Y 664 cc cc Keep the printer level as you transport it. Otherwise, ink may leak.

As you transport the ink bottle, be sure to keep it upright when tightening the cap, and take measures to prevent ink from leaking. Use of genuine Epson ink other than specified could cause damage that is not covered by Epson's warranties. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Do not tilt or shake an ink bottle after removing its seal; this can cause leakage. Do not let the power cord become damaged or frayed.

Be sure to keep the ink bottles upright and do not subject them to impacts or temperature changes. Move you cc After you decline it, remove the tape securing the printorhead. If the notice a in print quality, run a cleaning cycle align print head. Place the printer near a wall outlet where the power cord can be easily unplugged. Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity. @@@@If ink gets into your eyes, flush them immediately with water. @@@@You can open the User's Guide (PDF) and Network Guide (PDF) from the shortcut icon, or download the latest versions from the following website. Россия Срок службы: 3 года The contents of this manual and the specifications of this product are subject to change without notice. .



[You're reading an excerpt. Click here to read official EPSON L365 user guide](http://yourpdfguides.com/dref/5811266)
<http://yourpdfguides.com/dref/5811266>