

Manual abstract:

screen-on the follow and CD the Insert Windows .tubes the pull not Do Q AR . Important; must be observed to avoid damage to your equipment. Windows (No CD/DVD drive) Mac OS X iOS/Android No PC Proceed to the next step (Section 3). O Use the ink bottles that came with your printer. O Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties.

Epson Snap off, remove, and then close tightly. Do not open the ink bottle package until you are ready to fill the ink tank. The ink bottle is vacuum packed to maintain its reliability. Slide the edge guide to the left.

Visit the website to install Epson iPrint application, start the setup process, and configure network settings. Load paper with the printable side face-up. Unplug the power cord when the power light is off. Enter the last dialed number or enter a pause when entering a fax number. Select a language, country and time. Make sure to hook the tank unit before printing. Do not lay the unit down, or position it higher or lower than the printer. When the message of seeing the setup manual is displayed, press OK for 3 seconds. Do not load paper above the arrow mark inside the edge guide. Press OK to confirm your selection or run the selected feature. Using your mobile device, you can print from any location worldwide to your Epson Connect compatible printer. Visit the website for more information. Epson Connect .ink charging start to x press then and ,ink with filled are tanks the that Confirm K W

You can change these settings later. If you do not want to make settings now, close the fax settings screen. Print a nozzle check pattern to check if the print head nozzles are clogged. select Setup > Maintenance > Print Head Nozzle Check. If all lines are printed as shown in (a), the nozzles are not clogged. select Finish. Doing so may cause a malfunction. Select Layout, and then select the appropriate layout. la disposition souhaitée. the instructions the ink levels.

Make sure you visually check the ink levels. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Use of genuine Epson ink other than specified could cause damage that is not covered by Epson's warranties. Except as specifically explained in your documentation, do not attempt to service the printer yourself. cause can this ;seal its removing after bottle ink an shake or tilt not Do leakage. Do not let the power cord become damaged or frayed. Be sure to keep the ink bottles upright and do not subject them to impacts or temperature changes. Pack the printer with protective materials to prevent the ink tank unit from being unhooked. Place the printer near a wall outlet where the power cord can be easily unplugged.

,cap the tightening when upright it keep to sure be ,bottle ink the transport you As .leak may ink ,Otherwise .it transport you as level printer the Keep c and take measures to prevent ink from leaking. Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away. There may be a remote risk of electric shock from lightning. If you notice a decline in print quality, run a cleaning cycle or align the print head.

cardiac of operation the affect adversely may product this from waves Radio .pacemakers cardiac from away cm 22 least at product this Keep pacemakers. Do not use a telephone to report a gas leak in the vicinity of the leak. Always keep this guide handy. *Россиу Сроку службы: 3 года* The contents of this manual and the specifications of this product are subject to change without notice. .



[You're reading an excerpt. Click here to read official EPSON L565 user guide](http://yourpdfguides.com/dref/5811273)

<http://yourpdfguides.com/dref/5811273>