



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON L805. You'll find the answers to all your questions on the EPSON L805 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON L805**

**User guide EPSON L805**

**Operating instructions EPSON L805**

**Instructions for use EPSON L805**

**Instruction manual EPSON L805**



[You're reading an excerpt. Click here to read official EPSON L805 user guide](http://yourpdfguides.com/dref/5848973)

<http://yourpdfguides.com/dref/5848973>

**Manual abstract:**

If ink gets on your clothes or belongings, it may not come off. OO Do not open the ink bottle package until you are ready to fill the ink tank. The ink bottle is vacuum packed to maintain its reliability. OO Even if some ink bottles are dented, the quality and quantity of ink are guaranteed, and they can be used safely.

3 A E Match the ink color with the tank, and then fill with all of the ink. B F 2 Do not connect a USB cable unless instructed to do so. QQ Do not pull the tubes. Repeat C to each ink bottle. g stepsétapes F forF pour chaque flacon d'encre. @@@@OO Use the ink bottles that came with your printer.

OO Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties. Windows (No CD/DVD drive) Mac OS X No PC Proceed to the next step (Section 3). Snap off, remove, and then close tightly. C A3 size K Turn on the printer and wait until P stops flashing.

Cc L Press H for 3 seconds until P starts flashing. Make sure to hook the tank unit before printing. Do not lay the unit down, or position it higher or lower than the printer. Press to return the print head to its home position. When the ink light is off, press and hold for 3 seconds to start initial charging or to clean the head.

Press to resume printing after a paper out error or multiple page feed error. press to cancel printing during a print job. For more details, see the User's Guide. D Slide the edge guide against the paper. Wait until the light turns on. Loading Paper / Chargement du papier / Carga de papel / Colocar papel If you see missing segments or broken lines in your printouts, try the following solutions. Hold down for more than 3 seconds to make network settings using the WPS button on a access point. While pressing, turn on the product to return the network settings to their defaults. QQ Do not load paper above H mark inside the edge guide. Sn Visit the website to start the setup process, install the Epson iPrint application, and configure network settings.

B Slide the edge guide to the left. Print a nozzle check pattern to check if the print head nozzles are clogged. @@@@C Load paper with the printable side face-up. C A3 size B Run the print head cleaning. Hold down H for 3 seconds until P starts flashing. @@@@See steps A to F in section 3 on the front page. The printer cover is open. @@For more details, see the User's Guide. Hold down the button for more than 3 seconds. For more details, see the Network Guide.

@@@@@@@@Doing so may cause a malfunction. @@Make sure you visually check the ink levels. @@Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Be sure your AC power cord meets the relevant local safety standard.

@@Do not let the power cord become damaged or frayed. @@@Take care not to spill liquid on the product and not to handle the product with wet hands. Keep ink bottles and the ink tank unit out of the reach of children and do not drink the ink. Do not tilt or shake an ink bottle after removing its seal; this can cause leakage. Be sure to keep the ink bottles upright and do not subject them to impacts or temperature changes.

If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away. Cc

Pack D the printer with protective materials to prevent the ink tank unit from being unhooked. Use of genuine Epson ink other than specified could cause damage that is not covered by Epson's warranties. Cc Keep the printer level as you transport it. Otherwise, ink may leak. @@@@If the notice a in print quality, run a cleaning cycle align <http://www.Росциу спок службы: 3 года> The contents of this manual and the specifications of this product are subject to change without notice.



[You're reading an excerpt. Click here to read official EPSON L805 user guide](http://yourpdfguides.com/dref/5848973)

<http://yourpdfguides.com/dref/5848973>