




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS CX3810. You'll find the answers to all your questions on the EPSON STYLUS CX3810 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON STYLUS CX3810**  
**User guide EPSON STYLUS CX3810**  
**Operating instructions EPSON STYLUS CX3810**  
**Instructions for use EPSON STYLUS CX3810**  
**Instruction manual EPSON STYLUS CX3810**

### Epson Stylus CX3800 Series

#### Epson Stylus CX3800 Series Parts

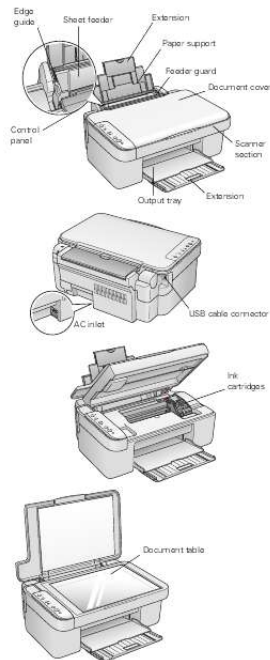

#### Accessories

##### Ink Cartridges

Cartridge	Part number
Black ink	T060320
Cyan	T060320
Magenta	T060320
Yellow	T060430

##### Media

Paper name	Size	Part number
Epson Ultra Premium Glossy Photo Paper	Borderless 4 x 6 inches	S041934
	Letter (8.5 x 11 inches)	S041935
Epson Premium Glossy Photo Paper	Borderless 4 x 6 inches	S041808
	Borderless 5 x 7 inches	S041727
	Borderless 8 x 10 inches	S041464
	Letter (8.5 x 11 inches)	S041336
Epson Premium Semigloss Photo Paper	Letter (8.5 x 11 inches)	S041867
Epson Glossy Photo Paper	4 x 6 inches	S041134
	Letter (8.5 x 11 inches)	S041871
	Letter (8.5 x 11 inches)	S041808
	Letter (8.5 x 11 inches)	S041141
	Letter (8.5 x 11 inches)	S041849
	Letter (8.5 x 11 inches)	S041271
	Letter (8.5 x 11 inches)	S041272
Epson Matte Paper Heavyweight	Borderless 8 x 10 inches	S041467
	Letter (8.5 x 11 inches)	S041257
Epson Double-Sided Matte Paper	Letter (8.5 x 11 inches)	S041568
Epson Premium Bright White Paper	Letter (8.5 x 11 inches)	S041586
Epson Photo Quality Ink Jet Paper	Letter (8.5 x 11 inches)	S041062
	Legal (8.5 x 14 inches)	S041067
	A4 (8.3 x 11.7 inches)	S041061

#### Specifications

##### Printing

Printing method On-demand ink jet

Nozzle configuration

Black 90 nozzles

Color Color: 87 nozzles (29 each cartridge: cyan, magenta, yellow)



[You're reading an excerpt. Click here to read official EPSON STYLUS CX3810 user guide](http://yourpdfguides.com/dref/563580)  
<http://yourpdfguides.com/dref/563580>

**Manual abstract:**

5 x 11 inches) Borderless 4 x 6 inches Borderless 5 x 7 inches Borderless 8 x 10 inches Letter (8.5 x 11 inches) Epson Premium Semigloss Photo Paper Letter (8.5 x 11 inches) 4 x 6 inches Part number S041934 S041935 S041808 S041727 S041464 S041465 S041286 S041667 S041331 S041134 S041671 S041809 S041141 S041649 S041271 S041272 S041467 S041257 S041568 S041586 S041062 S041067 S041061 Output tray Extension Epson Premium Glossy Photo Paper USB cable connector AC inlet Epson Glossy Photo Paper Letter (8.5 x 11 inches) Ink cartridges Epson Matte Paper Heavyweight Epson Double-Sided Matte Paper Epson Premium Bright White Paper Epson Photo Quality Ink Jet Paper Borderless 8 x 10 inches Letter (8.5 x 11 inches) Letter (8.5 x 11 inches) Letter (8.5 x 11 inches) Letter (8.5 x 11 inches) Legal (8.5 x 14 inches) A4 (8.3 x 11.7 inches)

7 inches) Specifications Document table Printing Printing method Nozzle configuration Black Color 90 nozzles Color: 87 nozzles (29 each cartridge: cyan, magenta, yellow) On-demand ink jet 6/05 Epson Stylus CX3800 Series - 1 Epson Stylus CX3800 Series Print direction Input buffer Bidirectional minimum distance printing with logic seeking 64 KB Envelopes Size Ink Cartridges Color Cartridge life Temperature Cyan, magenta, yellow, black 6 months at 77 °F (25 °C) after opening the package Storage: 4 to 104 °F (20 to 40 °C) 1 month at 104 °F (40 °C) Freezing\*: 3.2 °F (16 °C) \*Ink thaws and is usable after approximately 3 hours at 77 °F (25 °C). To ensure good results, use genuine Epson ink cartridges and do not refill them. Other products may cause damage to your printer not covered by Epson's warranty. Do not use an ink cartridge if the date on the package has expired.

Paper type Thickness Weight No. 10 (4.1 x 9.5 inches) DL (4.3 x 8.5 inches)

7 inches) C6 (4.5 x 6.4 inches) 132 x 220 mm Plain bond paper 0.016 to 0.02 inch (0.40 to 0.52 mm) 20 lb (75 g/m<sup>2</sup>) to 24 lb (90 g/m<sup>2</sup>) Note: Poor quality paper may reduce the print quality and cause paper jams or other problems. If you have print quality problems, switch to a higher grade paper. Do not load curled or folded paper. Use paper only under these conditions: Temperature: 59 to 77 °F (15 to 25 °C) Humidity: 40 to 60% RH Printable Area Single sheets or cards Normal Borderless Paper A This section describes the specifications for single sheets and envelopes.

Note: Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, Epson cannot guarantee the quality of any non-Epson brand or type of paper. @@The minimum left margin is 0.12" (3.0 mm). The minimum right margin is 0.12" (3.0 mm). The minimum bottom margin is 0.12" (3.0 mm).

The minimum bottom margin is 0.79" (20 mm) for envelopes. @@Before printing large jobs using the borderless setting, print a single sheet to confirm quality. Paper type Thickness Weight (for plain bond paper) 17 lb (64 g/m<sup>2</sup>) to 24 lb (90 g/m<sup>2</sup>) Note: Always load paper into the sheet feeder with the short edge first. Load envelopes flap edge left with the flap side down.

2 - Epson Stylus CX3800 Series 6/05 Epson Stylus CX3800 Series Scanning Scanner type Photoelectric device Effective pixels Document size Flatbed color image scanner Color CIS line sensor 5,100 x 14,040 pixels at 600 dpi, 100% Letter (8.5 x 11.0 inches) or A4 (8.5 x 11.7 inches); reading area is selectable with software 600 dpi (main), 1200 dpi (sub) 50 to 2400, 7200, and 9600 dpi (50 to 2400 dpi in 1 dpi increments) RGB color filters on CCD 16 bits per pixel per color internal 1 to 8 bits per pixel per color external User defined 2 level RGB Three Color LED USB 2.

0 compatible Bit rate Data encoding Connector Recommended cable length \* Humidity (without condensation) Operation Storage\* 20 to 80% RH 5 to 85% RH Stored in shipping container USB Interface Standard Based on Universal Serial Bus Specifications Revision 2.0, Universal Serial Bus Device Class Definition for Printing Devices version 1.1; Universal Serial Bus Mass Storage class Bulk-Only Transport Revision 1.0 12 Mbps NRZI USB Series B 6.6 feet (2 meters) or less Scanning resolution Output resolution Color separation Image data Gamma correction Light source Interface Safety Approvals Mechanical Paper feed method Paper path Sheet feeder capacity Dimensions Weight Friction Sheet feeder, top feed Noise level Approx. 100 sheets at 17 lb (64 g/m<sup>2</sup>) 16.9 x 13.5 x 6.7 inches (W x D x H) 430 x 344 x 170 mm (W x D x H) Approx. @@@@1.

@@@10 W (ISO 10561 Letter Pattern) Approx. 3 W in sleep mode Approx. 0.2 W in power-off mode Paper support Output tray 2. Flip the feeder guard forward. Then slide the left edge guide to the left. \* Check the label on the back of this product for voltage information. Environmental Temperature Operation Storage\* 50 to 95 °F (10 to 35 °C) 4 to 104 °F (20 to 40 °C) 1 month at 104 °F (40 °C) 6/05 Epson Stylus CX3800 Series - 3 Epson Stylus CX3800 Series 3. Insert the paper, printable side up, against the right edge guide. Always load it short edge first, even for landscape printing.

Letter-size paper 4 x 6, 5 x 7 paper Follow these guidelines when loading paper: Don't load paper above the arrow on the left edge guide. Make sure the paper is under the tabs on the left and right edge guides. Load the printable side face-up. It's often brighter or whiter than the other side. @@ Load letterhead or preprinted paper into the printer top edge first.

If you experience paper feeding problems, try loading fewer sheets. @@@@For example, your photos will look great printed on Epson Premium Glossy Photo Paper. Selecting the Correct Paper Type When printing from your computer, select the Type setting in your printer software according to these guidelines: Select this Type or Media Type setting . . .

Plain Paper / Bright White Paper Matte Paper - Heavyweight For this paper . . . Plain paper Epson Premium Bright White Paper Epson Matte Paper Heavyweight Epson Double-Sided Matte Paper Epson Photo Quality Ink Jet Paper Epson Ultra Premium Glossy Photo Paper Epson Premium Glossy Photo Paper Epson Premium Semigloss Photo Paper Epson Glossy Photo Paper Envelopes 4. Slide the left edge guide against the left edge of the paper (but not too tightly). Ultra Premium Glossy Photo Paper Premium Glossy Photo Paper Premium Semigloss Photo Paper Glossy Photo Paper Envelope 5. Flip the feeder guard back. 4 - Epson Stylus CX3800 Series 6/05 Epson Stylus CX3800 Series @@@@Do not pull out paper that is being printed; it will be ejected automatically to the output tray. Note: The copies may not be exactly the same size as the original. Placing Your Original Document 1.

Open the document cover and place your original facedown on the glass, in the upper left corner.



[You're reading an excerpt. Click here to read official EPSON](http://yourpdfguides.com/dref/563580)

[STYLUS CX3810 user guide](http://yourpdfguides.com/dref/563580)

<http://yourpdfguides.com/dref/563580>

Move your original about 0.04 inch (1 mm) away from the top and left edges so all of it will be scanned. Copying a Photo 1. Make sure the Epson Stylus CX is turned on. 2. Place the photo on the glass as described above. Be sure to close the document cover. 3. @@(See page 3 for instructions.) 4. Press the paper size button to select 4"x 6" or Letter. 2. @@@@ (Otherwise, they are printed with a 0.06-inch [1.5 mm] margin.) 6. To make a color copy, press the x Start Color button. To make a black and white copy, press the x Start B&W button. @@@@ Make sure the Epson Stylus CX is turned on.

2. Place the document on the glass as described above. Be sure to close the document cover. 3. Load letter-size paper. (See page 3 for instructions.) 4. Press the paper size button to select Letter. 5. @@6.

To make a color copy, press the x Start Color button. @@The print quality is reduced, but the copy is printed faster. @@@@1. Turn off the Epson Stylus CX. 2. Load letter-size paper in the sheet feeder. 3. @@The Epson Stylus CX turns on and prints a test pattern. It also shows the percentage of ink left in each cartridge. Error Indicators To diagnose some problems, check the control panel lights and the Copy window for these error conditions: Light: status Cause No paper is loaded in the sheet feeder.

Solution Load paper in the sheet feeder (see pay. You can purchase genuine Epson ink and paper from an authorized Epson reseller. @@To purchase online, visit [www.epsonstore.com](http://www.epsonstore.com) (U.

S. sales only). In Canada, please call (800) 463-7766 for reseller referral. @@Press and release the B ink button. @@@@ To ensure good results, use genuine Epson ink cartridges and do not refill them.

Other products may cause damage to your Epson Stylus CX not covered by Epson's warranty. Note: We recommend that you use genuine Epson cartridges. The use of other products may affect your print quality and could result in printer damage. See [www.epson.com](http://www.epson.com) for more cartridge information. Yields vary considerably based on images printed, print settings, paper type, frequency of use, and temperature. @@Press the B ink button again. @@ If all of the empty or low ink cartridges have been identified, the print head moves to the ink cartridge replacement position. 1.

Make sure the Epson Stylus CX is on. 6/05 Epson Stylus CX3800 Series - 7 Epson Stylus CX3800 Series 5. Open the cartridge cover and squeeze the tab at the back of the empty/low cartridge and lift it straight out. Dispose of it carefully. Do not take the used cartridge apart or try to refill it. 9. Close the ink cartridge cover and press it until it clicks into place. 10. @@If ink gets into your eyes, flush them immediately with water. 6.

@@Then remove it from the package. 11. Press the B ink button. @@This takes about one minute. When it's finished, the P On light stops flashing and remains on,.



[You're reading an excerpt. Click here to read official EPSON  
STYLUS CX3810 user guide  
http://yourpdfguides.com/dref/563580](http://yourpdfguides.com/dref/563580)