



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS OFFICE TX610FW. You'll find the answers to all your questions on the EPSON STYLUS OFFICE TX610FW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON STYLUS OFFICE TX610FW
User guide EPSON STYLUS OFFICE TX610FW
Operating instructions EPSON STYLUS OFFICE TX610FW
Instructions for use EPSON STYLUS OFFICE TX610FW
Instruction manual EPSON STYLUS OFFICE TX610FW

Epson Stylus® Office BX610FW/Office TX610FW/SX610FW Series

EPSON
EXCEED YOUR VISION

EN Basic Operation Guide

- for use without a computer -

FR Guide des opérations de base

- pour l'utilisation sans l'aide d'un ordinateur -

DE Benutzerhandbuch - Grundlagen

- für die Verwendung ohne Computer -

NL Basishandleiding

- voor gebruik zonder computer -



[You're reading an excerpt. Click here to read official EPSON STYLUS OFFICE TX610FW user guide](http://yourpdfguides.com/dref/2339570)
<http://yourpdfguides.com/dref/2339570>

o Leave the expended cartridge installed until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out. O Do not open the ink cartridge package until you are ready to install it in the printer. the cartridge is vacuum packed to maintain its reliability. O Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. O Do not turn off the printer during ink charging as this will waste ink. O When an ink cartridge is expended, you cannot continue printing even if the other cartridges still contain ink.

Never open the cartridge cover while the print head is moving. Be careful not to break the hooks on the side of the ink cartridge. If you find it difficult to close the cover, press down on each cartridge until it clicks into place. If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals. Paper Jam - jammed inside 1 Bourrage papier - papier coincé à l'intérieur 1 Papierstau - Stau innen 1 Papier vastgelopen in apparaat - 1 If paper still remains near the rear feeder, gently pull it out. @@Make sure you open the ADF cover before removing jammed paper. If you do not open the cover, the printer may be damaged. Try the following solutions in order from the Top. For further information, see your online User's Guide. Problems You see banding (light lines) in your printouts or copies.

You see incorrect or missing colors. the image size or position is incorrect. @@@@For further information, see your online User's Guide. Use up ink cartridge within six months of opening vacuum package. R & 82 Try to use genuine Epson ink cartridges and paper recommended by Epson. If a moiré (cross-hatch) pattern appears on your copy, change the Reduce/Enlarge setting or shift the position of your original. Make sure you selected the correct Paper Size, Layout, Expansion, and Reduce/Enlarge setting for the loaded paper. R & 35, 50 Make sure you loaded paper and placed the original correctly. R & 20, 24 If the edges of the copy or photo are cropped off, move the original slightly away from the corner. R & 37, 53 Controleer of het papier correct is gela.



[You're reading an excerpt. Click here to read official EPSON
STYLUS OFFICE TX610FW user guide
http://yourpdfguides.com/dref/2339570](http://yourpdfguides.com/dref/2339570)