



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS PHOTO 790. You'll find the answers to all your questions on the EPSON STYLUS PHOTO 790 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON STYLUS PHOTO 790**


**User guide EPSON STYLUS PHOTO 790**

**Operating instructions EPSON STYLUS PHOTO 790**

**Instructions for use EPSON STYLUS PHOTO 790**

**Instruction manual EPSON STYLUS PHOTO 790**

EPSON STYLUS™ PHOTO 790

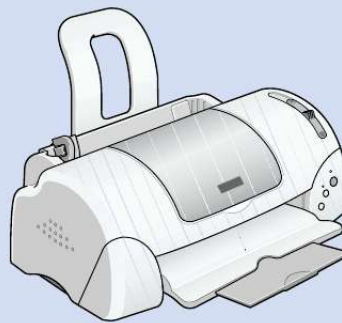

*Daily Use Guide*

EPSON®

4013111-00  
XXX



[You're reading an excerpt. Click here to read official EPSON STYLUS PHOTO 790 user guide](http://yourpdfguides.com/dref/553289)  
<http://yourpdfguides.com/dref/553289>

**Manual abstract:**

.....  
.....  
.....  
... 2 Safety Instructions .....

.....  
.....  
.....  
... 4 Important Safety Instructions .....

.....  
.....  
.....  
4 A Few Precautions .....

.....  
.....  
.....  
..... 5 For United Kingdom Users .....

.....  
.....  
.....  
..... 7 Warnings, Cautions, and Notes .....

.....  
.....  
.....  
8 Loading Paper .....

.....  
.....  
.....  
... 8 Loading Special Paper and Other Media .....

.....  
.....  
.....  
8 Loading Envelopes .....

.....  
.....  
.....  
9 Printing with Windows .....

.....  
.....  
.....  
.. 10 Printer Software Introduction ...

.....  
.....  
.....  
..... 10 Making Changes to Printer Settings ..

.....  
.....  
.....  
..... 11 Printing with Macintosh .

.....  
.....  
.....  
..... 12 Printer Software Introduction .....

.....  
.....  
.....  
. 12 Making Changes to Printer Settings .....

.....  
 .. 12 Replacing Ink Cartridges ...  
 .....  
 .....  
 ..... 13 Using the Printer's Control Panel ....  
 .....  
 .....  
 ..... 13 Troubleshooting .  
 .....  
 .....  
 .....  
 .....  
 . 16 Online Problem Solving .....  
 .....  
 .....  
 .....  
 .. 16 Correcting USB Problems .....  
 .....  
 .....  
 .....  
 .. 16 Maintenance .....  
 .....  
 .....  
 .....  
 ... 19 Options and Consumable Products ..  
 .....  
 ..... 21 Options and Consumable Products .  
 .....  
 .....  
 .....

@@@@@It also contains troubleshooting tips. @@@@It also contains troubleshooting tips. Reference Guide included on the CD-ROM The Reference Guide contained on the CD-ROM included with your printer provides detailed information about printer software settings, printing on special paper, maintenance, and problem solving. 2 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. The information contained herein is designed only for use with this EPSON printer. EPSON is not responsible for any use of this information as applied to other printers. Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION. SEIKO EPSON CORPORATION shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as EPSON Approved Products by SEIKO EPSON CORPORATION. EPSON is a registered trademark and EPSON Stylus is a trademark of SEIKO EPSON CORPORATION. Microsoft and Windows are registered trademarks of Microsoft Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks. Copyright © 2000 by SEIKO EPSON CORPORATION, Nagano, Japan. 3 English Safety Instructions Important Safety Instructions Read all of these instructions before using your printer. Also, be sure to follow all warnings and instructions marked on the printer. Do not block or cover the openings in the printer's cabinet. Do not insert objects through the slots. Take care not to spill liquid on the printer. Use only the type of power source indicated on the printer's label. Connect all equipment to properly grounded power outlets. @@@@ Do not use a damaged or frayed power cord.

If you use an extension cord with the printer, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure that the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating. Do not attempt to service the printer yourself. If you plan to use the printer in Germany, the building installation must be protected by a 10 or 16 amp circuit breaker to provide adequate short-circuit protection and over-current protection for this printer. Unplug the printer and refer servicing to qualified service personnel under the following conditions: 4 A Few Precautions Take note of the following when using the printer, handling the ink cartridges, or choosing a location for the printer.

When using the printer Observe the following: Do not put your hand inside the printer or touch the ink cartridges during printing. Do not move the print head by hand; otherwise, you may damage the printer. Always turn the printer off using the P power button. When this button is pressed, the P power light flashes briefly and then goes out. Do not unplug the printer or turn off the power to the outlet until the P power light stops flashing. Before transporting the printer, make sure that the print head is in the home (far right) position and the ink cartridges are in place. When handling the ink cartridges Observe the following:

*Keep ink cartridges out of the reach of children. Do not allow children to drink from or otherwise handle the cartridges. @@@@ If ink gets into your eyes, flush them immediately with water. @@@@ Do not dismantle the ink cartridges or try to refill them.*

*This could damage the print head. @@ Store ink cartridges in a cool, dark place. Do not touch the green IC chip on the side of the cartridge. This may affect normal operation and printing. In this ink cartridge, the IC chip retains a variety of cartridge related-information, such as the amount of ink remaining, so that a cartridge may be removed and reinserted freely. However, each time the cartridge is inserted, some ink is consumed because the printer automatically performs a reliability check. If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge touches. Do not touch the ink cartridge ink supply port or surrounding area. When choosing a place for the printer Observe the following:*

*Place the printer on a flat, stable surface that extends beyond the printer base in all directions.*

*The printer will not operate properly if it is tilted or at an angle. Leave enough space in front of the printer for paper to be fully ejected. 6 Avoid places subject to rapid changes in temperature and humidity. Also, keep the printer away from direct sunlight, strong light, or heat sources. Avoid places subject to shocks and vibrations.*



[You're reading an excerpt. Click here to read official EPSON](#)

[STYLUS PHOTO 790 user guide](#)

<http://yourpdfguides.com/dref/553289>

Avoid places subject to dust. Leave enough room around the printer to allow for sufficient ventilation. Place the printer near a wall outlet where the plug can be easily unplugged. For United Kingdom Users Use of options EPSON (UK) Limited shall not be liable against any damages or problems arising from the use of any options or consumable products other than those designated as Original EPSON Products or EPSON Approved Products by EPSON (UK) Limited.

Safety information Warning: This appliance must be earthed.

Refer to the rating plate for voltage and check that the appliance voltage corresponds to the supply voltage. Important: The wires in the mains lead fitted to this appliance are coloured in accordance with the following code: Green and yellow -- Earth Blue -- Neutral Brown -- Live If you have to fit a plug: As the colours of the mains lead of this appliance may not match the coloured markings used to identify the terminals in a plug, please proceed as follows: The green and yellow wire must be connected to the terminal in the plug which is marked with the letter E or the earth symbol (G). The blue wire must be connected to the terminal in the plug marked with the letter N. The brown wire must be connected to the terminal in the plug marked with the letter L. If damage occurs to the plug, replace the cord set or consult a qualified electrician. Replace fuses only with a fuse of the correct size and rating. Warnings, Cautions, and Notes contain important information and useful tips on the operation of your printer. Warnings must be followed carefully to avoid bodily injury. The printer utilizes all of its ink can be used. Do not refill the ink cartridges.

Before printing, replace the empty cartridge. 1. Make sure that the printer is on, but not printing. Then, open the printer cover. 2. Press down the ink cartridge replacement button. The print head moves left to the Ink cartridge replacement position. Always press the ink cartridge replacement button to move it. 3. Lift up the ink cartridge clamp as far as it will go.

Take the cartridge out of the printer. If the cartridge is empty, dispose of it properly. Do not take the used cartridge apart or try to refill it. 4. Do not remove the green IC chip from the side of the cartridge.

5. Push the clamps down until they lock firmly into place. 6. Press the ink cartridge replacement button. The printer moves the print head and begins charging the ink delivery system.

This process takes about one minute to complete. When the ink charging process is finished, the printer returns the print head to its home position, the P power light stops flashing and remains on and the error light goes out. Caution: The P power light continues to flash while the printer is charging ink. Never turn off these "Printing with Windows" on page 10, or "Printing with Macintosh" on page 12 For more details about maintaining your printer, see your online Reference Guide. Utility Nozzle Check Problem and Solution The lines, images, or text in your printout contain gaps or are faint. For Windows users, access the printer software and click the Utility tab, then click the Nozzle Check button. For Macintosh users, access the Print or Page Setup dialog box and click the Utility icon button, then click the Nozzle Check button in the Utility dialog box. Follow the on-screen instructions to check the print head nozzles. If any segments are missing or faint in the printed pattern, the print head nozzles may be clogged.

Turn off the printer and restart your PC. Then, reinstall the drivers from the beginning, following the instructions in the Setup Guide. Utility Head Cleaning Problem and Solution The print head nozzle are clogged. Make sure that the printer is on and the error light is off. For Windows users, access the printer software and click the Utility tab, then click the Head Cleaning button. Follow the on-screen instructions to align the print head. Options and Consumable Products The following options and consumable products are available for your printer. Options EPSON supplies the following interface cables for your printer. However, you can use any interface cables that meet these specifications. See your computer manual for any additional requirements. Parallel Interface Cable (shielded) C83602 from D-SUB 25pin (computer) to 36-pin Amphenol 57 Series (printer) USB Interface Cable (shielded) C83623 from Series A4-pin (computer) to series B 4-pin (printer). Note: The asterisk (\*) is a substitute for the last digit of the product number, which varies by location. Depending on your geographic location, this cable may not be supplied. Caution: Use only interface cables which meet the specifications listed above. Using other cables may cause the printer to malfunction.

Options and Consumable Products Consumable products The following ink cartridges and EPSON special media are available for your printer. Ink cartridges You can use the following cartridges with your printer. Ink Cartridge Type Black ink cartridge Standard capacity Light capacity Color ink cartridge Product Number T007 T010 T008 Note: The product numbers of ink cartridges may vary by location. Media types EPSON offers specially-designed media for ink jet printers to meet most high-quality printing needs. To make the Media Type setting in your printer driver, select the Media Type setting that matches the media that is loaded in the printer.

You can find the correspondences on the online Reference Guide. The available media types are listed below. Plain Paper Plain paper Envelopes EPSON Premium Ink Jet Plain Paper (A4) EPSON Bright White Ink Jet Paper (A4) S041214 S041442 22 360 dpi Ink Jet Paper EPSON 360 dpi Ink Jet Paper (A4) S041059 S041025 EPSON 360 dpi Ink Jet Paper (Letter) S041060 S041028 EPSON Iron-On Cool Peel Transfer Paper (A4) S041154 EPSON Iron-On Cool Peel Transfer Paper (Letter) S041153 S041155 Photo Quality Ink Jet Paper S041061 S041026 EPSON Photo Quality Ink Jet Paper (Letter) S041062 S041029 EPSON Photo Quality Ink Jet Paper (Legal) S041067 S041048 EPSON Photo Quality Ink Jet Cards (A6) S041054 EPSON Photo Quality Ink Jet Cards (5 × 8") S041121 EPSON Photo Quality Ink Jet Cards (8 × 10") S041122 EPSON Photo Quality Self Adhesive Sheets (A4) S041106 EPSON Ink Jet Note Cards A6 (with envelopes) S041147 EPSON Ink Jet Greeting Cards 5 × 8" S041148 (with envelopes) EPSON Ink Jet Greeting Cards 8 × 10" S041149 (with envelopes) EPSON Photo Quality Ink Jet Paper (A4) Matte Paper-Heavyweight EPSON Matte Paper-Heavyweight (A4) S041256 S041258 S041259 S041257 EPSON Matte Paper-Heavyweight (Letter) 23 English Photo Paper EPSON Photo Paper (A4) EPSON Photo Paper (Letter) EPSON Photo Paper (4 × 6") EPSON Photo Paper (100 × 150 mm) EPSON Photo Paper (200 × 300 mm) EPSON Panoramic Photo Paper (210 × 594 mm) EPSON Photo Paper Cards (A4) EPSON Photo Paper (4 × 6") (No Perforations) S041140 S041141 S041134 S041255 S041254 S041145 S041177 S041458 Photo Quality Glossy Film EPSON Photo Quality Glossy Film (A4) EPSON Photo Quality Glossy Film (Letter) EPSON Photo Quality Glossy Film (A6) EPSON Photo Stickers 16 (A6) EPSON Photo Stickers 4 (A6) S041071 S041072 S041107 S041144 S041176 Ink Jet Transparencies EPSON Ink Jet Transparencies (A4) EPSON Ink Jet Transparencies (Letter) S041063 S041064 Premium Glossy Photo Paper EPSON Premium Glossy Photo Paper (A4) EPSON Premium Glossy Photo Paper (Letter) Note: The availability of special media varies by location.



[You're reading an excerpt. Click here to read official EPSON  
STYLUS PHOTO 790 user guide  
http://yourpdfguides.com/dref/553289](http://yourpdfguides.com/dref/553289)