



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS PHOTO PX730WD. You'll find the answers to all your questions on the EPSON STYLUS PHOTO PX730WD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON STYLUS PHOTO PX730WD
User guide EPSON STYLUS PHOTO PX730WD
Operating instructions EPSON STYLUS PHOTO PX730WD
Instructions for use EPSON STYLUS PHOTO PX730WD
Instruction manual EPSON STYLUS PHOTO PX730WD

Epson Stylus® Photo PX730WD / Artisan. 730

EN Basic Operation Guide
- for use without a computer -

FR Guide des opérations de base
- pour l'utilisation sans l'aide d'un ordinateur -

DE Benutzerhandbuch - Grundlagen
- für die Verwendung ohne Computer -

NL Basishandleiding
- voor gebruik zonder computer -

EPSON
EXCEED YOUR VISION



[You're reading an excerpt. Click here to read official EPSON STYLUS PHOTO PX730WD user guide](http://yourpdfguides.com/dref/5425724)
<http://yourpdfguides.com/dref/5425724>

Manual abstract:

EPSON is not responsible for any use of this information as applied to other printers. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U. S.) Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation. Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation. EPSON® and EPSON STYLUS® are registered trademarks, and EPSON EXCEED YOUR VISION or EXCEED YOUR VISION and ARTISAN are trademarks of Seiko Epson Corporation. PRINT Image Matching™ and the PRINT Image Matching logo are trademarks of Seiko Epson Corporation. Memory Stick, Memory Stick Duo, Memory Stick PRO, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, Memory Stick Micro, MagicGate Memory Stick, and MagicGate Memory Stick Duo are trademarks of Sony Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. □ Important Safety Instructions Consignes de sécurité importantes Wichtige Sicherheitshinweise Belangrijke veiligheidsvoorschriften Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Place the printer near a wall outlet where the power cord can be easily unplugged. Use only the type of power source indicated on the printer. Make sure the power cord meets all relevant local safety standards. Do not let the power cord become damaged or frayed. Keep the printer away from direct sunlight or strong light. Do not open the scanner unit while copying, printing, or scanning. □ Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Keep ink cartridges out of the reach of children. Do not shake the ink cartridges too vigorously; otherwise ink may leak from the cartridge. □ Do not touch the ink supply port or surrounding area. □ If ink gets into your eyes, flush them immediately with water. □ If ink gets into your mouth, spit it out immediately and see a doctor right away. □ Precautions on the Touchpad Précautions concernant le pavé tactile Vorsichtsmaßnahmen für das Touchpad Voorzorgsmaatregelen voor het touchpad Press the touchpad gently with the tip of your finger. Do not press too hard or tap it with your nails. Do not operate using sharp or pointed objects such as ball point pen, sharp pencil, stylus pen, and so on. The touchpad is a capacitive touch panel that only responds to direct finger touch.

The touchpad may not respond to touch from wet hands, gloved hands, or over the protective sheet or stickers. The light shows the network status. For details, see the online Network Guide. returns to the top menu. When on the top menu, switches between the modes. Changes the view of photos or crops the photos. Q

You can freely adjust the angle of the panel with your hand. F The status indicator light shows the printer status. 11 Using the LCD Screen Utilisation de l'écran LCD Verwenden der LCD-Anzeige Display gebruiken a b c Press u or d to select the menu item. the highlight moves up or down.

D Press l or r to change the photo displayed on the LCD screen. E The PhotoEnhance function automatically corrects color and improves the quality of your images. You can preview the adjusted images by pressing u or d and changing View PhotoEnhance to On. Use Copies + or - to set Press l or r to set the the number of copies for density. @@@@ Images are sorted by the date they were taken.

@@@@@ Press any button to return the screen to its previous state. @@@@ Photo Autocollant 1 photo You can perform 2-sided printing with this paper. Paper with a weight of 64 to 90 g/m². 30 sheets for paper that already has printing on one side. See the table on the right-hand side for the English paper names.

*5 When loading A4-size paper, the loading capacity is 10 sheets. *1 *2 *3 *4 17 Loading Paper Chargement du papier Einlegen von Papier Papier laden Q If the front cover is closed, manually open the cover. A Q Make sure paper is not loaded in the photo tray. Slide to the edges of the paper. 20 Q Do not use paper with binder holes. Q See the online User's Guide when using Legal size paper. Q Do not pull out or insert the paper cassette while the printer is operating. Do not use the loading support sheet that came with the Photo Stickers. 21 Loading a CD/DVD Chargement d'un CD/DVD Einlegen einer CD/DVD Cd/dvd laden c When ejecting/inserting the CD/DVD tray, make sure nothing is placed on the output tray. A B C c The CD/DVD tray cannot be ejected or extended any further.

22 Q If L is not enabled, press display the Home menu. Q The CD/DVD tray closes automatically after a certain period of time. Do not pull the CD/DVD tray.

24 Inserting a Memory Card Insertion d'une carte mémoire Einsetzen einer Speicherkarte Geheugenkaart plaatsen A B c Do not try to force the card all the way into the slot. Removing a memory card Retrait d'une carte mémoire Entfernen einer Speicherkarte Geheugenkaart verwijderen A B Q On Allumé Ein Aan Flashing Clignotant Blinkt Knippert Check the light stays on. Q You can copy one photo or multiple photos of different sizes at the same time, as long as they are larger than 30 × 40 mm. You can print two pages of a book on a single side of one sheet. Select Book/2-up or Book/2-Sided as the layout and place the book as shown on the left. 30 H I R & 36 Q Make sure you set the Paper Size and Paper Type. Select the appropriate copy settings.

K Q When you want to copy double-sided documents using the auto duplexer, set 2-Sided Printing to On in step I. H Q If you scanned two photos, repeat step H for the second photo. @@@@ These items are not displayed when the auto duplexer is removed. @@@@ *8 You can change the color mode of images to B&W. D E F Q To select more photos, repeat steps E and F.

42 Q After step F, you can crop and enlarge your photo. @H Q To select more photos, repeat step H. 46 F Q To select more photos, repeat step F. Q After step F, you can crop and enlarge your photo. Set the printing area and proceed.

@Q To adjust the print position, see "Copying a CD/DVD".



[You're reading an excerpt. Click here to read official EPSON STYLUS PHOTO PX730WD user guide](http://yourpdfguides.com/dref/5425724)
<http://yourpdfguides.com/dref/5425724>

