



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS PHOTO PX830FWD. You'll find the answers to all your questions on the EPSON STYLUS PHOTO PX830FWD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON STYLUS PHOTO PX830FWD
User guide EPSON STYLUS PHOTO PX830FWD
Operating instructions EPSON STYLUS PHOTO PX830FWD
Instructions for use EPSON STYLUS PHOTO PX830FWD
Instruction manual EPSON STYLUS PHOTO PX830FWD


Epson Stylus® Photo PX830FWD/Artisan. 837

EN Basic Operation Guide
- for use without a computer -

FR Guide des opérations de base
- pour l'utilisation sans l'aide d'un ordinateur -

DE Benutzerhandbuch - Grundlagen
- für die Verwendung ohne Computer -

NL Basishandleiding
- voor gebruik zonder computer -



EPSON
EXCEED YOUR VISION



[You're reading an excerpt. Click here to read official EPSON STYLUS PHOTO PX830FWD user guide](http://yourpdfguides.com/dref/5425711)
<http://yourpdfguides.com/dref/5425711>

Manual abstract:

@@@ Must be observed to avoid bodily injury and damage to your equipment. @@@@ Epson is not responsible for any use of this information as applied to other printers. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U. S.) Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation. Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation. @@@@ Epson disclaims any and all rights in those marks. □ Important Safety Instructions Consignes de sécurité importantes Wichtige Sicherheitshinweise Belangrijke veiligheidsvoorschriften Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Place the printer near a wall outlet where the power cord can be easily unplugged.

Use only the type of power source indicated on the printer. Make sure the power cord meets all relevant local safety standards. Do not let the power cord become damaged or frayed. Keep the printer away from direct sunlight or strong light. Do not open the scanner unit while copying, printing, or scanning. □ Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Keep the ink cartridges out of the reach of children. If ink gets on your skin, wash the area thoroughly with soap and water.

If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away. Do not shake the ink cartridges too vigorously; otherwise ink may leak from the cartridge. If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area. □ Do not use the product near water. n'utilisez pas le produit à proximité d'un point d'eau. Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.

Do not use a telephone to report a gas leak in the vicinity of the leak. Always keep this guide handy. Terughalen > Alle instellingen General warning The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services. Telepermitted equipment only may be connected to the EXT telephone port. This port is not specifically designed for 3-wire-connected equipment. 3-wire-connected equipment might not respond to incoming ringing when attached to this port. The automatic calling functions of this equipment must not be used to cause a nuisance to other Telecom customers. 11 Guide to Control Panel Guide du panneau de contrôle Erläuterungen zum Bedienfeld Bedieningspaneel a b [Home] Displays the Home menu.

C [Display/Crop] Changes the view of photos or crops the photos. 12 You can freely adjust the angle of the panel with your hand. The light shows the network status. For details, see the online Network Guide. 13 k Status indicator light shows the printer status.

L OK Activates the settings you have made. m n C [Reset] Initializes settings for each mode. O y [Back] Cancels the current operation and returns to the previous screen. 14 Precautions on the Touch Panel Précautions relatives à l'écran tactile Vorsichtsmaßnahmen für den Touch-Screen Voorzorgsmaatregelen voor het aanraakscherm Press the touch panel gently with the tip of your finger. Do not press too hard or tap it with your nails.

Do not operate using sharp or pointed objects such as ball point pens, sharp pencils, and so on. The cover of the touch panel is made of glass and could break if it receives a heavy impact. Contact Epson support if the glass chips or cracks, and do not touch or attempt to remove the broken glass. 15 Using the LCD Screen Utilisation de l'écran LCD Verwendung der LCD-Anzeige Display gebruiken a Press l or r on either side of the screen to display the next or previous screen/photo. b Press y Cancel to stop copying/printing. C The PhotoEnhance function automatically corrects color and improves the quality of your images. You can preview the adjusted images by touching the screen. 16 Auto Selection Mode displays menus according to your action. D The ADF icon is displayed when a document is placed in the automatic document feeder. Q The actual screen display may differ slightly from those shown in this guide.

Q To disable this function, turn off each item in the Auto Selection Mode menu. 17 e If you have more than 999 images on your memory card, images are automatically divided into groups and the group selection screen is displayed. Select the group that contains the image you want to print. Images are sorted by the date they were taken. To select another group, select Setup on the Home menu, Select Location, and then Select Folder or Select Group. Q After 13 minutes of inactivity, the screen turns black to save energy. Touch the screen to return the screen to its previous state. 18 When Turning Off the Power Mise hors tension de l'imprimante Beim Ausschalten der Stromversorgung Als de voeding wordt uitgeschakeld EN When the power is turned off, the following data stored in the product's temporary memory is erased. O Received fax data O Fax data scheduled to be sent later O Fax data being retransmitted automatically Also, when the power is left off for an extended period of time, the clock may be reset. Check the clock when you turn the power back on.

C Do not put your hand inside the printer until the print head stops moving. Q Restart stops if any control panel buttons are pressed before the LCD turns on. Q Depending on the circumstances before the power failure, it may not restart.



[You're reading an excerpt. Click here to read official EPSON
STYLUS PHOTO PX830FWD user guide
http://yourpdfguides.com/dref/5425711](http://yourpdfguides.com/dref/5425711)

Photo Autocollants photo Autocollant I Epson photo You can perform 2-sided printing with this paper. Paper with a weight of 64 to 90 g/m² for manual 2-sided printing, 30 sheets. See the table on the right-hand side for the English paper names. *5 When loading A4-size paper, the loading capacity is 10 sheets. 23 Loading Paper Chargement du papier Einlegen von Papier Papier laden Q If the front cover is closed, manually open the cover. A Q Make sure paper is not loaded in the photo tray.

L M N O Slide to the edges of the paper. 26 Q Do not use paper with binder holes. Q See the online User's Guide when using Legal size paper. Q Do not pull out or insert the paper cassette while the printer is operating. Do not use the loading support sheet that came with the Photo Stickers. 27 Loading a CD/DVD Chargement d'un CD/DVD Einlegen einer CD/ DVD Cd/dvd laden c When ejecting/inserting the CD/DVD tray, make sure nothing is placed on the output tray. A B C c Do not pull the CD/DVD tray. It cannot be ejected or extended any further. 28 Q If L is not enabled, press display the Home menu. Q The CD/DVD tray closes automatically after a certain period of time.

(Do not pull the CD/DVD tray. 30 Inserting a Memory Card Insertion d'une carte mémoire Einsetzen einer Speicherkarte Geheugenkaart plaatsen A B c Do not try to force the card all the way into the slot. Removing a memory card Retrait d'une carte mémoire Entfernen einer Speicherkarte Geheugenkaart verwijderen A B Q On Allumé Ein Aan Flashing Clignotant Blink Knippert Check the light stays on. 32 Placing Originals Mise en place des originaux Originale einlegen Originelen plaatsen Automatic document feeder (ADF) Chargeur automatique de documents (ADF) Automatischer Dokumenteneinzug (ADF) Automatische documenttoevoer (ADF) Q You can load your original documents in the ADF to copy, scan, or fax multiple pages quickly. @@@@For these types, use the document table. o Documents held together with paper clips, staples, and so on. O Documents that have tape or paper stuck to them. @@@@The print out is cropped if you copy an original larger than A4. @@@@Select the appropriate copy settings. @@42 H Q If you scanned two photos, repeat step H for the second photo.

K L R & 46 Q Make sure you set the Paper Size and Paper Type. Select the appropriate copy settings. D E Q If you print on the colored areas shown on the right (the units are in mm), the disk or CD/DVD tray may be stained with ink. 44 F Q If you want to print a test sample on paper, select Test print on A4 paper. I J Q To adjust print position, select Setup in the Home menu, Printer Setup, then CD/DVD.

Document Type, Quality Dry Time *1 *3 Expansion *4 Copy/Restore Photos Color Restoration Paper and Copy Settings Copy to CD/DVD Copy Layout Wizard Maintenance Problem Solver *1 *2 *3 *4 *5 Paper and Copy Settings R & 122 EN FR DE NL R & 46 R & 47 R & 48 R & 49 With Border, Borderless, 2-up Copy, 2-Sided Copy *1, 2-Sided 2-up *1, Book/2-up, Book/2-Sided *1 These items are not displayed when the Auto Duplexer is removed. This item is enabled only when 2-sided printing or a 2-up layout is selected. If the ink on the front of the paper is smeared, set a longer drying time. Select the aen-tête Kopfzeile erstellen Kopregel voor faxen maken You can create a fax header by adding information such as your phone number or name. Q Make sure you have set the time correctly.

G H I Q Press press to enter a space, and to delete. 77 Q Press the "#" button to enter a pluidges, so clean the print head only if quality declines. 114 F Q Do not open the scanner unit or turn off the printer during head cleaning. G H Q If quality does not improve after cleaning four times, leave the printer on for at least six hours. Then try cleaning the print head again. Repeat G and H for all patterns. Finish aligning the print head. Q Press l or r until the item that you want is displayed. J Q The incorrect time may be displayed especially after a power failure. Connect and turn on the camera.

120 G Compatibility File Format Image size Compatibilité Format de fichiers Taille des images Kompatibilität PictBridge JPEG 80 × 80 pixels to 9200 × 9200 pixels PictBridge JPEG De 80 × 80 pixels à 9200 × 9200 pixels PictBridge JPEG 80 × 80 Pixel bis 9200 × 9200 Pixel PictBridge JPEG 80 × 80 pixels tot 9200 × 9200 pixels See your camera's guide to print. Dateifformat Bildgröße Compatibilititeit Bestandsindeling Afbeeldingsgrootte Q Depending on the settings on this printer and the digital camera, some combinations of paper type, size, and layout may not be supported. Q Some of the settings on your digital camera may not be reflected in the output. Modus EN F Setup Mode Ink Levels Maintenance Printer Setup Nozzle Check, Head Cleaning, Head Alignment CD/DVD, Stickers, Thick Paper *1, Sound *2, Screen Saver, Display Options *3, Date/Time, Daylight Saving Time, Country/Region, Language See your online Network Guide for details. 34 *9, Rings to Answer *10, Dial Tone Detection *11, Header For details on the setting items, see the Print Photos Mode Menu list. R & 63 EN FR DE NL R & 122 R & 123 R & 124 R & 125 Check Fax Connection External Device Setup Print Settings Photo Adjustments Select Location *12 Guide Functions Select Folder, Select Group Paper Size Alert Document Alert Auto Selection Mode *13 Memory Card, Document Cover, Auto Document Feeder Restore Default Settings Fax Send/Receive Settings, Fax Data Settings, Wi-Fi/Network Settings, All except Wi-Fi/Network & Fax Settings, All Settings *1 If the printout is smeared, set this function to On. *2 You can make sound settings for Button Press, Error Notice, Completion Notice, and Volume. *3 You can select the LCD screen display format from 1 photo, 1 photo without Info, and Thumbnail. *4 Indicates whether or not to print a report for the previous transmitted fax. *5 Indicates whether or not to reduce received faxes larger than A4-size to A4, or prints them at their original size on multiple sheets.

@@ Depending on the region, this menu may not be displayed. @@@@ This option may be On or Off depending on the region. @@ Color faxes cannot be sent/received when ECM is off. *9 Indicates the speed at which you transmit and receive faxes. *10 Depending on the region, this setting may not be displayed.

@@@@ in that case, set to Off. @@@@@@ you can resume printing. The message will be displayed until the ink pad is replaced.



[You're reading an excerpt. Click here to read official EPSON
STYLUS PHOTO PX830FWD user guide
http://yourpdfguides.com/dref/5425711](http://yourpdfguides.com/dref/5425711)

Contact Epson support to replace ink pads before the end of their service life. When the ink pads are saturated, the printer stops and Epson support is required to continue printing.

Make sure the phone cable is connected correctly and the phone line works. R & 68 If you connected the product to a PBX (Private Branch Exchange) phone line or Terminal Adapter, turn off the Dial Tone Detection. You will need to re-attempt the firmware update. Ready a USB cable and visit your local Epson website for further instructions. cannot recognize photos. Make sure photos are placed correctly on the glass. a printer error has occurred. Turn power off and then on again. For details, see your documentation. communication error.

Make sure the computer is connected, then try again. A printer's ink pad is nearing the end of its service life. please contact Epson support. EN FR DE NL R & 128 R & 129 R & 130 R & 131 A printer's ink pad is at the end of its service life. The combination of IP address and subnet mask is invalid. Recovery Mode 131 Replacing Ink Cartridges Remplacement des cartouches d'encre Tintenpatronen austauschen Cartridges vervangen c Ink Cartridge Handling Precautions O Never move the print head by hand. O For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when reinserted. o Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink.

The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed. O Do not leave the printer with the ink cartridges removed. Otherwise, ink remaining in the print head nozzles will dry out and you may not be able to print. O Do not open the ink cartridge package until you are ready to install it in the printer.

The cartridge is vacuum packed to maintain its reliability. O Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. D E c Be careful not to break the hooks on the side of the ink cartridge. Q If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals. Q To replace an ink cartridge before it is expended, follow the instructions from step C with the printer turned on.

Paper out or paper jam in the main tray, or the paper size is incorrect. Check the paper size settings or clear the jam and press x. Paper jam in the automatic document feeder. Open the parts and remove jammed paper, then close the parts. R & 140 136 A 137 B Q If an error message cannot be cleared, try the following steps. 138 Turn off Mise hors tension Ausschalten Uitzetten C c If you do not open the ADF cover, the printer may be damaged. 139 D Turn off Mise hors tension Ausschalten Uitzetten E c Do not turn off the printer. 140 Printer Error Erreur imprimante Druckerfehler Printerfout Turn off the printer and then make sure that no paper remains in the printer. R & 136 If the protective material is in its original position, remove it and install it as shown on the right. Finally, turn the printer back on.

141 Print Quality/Layout Problems Problèmes de qualité d'impression/ de disposition Qualitäts-/LayoutProbleme Problemen met de afdrukkwaliteit/layout EN Try the following solutions in order from the Top. For further information, see your online User's Guide. solution No. ABDEGI ABDEFH ABCDG E DG JKLMN Problems You see banding (light lines) in your printouts or copies. You see incorrect or missing colors. The image size or position is incorrect. Solutions A B C D E F G H I J K L M Make sure you select the correct paper type. R & 22 Make sure the printable side (the whiter or glossier side) of the paper is facing in the right direction. @@@@See your online User's Guide to align the print head. @@For further information, see your online User's Guide.

@@R & 132 Try to use genuine Epson ink cartridges and paper recommended by Epson. If a moiré (cross-hatch) pattern appears on your copy, change the Reduce/Enlarge setting or shift the position of your original. Make sure you selected the correct Paper Size, Layout, Expansion, and Reduce/Enlarge setting for the loaded paper. R & 46, 63 Make sure you loaded paper and placed the original correctly. @@@@Quality problems (sending) Quality problems (receiving) Answering machine cannot answer to voice calls Incorrect time Solutions A B C D E F G H I J K Make sure the phone cable you are using is correct for the product.

See the fax specifications in the Appendix of the online User's Guide. Make sure the phone cable is connected correctly and check that the phone line works. You can check the line status by using the Check Fax Connection function. R & 68 If you connected the product to a DSL phone line, you must install a DSL filter on the line otherwise you cannot fax. Contact your DSL provider for the necessary filter.

If you connected this product to a PBX (Private Branch Exchange) phone line or Terminal Adapter, turn off Dial Tone Detection. R & 122 Make sure that the recipient's fax machine is turned on and working. If this product is not connected to a phone and you want to receive faxes automatically, make sure you turn on auto answer. If the fax you sent was faint or not clear, change the Resolution or Contrast in the fax settings menu. R & 122 Make sure that ECM is turned on. R & 122 When auto answer is turned on and an answering machine is connected to the same phone line as this product, set the number of rings to answer for receiving faxes to a higher number than the number of rings for the answering machine. R & 88 The clock may run fast/slow or may be reset after a power failure, or the power is left off for a long time. R & 118 L 149 Other Problems Autres problèmes Sonstige Probleme Overige problemen In some cases, such as when the scanner unit is left open for a certain period of time, the printer may stop printing halfway and the paper or CD/DVD may be ejected. If the scanner unit is open, close it. The printer may resume printing, but if it does not, try printing again.

For more information, see the online manuals. If the online manual icon is not displayed, insert the CD and select Epson Online Guides in the installer screen. 150 When you insert a memory card, open the document cover, or load a document in the ADF, the LCD screen may not display the desired menu. In this case, press to display the Home menu.



[You're reading an excerpt. Click here to read official EPSON
STYLUS PHOTO PX830FWD user guide
http://yourpdfguides.com/dref/5425711](http://yourpdfguides.com/dref/5425711)

*You can get the contact information for Epson support for your area in your online User's Guide or warranty card. If it is not listed there, contact the dealer where you purchased your product. Q The dial list data for fax and/or network settings may be stored in the product's memory. due to breakdown or repair of a product , data and/or settings may be lost. Epson shall not be responsible for the loss of any data, for backing up or recovering data and/or settings even during a warranty period. We recommend that you make your own backup data or take notes.
63 back up memory card. 63 cleaning, inside of the printer. 97 fax, rings to answer setting. .*



[You're reading an excerpt. Click here to read official EPSON
STYLUS PHOTO PX830FWD user guide
http://yourpdfguides.com/dref/5425711](http://yourpdfguides.com/dref/5425711)