

Manual abstract:

20 Press for three seconds to make 20 copies. Press both buttons simultaneously to scan your original and save it as a PDF on your PC. For more details, refer to the online User's Guide. Press for three seconds to start head cleaning. @@@@See the table below for details. See "Paper Jam" on the right to clear the jam. @@Load paper in the sheet feeder correctly. @@See "Paper Jam" on the right to clear the jam, and then turn the printer back on. If the error does not clear, contact Epson Support. Waste ink pad in the printer is saturated. Press for three seconds to start cleaning. Wait until head cleaning finishes. @@.



[You're reading an excerpt. Click here to read official EPSON](#)

[STYLUS SX130 user guide](#)

<http://yourpdfguides.com/dref/5425710>