




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS SX235W. You'll find the answers to all your questions on the EPSON STYLUS SX235W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON STYLUS SX235W
User guide EPSON STYLUS SX235W
Operating instructions EPSON STYLUS SX235W
Instructions for use EPSON STYLUS SX235W
Instruction manual EPSON STYLUS SX235W

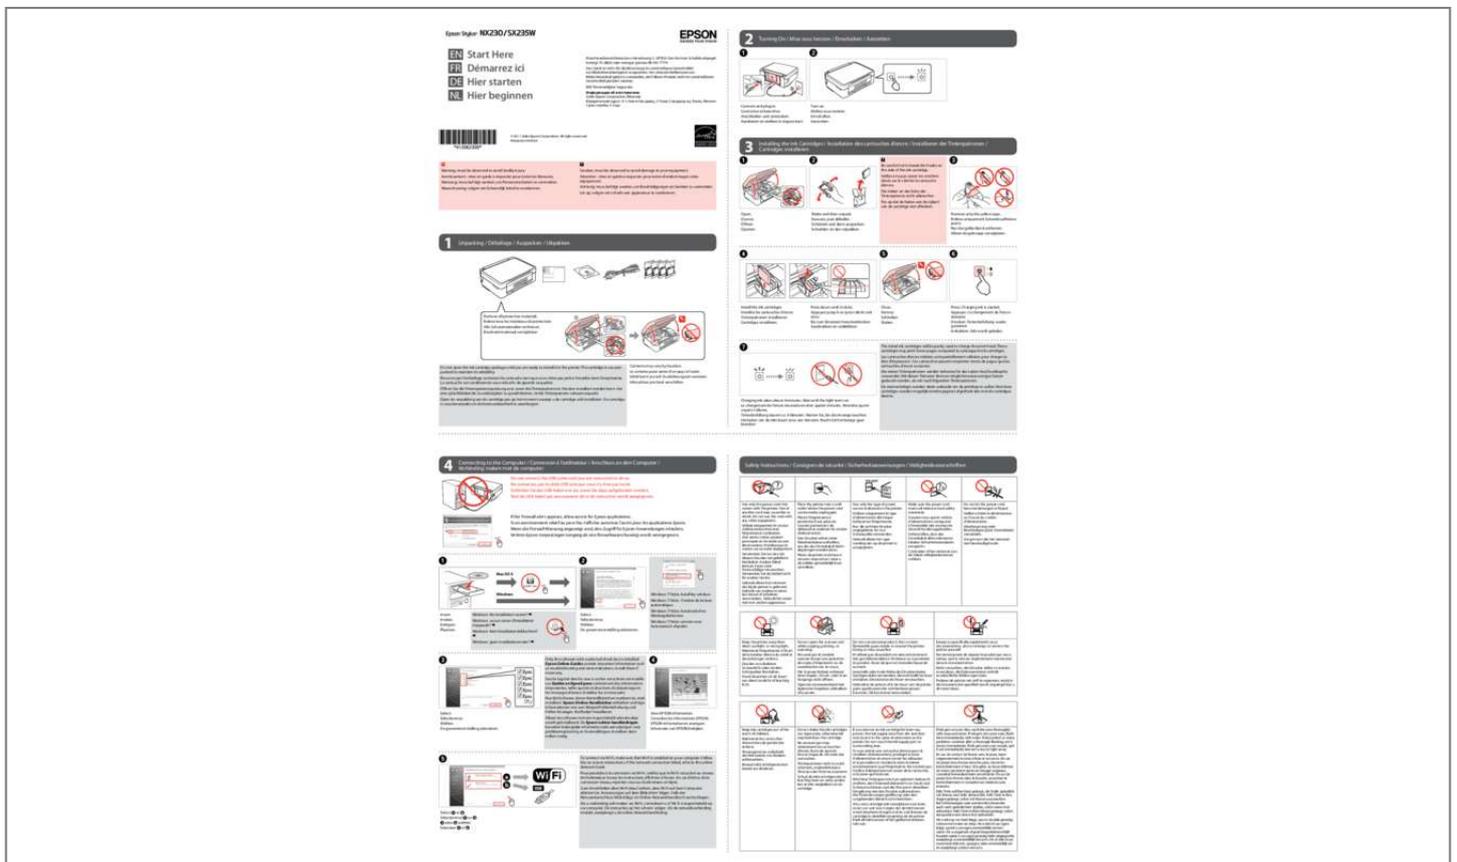

[You're reading an excerpt. Click here to read official EPSON STYLUS SX235W user guide](http://yourpdfguides.com/dref/5425708)
<http://yourpdfguides.com/dref/5425708>

Manual abstract:

@@Shake and then unpack. G◆ Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability. Wait until the light turns on. @@These cartridges may print fewer pages compared to subsequent ink cartridges. 4 Connecting to the Computer / Connexion à l'ordinateur / Anschluss an den Computer / Verbinden met de computer Do not connect the USB cable until you are instructed to do so. Safety Instructions / Consignes de sécurité / Sicherheitsanweisungen / Veiligheidsvoorschriften If the Firewall alert appears, allow access for Epson applications. Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment.

Place the printer near a wall outlet where the power cord can be easily unplugged. Use only the type of power source indicated on the printer. Make sure the power cord meets all relevant local safety standards. Do not let the power cord become damaged or frayed. Only the software with a selected check box is installed.

D◆ Keep the printer away from direct sunlight or strong light. Do not open the scanner unit while copying, printing, or scanning. @@Doing so may cause fire. @@@@ follow the on-screen instructions. If the network connection failed, refer to the online Network Guide.

Keep ink cartridges out of the reach of children. @@If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. @@@@Remove the jammed paper from the sheet feeder, load paper correctly, and press x r or r x. No paper is loaded, or multiple sheets were fed at the same time. Load paper in the sheet feeder correctly and press x r or r x. Ink cartridge(s) are running low on ink.

printing is still possible. Prepare new ink cartridge(s) or replace the cartridge(s). Only remove the cartridge when you are ready to replace it. Ink cartridge(s) with a low ink level cannot be used even if they are reinserted into the printer. @@@@Ink cartridge(s) are expended or not installed correctly. install the ink cartridge(s) correctly or replace them. @@Otherwise the ink remaining in the print head nozzles may dry out. @@Open the scanner unit, insert the cartridge(s) and press down until you hear a click, and then close the scanner unit. Turn the printer off and then back on. If this does not clear the error, turn the printer off and check inside the printer for jammed paper or foreign objects.

@@The printer's ink pads are nearing or at the end of their service life. contact Epson Support to replace ink pads. @@An error occurred while establishing the Wi-Fi connection. Press to clear the error and try again. For more details, see the online Network Guide.

@@Shake and then unpack. Wait until the light turns on. .



[You're reading an excerpt. Click here to read official EPSON](#)

[STYLUS SX235W user guide](#)

<http://yourpdfguides.com/dref/5425708>