



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS SX400. You'll find the answers to all your questions on the EPSON STYLUS SX400 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual EPSON STYLUS SX400**  
**User guide EPSON STYLUS SX400**  
**Operating instructions EPSON STYLUS SX400**  
**Instructions for use EPSON STYLUS SX400**  
**Instruction manual EPSON STYLUS SX400**

EPSON STYLUS™ SX200/TX200 Series

**EPSON**  
EXCEED YOUR VISION

**EN** Basic Operation Guide

- for use without a computer -

**FR** Guide des opérations de base


- pour l'utilisation sans l'aide d'un ordinateur -

**DE** Benutzerhandbuch - Grundlagen

- für die Verwendung ohne Computer -

**NL** Basishandleiding

- voor gebruik zonder computer -

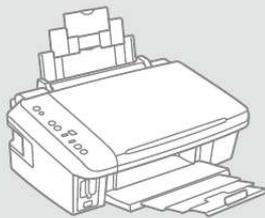

[You're reading an excerpt. Click here to read official EPSON STYLUS SX400 user guide](http://yourpdfguides.com/dref/2340010)  
<http://yourpdfguides.com/dref/2340010>

**Manual abstract:**

Place the printer near a wall outlet where the power cord can be easily unplugged. Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Use only the type of power source indicated on the label. Do not let the power cord become damaged or frayed. Do not open the scanner unit while copying, printing, or scanning. Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire. Except as specifically explained in your documentation, do not attempt to service the printer yourself.

@@@If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. @@The sheet being printed is ejected and the number of copies is reset. press to replace expended ink cartridges. Cleans the print head when pressed and held for three seconds.

The number in the window increases from 1 up to 9, then , and then starts again from 1. Copies in color or starts memory card printing. Selects between [A Plain Paper] and [ " × " Photo Paper] for the paper loaded in the sheet feeder. The printer is active, turning off, or turning on. The printer continues to copy until the paper you loaded runs out.

You can load up to 100 sheets. Flashes when a camera with PictBridge data is connected. When the connected device is not supported, the P and the error light double-flash. The printer enters "sleep" mode when no buttons are pressed for 13 minutes. Follow these guidelines as you read your instructions:

Respectez les directives suivantes lorsque vous lisez les instructions : Befolgen Sie beim Lesen der Anleitung diese Richtlinien: Houd u bij het lezen aan de volgende richtlijnen: Warning: Warnings must be followed carefully to avoid bodily injury. Cautions must be observed to avoid damage to your equipment.

These symbols must be observed to avoid bodily injury and damage to your equipment. Indicates a page number where additional information can be found. If you want to print on this paper. \* Paper with a weight of 64 to 90 g/m<sup>2</sup>.

If you want to print on this paper. See the online User's Guide when using Legal size paper. Do not use paper with binder holes. To fit copies to the paper size, hold down x Start for three seconds. This function depends on the paper type. Select photo paper (g 10x11"x") for borderless or select plain paper (k A) for borders. You can speed up copying, however the print quality declines. In step 5, while pressing y Stop, press x Start. When the P light starts flashing, release the buttons. Do not try to force the card all the way into the slot.

If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck. If you have more than one index sheet, wait each time until printing is complete. Then repeat the steps above to scan and print from each additional sheet. Depending on the settings on this printer and the digital camera, some combinations of paper type, size, and layout may not be supported. Some of the settings on your digital camera may not be reflected in the output.

Make sure the printer is on and the B light is off. If it does not improve after cleaning four times, turn off the printer for at least six hours. Then try cleaning the print head again. If quality does not improve, one of the ink cartridges may need to be replaced. @@@@R & 39 You can check the ink status from your computer.

obtain a replacement ink cartridge. If any cartridge is expended, you cannot print until you replace it. The memory card does not contain any valid images.

@@@The index sheet does not match the photos on the memory card. There is a problem with the printer. Turn the printer off and then back on. If the error does not clear, contact your dealer. O Never move the print head by hand. @@@@Ink cartridges with low ink status may not be used when reinserted.

@@@@@Otherwise the ink remaining in the print head nozzles may dry out.

@@ the cartridge is vacuum packed to maintain its reliability. @@@@When B light is on, one or more ink cartridges are expended. replace the appropriate cartridges. @@Do not lift up the scanner unit when the document cover is open. @@@@Be careful not to break the hooks on the side of the ink cartridge. @@@@Try one or more of the following solutions in order from the top. For further information, see your online User's Guide. R & 28 If quality is not improved, try aligning using the printer driver utility. see your online User's Guide to align the print head. O To clean the inside of the printer, make a copy without placing a document on the document table.

O Use up ink cartridge within six months of opening vacuum package. R & 34 O Try to use genuine Epson ink cartridges and paper recommended by Epson. O Make sure you selected the correct paper setting for the loaded paper. R & 12 O Make sure you loaded paper correctly. r & 14 O Make sure the original is placed correctly.

R & 15 O If the edge of the copy or photo are cropped off, move the original away from the corner slightly. If you cannot solve the problem using the troubleshooting, contact customer support services for assistance. You can find information for customer support for your area in your online User's Guide or warranty card. If it is not listed there, contact the dealer where you purchased your product. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation.

The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U. @@@@Epson disclaims any and all rights in those marks. To read this guide, double-click the icon on your desktop after printer installation. ( ): The ink cartridge numbers between the parenthesis may be displayed depending on the area. .



[You're reading an excerpt. Click here to read official EPSON  
STYLUS SX400 user guide  
http://yourpdfguides.com/dref/2340010](http://yourpdfguides.com/dref/2340010)