



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS SX415. You'll find the answers to all your questions on the EPSON STYLUS SX415 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON STYLUS SX415
User guide EPSON STYLUS SX415
Operating instructions EPSON STYLUS SX415
Instructions for use EPSON STYLUS SX415
Instruction manual EPSON STYLUS SX415

Epson Stylus® **SX410/TX410** Series

EPSON
EXCEED YOUR VISION

EN Basic Operation Guide

- for use without a computer -

FR Guide des opérations de base


- pour l'utilisation sans l'aide d'un ordinateur -

DE Benutzerhandbuch - Grundlagen

- für die Verwendung ohne Computer -

NL Basishandleiding

- voor gebruik zonder computer -

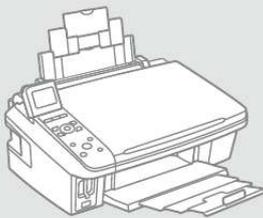

[You're reading an excerpt. Click here to read official EPSON STYLUS SX415 user guide](http://yourpdfguides.com/dref/2382620)
<http://yourpdfguides.com/dref/2382620>

Manual abstract:

Cautions must be observed to avoid damage to your equipment. Must be observed to avoid bodily injury and damage to your equipment. Indicates a page number where additional information can be found. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U. Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation. Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation. Memory Stick, Memory Stick Duo, Memory Stick PRO, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, Memory Stick Micro, MagicGate Memory Stick, and MagicGate Memory Stick Duo are trademarks of Sony Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment.

Make sure the power cord meets all relevant local safety standards. Place the printer near a wall outlet where the power cord can be easily unplugged. Use only the type of power source indicated on the label. Do not let the power cord become damaged or frayed. Do not open the scanner unit while copying, printing, or scanning.

@@Doing so may cause fire. @@@@ If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. @@Do not shake ink cartridges after opening their packages; this can cause leakage. If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Changes the view of photos or crops the photos. Use + or - to set the Press l or r to select the Press u or d to select number of copies for the setting item. After 13 minutes of inactivity, the screen turns black to save energy. Press any button (except P On) to return the screen to its previous state. The actual screen display may differ slightly from those shown in this guide.

You can raise and adjust the angle of the LCD screen for better viewing. If you want to print Choose this Paper on this paper. *1 Paper with a weight of 64 to 90 g/m². *2 30 sheets for paper that already has printing on one side. See the online User's Guide when using Legal size paper. Do not load paper above the H arrow mark inside the edge guide. Do not use paper with binder holes. Do not try to force the card all the way into the slot. If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck. You can reprint photos from 30 × 40 mm to 127 × 178 mm. You can copy photos of different sizes at the same time if they are larger than 30 × 40 mm. Make sure you set the Paper Type and Paper Size. Enter the copy setting menu. Make the appropriate copy settings. You can crop and enlarge your photo.

If you scanned two photos, repeat step G for the second photo. Make sure you set the Paper Type and Paper Size. Print quality may decline in the top and bottom areas of the printout, or the area may be smeared when printing. You can crop and enlarge your photo. To select more photos, repeat steps E and F. Make sure you set the Paper Type and Paper Size. You can print photos using an A4 index sheet. First print an index sheet, mark the photos that you want to print, and then scan the index sheet to print your photos. Check u aligns with the corner of the sheet. Print quality may decline in the top and bottom areas of the printout, or the area may be smeared when printing. *2 Select On to increase the print speed. Select Off to improve the print quality (but your photos print more slowly). On the screen in step C, you can select to replace ink cartridges even if they are not expended. @@@@ @@@@ Then try cleaning the print head again. @@@@ Make sure photos are positioned correctly.

Turn off the printer, then press On button to turn on. @@ contact Epson Support. The printer's ink pads are at the end of their service life. please contact Epson Support. Cannot recognize the memory card or disk. @@Make sure that no paper is still in the printer. if the error message still appears , contact Epson support. Turn the printer off and then back on. if the error message still appears , contact Epson support. @@@@ contact Epson support to replace ink pads.

@@@@O Never move the print head by hand. @@@@Ink cartridges with low ink status may not be used when reinserted. @@@@@@@@@@Otherwise the ink remaining in the print head nozzles may dry out. O Do not open the ink cartridge package until you are ready to install it in the printer. the cartridge is vacuum packed to maintain its reliability.

O Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. O Do not turn off the printer during ink charging as this will waste ink. O When an ink cartridge is expended, you cannot continue printing even if the other cartridges still contain ink. Never open the cartridge cover while the print head is moving. Be careful not to break the hooks on the side of the ink cartridge.

If you find it difficult to close the cover, press down on each cartridge until it clicks into place. If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals. Paper Jam - jammed inside 1 Bourrage papier - papier coincé à l'intérieur 1 Papierstau - Stau innen 1 Papier vastgelopen in apparaat - 1 If paper still remains near the rear feeder, gently pull it out. Paper Jam - jammed inside 2 Bourrage papier - papier coincé à l'intérieur 2 Papierstau - Stau innen 2 Papier vastgelopen in apparaat - 2 If paper still remains near the rear feeder, gently pull it out. Try the following solutions in order from the Top.



[You're reading an excerpt. Click here to read official EPSON](http://yourpdfguides.com/dref/2382620)

[STYLUS SX415 user guide](http://yourpdfguides.com/dref/2382620)

<http://yourpdfguides.com/dref/2382620>

For further information, see your online User's Guide. Problems You see banding (light lines) in your printouts or copies. You see incorrect or missing colors. the image size or position is incorrect. Solutions A B C D E Make sure you select the correct paper type.

Make sure the printable side (the whiter or glossier side) of the paper is facing in the right direction. R & 42 If quality is not improved, try aligning using the printer driver utility. see your online User's Guide to align the print head. To clean the inside of the printer, make a copy without placing a document on the document table. For further information, see your online User's Guide. Use up ink cartridge within six months of opening vacuum package. R & 52 Try to use genuine Epson ink cartridges and paper recommended by Epson. @@@@ @@@@R & 27, 36 Controleer of het papier correct is geladen en het origineel correct geplaatst. If you cannot solve the problem using the troubleshooting information, contact customer support services for assistance. You can get the contact information for customer support for your area in your online User's Guide or warranty card.

*If it is not listed there, contact the dealer where you purchased your product. *2 For the TX410 Series, the ink cartridge numbers between the parenthesis may be displayed depending on the area. .*



[You're reading an excerpt. Click here to read official EPSON](#)

[STYLUS SX415 user guide](#)

<http://yourpdfguides.com/dref/2382620>