



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS SX435W. You'll find the answers to all your questions on the EPSON STYLUS SX435W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON STYLUS SX435W
User guide EPSON STYLUS SX435W
Operating instructions EPSON STYLUS SX435W
Instructions for use EPSON STYLUS SX435W
Instruction manual EPSON STYLUS SX435W

Epson Stylus® **SX230/SX430W/SX435W**


EN Basic Operation Guide
- for use without a computer -

FR Guide des opérations de base
- pour l'utilisation sans l'aide d'un ordinateur -

DE Benutzerhandbuch - Grundlagen
- für die Verwendung ohne Computer -

NL Basishandleiding
- voor gebruik zonder computer -

EPSON
EXCEED YOUR VISION

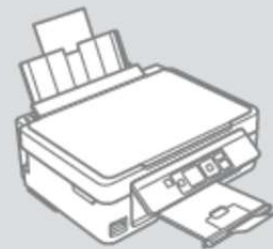

[You're reading an excerpt. Click here to read official EPSON STYLUS SX435W user guide](http://yourpdfguides.com/dref/5193373)
<http://yourpdfguides.com/dref/5193373>

Manual abstract:

6 Adjusting the Angle of the Panel. Caution: c Cautions must be observed to avoid damage to your equipment. Must be observed to avoid bodily injury and damage to your equipment. Note: Q Notes contain important information and hints for using the printer. R & Indicates a page number where additional information can be found. □ Important Safety Instructions Consignes de sécurité importantes Wichtige Sicherheitshinweise Belangrijke veiligheidsvoorschriften Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. @@Use only the type of power source indicated on the printer. Make sure the power cord meets all relevant local safety standards.

Do not let the power cord become damaged or frayed. Keep the printer away from direct sunlight or strong light. Do not open the scanner unit while copying, printing, or scanning. @@Doing so may cause fire. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Keep ink cartridges out of the reach of children. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. @@@@Do not touch the ink supply port or surrounding area.

□ Adjusting the Angle of the Panel Réglage de l'angle du panneau Winkel des Bedienfelds ändern De hoek van het paneel aanpassen Power Saving Function Fonction d'économie d'énergie Energiesparfunktion Energiebesparing To lower or close the panel, unlock by pulling the lever on the rear until it clicks, and then lower down. Simply lift the panel to raise it. After 13 minutes of inactivity, the screen turns black to save energy. Press any button to return the screen to its previous state. For more details, see the online Network Guide. When on the top menu, switches between Copy, Print Photos, Scan, and Setup mode. X Starts the operation you selected. □ Using the LCD Screen Utilisation de l'écran LCD Verwendung der LCDAnzeige Display gebruiken Q The actual screen display may differ slightly from those shown in this guide. B Press l or r to select the copy color mode or to change the photo displayed on the LCD screen. If no other settings are available, l and r are not displayed.

*1 Paper with a weight of 64 to 90 g/m². *2 30 sheets for paper that already has printing on one side. *3 See the table on the right-hand side for the English paper names. 13 Loading Paper Chargement du papier Papier einlegen Papier laden Q When using Legal size paper or envelopes, see the online User's Guide. @@Q You can use A4 paper with two binder holes. @@@@D E F Q To change the settings, press d and go to step G. @@Select the item and change the setting. @@@@D E Q To select more photos, repeat steps D and E. 22 G Q To change the settings, press d and go to step H. If you want to change the number of copies, press y to display the screen in step E, make the changes, and then press x.

H R & 10 I Q When Borderless is selected, the image is slightly enlarged and cropped to fill the paper. Print quality may decline in the top and bottom areas, or the area may be smeared when printing. Select the item and change the setting. 24 Q For SX430W/SX435W users, you can change the computer name on the control panel using Epson Event Manager. For more details, see the software information in the online User's Guide.

Q The following options are available for scanning to a computer. O To PC O To PC (PDF) O To PC (Email) O To PC (WSD) * *Only available for SX430W/ SX435W models and on computers running English versions of Windows 7 or Vista. 28 Q On the screen in step C, you can select to replace ink cartridges even if they are not expended. @@@@Q If an ink cartridge is running low, prepare a new ink cartridge. @@@@@D E Q If you select Yes, go to the next step.

Examine the printed pattern for missing segments. @@@Q Do not turn off the printer during head cleaning. If the head cleaning is incomplete, you may not be able to print. @@Then try cleaning the print head again. @@@@@Make sure that no paper is still in the printer. if the error still appears, contact Epson support. Turn the printer off and then back on. if the error message still appears, contact Epson support. Turn off the printer. @@ r & 45 Paper jam.

Open the scanner unit, remove the jammed paper, and then press x. @@ install them. @@The message will be displayed until the ink pad is replaced. @@@@To establish a wireless connection using an access point, press the push button on the access point or click the button on the access point's wireless settings screen displayed on your computer's screen. R & Online Network Guide You need to enter the PIN code displayed on the printer's panel into the access point or computer within two minutes. If no code is entered during the two minutes, a time-out error occurs and a different code is displayed and needs to be entered. @@Your computer may not support WSD (Web Services for Devices). @@@@@Ink cartridges with low ink status may not be used when reinserted. o Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. @@Information about non-genuine ink levels may not be displayed. O Do not leave the printer with the ink cartridges removed or do not turn off the printer during cartridge replacement. Otherwise, ink remaining in the print head nozzles will dry out and you may not be able to print. O Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.

O Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. O Do not turn off the printer during ink charging. If the ink charging is incomplete, you may not be able to print. O Install all ink cartridges; otherwise, you cannot print. 41 Replacing Ink Cartridges Remplacement des cartouches d'encre Tintenpatronen ersetzen Inktcartridges vervangen Q To replace an ink cartridge before it is expended, select the following menu item and then go to step B.

42 D E c Be careful not to break the hooks on the side of the ink cartridge. G H Q If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals. C Q If paper still remains near the rear feeder, gently pull it out. Q If paper still remains near the rear feeder, gently pull it out. @@For further information, see your online User's Guide. solution No. @@ You see incorrect or missing colors. The image size or position is incorrect. @@@@@See your online User's Guide to align the print head.



[You're reading an excerpt. Click here to read official EPSON](#)

[STYLUS SX435W user guide](#)

<http://yourpdfguides.com/dref/5193373>

To clean the inside of the printer, make a copy without placing a document on the document glass.

For further information, see your online User's Guide. For best results, use up ink cartridge within six months of opening the package. R & 40 Try to use genuine Epson ink cartridges and paper recommended by Epson. If a moiré (cross-hatch) pattern appears on your copy, change the reduce/enlarge setting or shift the position of your original. R & 18, 21 Make sure you loaded paper .



[You're reading an excerpt. Click here to read official EPSON](#)

[STYLUS SX435W user guide](#)

<http://yourpdfguides.com/dref/5193373>