



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON SURECOLOR SC-T7200D. You'll find the answers to all your questions on the EPSON SURECOLOR SC-T7200D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON SURECOLOR SC-T7200D
User guide EPSON SURECOLOR SC-T7200D
Operating instructions EPSON SURECOLOR SC-T7200D
Instructions for use EPSON SURECOLOR SC-T7200D
Instruction manual EPSON SURECOLOR SC-T7200D

<p>EXCEED YOUR VISION</p> <p>SC-T7200 Series SC-T5200 Series SC-T3200 Series SC-T7200D Series SC-T5200D Series</p> <p>EN Setup Guide FR Guide d'installation DE Installationshandbuch NL Installatiehandleiding IT Guida di installazione ES Guía de instalación PT Manual de instalação</p>	<p>SC-T7200 Series/SC-T5200 Series/SC-T3200 Series</p> <p>11</p> <p>EN Assembly FR Assemblage DE Montage NL Montage</p> <p>IT Montaggio ES Montaje PT Montagem</p>
	<p>SC-T7200D Series/SC-T5200D Series</p> <p>21</p> <p>EN Assembly FR Assemblage DE Montage NL Montage</p> <p>IT Montaggio ES Montaje PT Montagem</p>
	<p>34</p> <p>EN Initial Ink Charging FR Chargement initial en encre DE Initiale Tintenfüllung NL Eerste keer inkt bijvullen</p> <p>IT Ricarica di inchiostro iniziale ES Carga inicial de tinta PT Carregamento inicial de Tinta</p>
	<p>38</p> <p>EN Loading Roll Paper FR Chargement de papier rouleau DE Einlegen des Rollenpapiers NL Rolpapier plaatsen</p> <p>IT Caricamento di carta in rotolo ES Cargar rollo de papel PT Colocação do papel em rolo</p>
	<p>44</p> <p>EN Installing the Software FR Installation du logiciel DE Installation der Software NL De software installeren</p> <p>IT Installazione del software ES Instalación del software PT Instalar o Software</p>
	<p>48</p> <p>EN Seeing the Online Guide FR Consultation du guide en ligne DE Ansehen des Online-Führers NL De online handleiding bekijken</p> <p>IT Visualizzazione della guida online ES Consultar la guía online PT Consultar o Guia Online</p>

English / Français / Deutsch / Nederlands / Italiano / Español / Português



[You're reading an excerpt. Click here to read official EPSON SURECOLOR SC-T7200D user guide](http://yourpdfguides.com/dref/5799898)
<http://yourpdfguides.com/dref/5799898>

Manual abstract:

□□ Do not insert objects through the slots. Take care not to spill liquid on the printer. □□ Use only the power cord that comes with the printer. Use of another cord may result in fire or electric shock. □□ Except as specifically explained in your documentation, do not attempt to service the printer yourself. □□ Unplug the printer and refer servicing to qualified service personnel under the following conditions: The power cord or plug is damaged; liquid has entered the printer; the printer has been dropped or the cabinet damaged; the printer does not operate normally or exhibits a distinct change in performance.

@@@ □□ Store ink cartridges in a cool, dark place. □□ If ink gets on your skin, wash it off with soap and water. If ink gets in your eyes, flush them immediately with water. @@@ □□ Do not dismantle the ink cartridges or try to refill them.

This could damage the print head. □□ Do not touch the ink supply port or its surrounding area and the green IC chip on the side of the ink cartridge. Doing so may affect normal operation and printing. Caution Cautions must be followed to avoid bodily injury. Important : Important must be followed to avoid damage to this product.

Note : Notes contain useful or additional information on the operation of this product. An optional Stand (24") is available from Epson; when using the stand, leave a space of at least 600 mm in front of the printer. In addition, more room is required for the front and rear of the printer when printing under specific conditions. For more details, see the User's Guide. □□ Always use the printer installed on its stand with SC-T7200 Series/SC-T5200 Series and SC-T7200D Series/SC-T5200D Series.

If you place the printer unit directly on the floor or a desk, it may affect normal operation or printing. □□ Use only an outlet that meets the power requirements of this printer. □□ Operate the printer under the following conditions: Temperature: 10 to 35°C (50 to 95°F) Humidity: 20 to 80% without condensation Even the conditions above are met, you may not print properly if the environmental conditions are not proper for the paper. See the instructions of the paper for more detailed information. Keep the printer away from drying, direct sunlight, or heat sources to maintain the appropriate humidity. 8 EN Unpacking IT Disimballare FR Déballage ES Desembalaje DE Auspacken PT Desempacotar NL Uitpakken SC-T7200 Series/SC-T5200 Series/SC-T3200 Series 4 10 2 * * * * * 6 A B 2 C The parts enclosed in the dashed border are not supplied with the SC-T3200 series but are included with the optional Stand (24"). 9 English / Français / Deutsch / Nederlands / Italiano / Español / Português EN Unpacking FR Déballage DE Auspacken NL Uitpakken IT Disimballare ES Desembalaje PT Desempacotar SC-T7200D Series/SC-T5200D Series A 4 12 B 10 SC-T7200 Series/SC-T5200 Series/SC-T3200 Series EN Assembly IT Montaggio FR Assemblage ES Montaje DE Montage PT Montagem NL Montage English / Français / Deutsch / Nederlands / Italiano / Español / Português For the assembly method of the SC-T7200D Series/SC-T5200D Series, see page 21 and later.

@@@@ □□ It is recommended to assemble the stand by a group of three. @@@@ □□ Keep the Allen key in a safe place; do not throw it out. @@@@@@ [9] Slowly pull the unit back until it clicks into place.

@@Cuidado: □□ When carrying the printer, use at least 4 persons. @@@@@@ [34] EN Initial Ink Charging FR Chargement initial encre DE Initiale Tintenfüllung NL Eerste keer inkt bijvullen IT Ricarica di inchiostro iniziale ES Carga inicial de tinta PT Carregamento Inicial de Tinta [4] □□ After opening the ink cartridge, be sure to shake it as shown in the figure. □□ Do not touch the IC chip on the cartridge. Doing so may cause incorrect operation or printing. / Observe the following precautions when charging the ink. If these precautions are not observed, the work may be interrupted and require redoing, resulting in more ink being consumed than normal. □□ Do not disconnect the power cable from the outlet or turn off the power. □□ Do not perform operations other than those specified on the screen. 36 EN Initial Ink Charging FR Chargement initial encre DE Initiale Tintenfüllung NL Eerste keer inkt bijvullen IT Ricarica di inchiostro iniziale ES Carga inicial de tinta PT Carregamento Inicial de Tinta The included ink cartridges and installed Maintenance Boxes are just for initial ink charging. You may need to replace the ink cartridge or Maintenance Box soon.

□□ When the optional MFP Scanner has been attached to the printer using the dedicated stand, raise the scanner until you hear a click. If you hear the sound, proceed to Step 13. 40 EN Loading Roll Paper FR Chargement de papier rouleau DE Einlegen des Rollenpapiers NL Rolpapier plaatsen IT Caricamento di carta in rotolo ES Cargar rollo de papel PT Colocação do papel em rolo [13] [14] [15] English / Français / Deutsch / Nederlands / Italiano / Español / Português 41 [16] After loading the media, you will be prompted to confirm the Paper Type option. EN Loading Roll Paper FR Chargement de papier rouleau DE Einlegen des Rollenpapiers NL Rolpapier plaatsen IT Caricamento di carta in rotolo ES Cargar rollo de papel PT Colocação do papel em rolo □□ If you have closed the Paper basket, open it before proceeding. □□ When the optional MFP Scanner has been raised, lower it.

Testafdruk maken Fare una prova di stampa Realización de una impresión de prueba Realizar um Teste de Impressão [2] If you cannot print properly, see "Problem Solver" in the User's Guide to solve the problem. 43 English / Français / Deutsch / Nederlands / Italiano / Español / Português Performing a Test Print [1] EN Installing the Software IT Installazione del software FR Installation du logiciel ES Instalación del software DE Installation der Software PT Instalar o Software NL De software installeren [1] USB Network [1] [3] [2] [2] [3] [4] Follow the on-screen instructions to complete the installation. 44 EN Installing the Software FR Installation du logiciel DE Installation der Software NL De software installeren IT Installazione del software ES Instalación del software PT Instalar o Software Network Do not remove the check mark from Epson Network Utilities in the Software List. Windows If this dialog box appears, make sure the publisher is SEIKO EPSON, and then click Unblock.



[You're reading an excerpt. Click here to read official EPSON SURECOLOR SC-T7200D user guide](http://yourpdfguides.com/dref/5799898)
<http://yourpdfguides.com/dref/5799898>

□□ Do not forget the administrator password.

@@@@@@@After entering a password, press W to exit the menu. Gebruikershandleiding Netwerkhandleiding Supplied Online Guides The following online guides are included on the supplied software CD. To view the guides, click Show in the software CD main menu. The guides can be copied onto your computer desktop for ease of reference. .



[You're reading an excerpt. Click here to read official EPSON SURECOLOR SC-T7200D user guide](http://yourpdfguides.com/dref/5799898)
<http://yourpdfguides.com/dref/5799898>