



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON SX425W. You'll find the answers to all your questions on the EPSON SX425W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON SX425W
User guide EPSON SX425W
Operating instructions EPSON SX425W
Instructions for use EPSON SX425W
Instruction manual EPSON SX425W

Epson Stylus® **SX420W/SX425W/NX420**

EN Basic Operation Guide

- for use without a computer -

FR Guide des opérations de base


- pour l'utilisation sans l'aide d'un ordinateur -

DE Benutzerhandbuch - Grundlagen

- für die Verwendung ohne Computer -

NL Basishandleiding

- voor gebruik zonder computer -

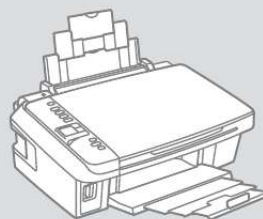

EPSON
EXCEED YOUR VISION



[You're reading an excerpt. Click here to read official EPSON SX425W user guide](http://yourpdfguides.com/dref/2936013)
<http://yourpdfguides.com/dref/2936013>

Manual abstract:

Cautions must be observed to avoid damage to your equipment. Must be observed to avoid bodily injury and damage to your equipment. Indicates a page number where additional information can be found. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U. @@@@Memory Stick, Memory Stick Duo, Memory Stick PRO, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, Memory Stick Micro, MagicGate Memory Stick, and MagicGate Memory Stick Duo are trademarks of Sony Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. Make sure the power cord meets all relevant local safety standards. Place the printer near a wall outlet where the power cord can be easily unplugged.

Use only the type of power source indicated on the label. Do not let the power cord become damaged or frayed. Do not open the scanner unit while copying, printing, or scanning. @@Doing so may cause fire. @@ Keep ink cartridges out of the reach of children and do not drink the ink.

If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. If you still have discomfort or vision problems, see a doctor immediately. Do not shake ink cartridges after opening their packages; this can cause leakage. @@@@Use Copies + or - to set the number of copies. @@@@If you want to print Choose this on on this paper. *1 Paper with a weight of 64 to 90 g/m². *2 30 sheets for paper that already has printing on one side. See the online User's Guide when using Legal size paper. Do not load paper above the H arrow mark inside the edge guide.

Do not use paper with binder holes. Do not try to force the card all the way into the slot. @@You can reprint photos from 30 × 40 mm. @@Or, press the I button to select AUTO to fit to your paper size. You can speed up plain paper copying, however print quality declines. In step G, hold down x button until the P light starts flashing. To select more photos, repeat steps E and F. You can print photos using an A4 index sheet. First print an index sheet, mark the photos that you want to print, and then scan the index sheet to print your photos. You may need several sheets of A4 plain paper.

Check u aligns with the corner on the sheet. If you have more than one index sheet, wait until printing is complete for the first sheet, and then repeat steps J to L to scan and print from each additional sheet. Make sure you have installed software for this printer on your computer and connected following the instructions on the Start Here poster. After step C, your computer's scanning software automatically starts scanning. Print head cleaning uses some ink from all cartridges, so clean the print head only if quality declines.

If it does not improve after cleaning four times, turn off the printer for at least six hours. Then try cleaning the print head again. Turn the printer off and then back on. Make sure that no paper is still in the printer. if the error still appears, contact Epson support.

Turn the printer off and then back on. R & 14 Memory card is not inserted. insert a memory card. R & 16 The settings you have made will be cleared. select Yes or No. There is no index sheet or it is not placed correctly on the document table. check it and try again. @@Correct the sheet and try again. @@Correct the sheet and try again. the contents of the memory card have changed.

Print a new index sheet and try again. press x to return to the previous screen. @@@@ paper jam. @@ r & 46 Paper jam. Open the scanner unit, remove the jammed paper, and then press x. r & 45 The ink cartridge cover is open. Open the scanner unit and close the ink cartridge cover. press x to continue. R & 40 Remove and reload the paper, then press x. R & 40 Make sure that the memory card is inserted correctly.

@@ no photos on the memory card. Check the memory card and try again. O Never move the print head by hand. @@@@Ink cartridges with low ink status may not be used when reinserted. @@@@@ @@@@ @@@@Otherwise the ink remaining in the print head nozzles may dry out.

@@ the cartridge is vacuum packed to maintain its reliability. O Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. O Do not turn off the printer during ink charging as this will waste ink. O When an ink cartridge is expended, you cannot continue printing even if the other cartridges still contain ink. @@@@Next, go to step B in the following instructions.

Never open the cartridge cover while the print head is moving. Be careful not to break the hooks on the side of the ink cartridge. @@@@ @@@@Try the following solutions in order from the Top. For further information, see your online User's Guide. Problems You see banding (light lines) in your printouts or copies. You see incorrect or missing colors. the image size or position is incorrect. Solutions A B C D Make sure you selected the correct paper setting for the loaded paper. Make sure the printable side (the whiter or glossier side) of the paper is facing in the right direction. R & 32 If quality is not improved, try aligning using the printer driver utility.

see your online User's Guide to align the print head. To clean the inside of the printer, make a copy without placing a document on the document table. For further information, see your online User's Guide. For best results, use up ink cartridge within six months of opening the package. @@@@ @@@@R & 18,

21 Controleer of het papier correct is geladen en het origineel correct geplaatst. If you cannot solve the problem using the troubleshooting information, contact Epson support services for assistance. You can get the contact information for Epson support for your area in your online User's Guide or warranty card. If it is not listed there, contact the dealer where you purchased your product. .



[You're reading an excerpt. Click here to read official EPSON](http://yourpdfguides.com/dref/2936013)

[SX425W user guide](http://yourpdfguides.com/dref/2936013)

<http://yourpdfguides.com/dref/2936013>