



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON XP-305. You'll find the answers to all your questions on the EPSON XP-305 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON XP-305
User guide EPSON XP-305
Operating instructions EPSON XP-305
Instructions for use EPSON XP-305
Instruction manual EPSON XP-305

XP-302 / XP-303 / XP-305 / XP-306

- EN Basic Operation Guide
- FR Guide des opérations de base
- DE Benutzerhandbuch - Grundlagen
- NL Basishandleiding

Please see the online manuals which are installed from the CD for printing and scanning from your computer. ☞ 44
Veuillez vous reporter aux manuels en ligne que vous pouvez installer à partir du CD pour procéder à l'impression et à la numérisation à partir de votre ordinateur. ☞ 44
Informationen zum Drucken und Scannen vom Computer finden Sie in den Online-Handbüchern, die von der CD installiert werden können. ☞ 44
Zie voor het afdrukken en scannen vanaf de computer de online-handleidingen die vanaf de cd worden geïnstalleerd. ☞ 44



EPSON
EXCEED YOUR VISION



[You're reading an excerpt. Click here to read official EPSON XP-305 user guide](http://yourpdfguides.com/dref/5130227)
<http://yourpdfguides.com/dref/5130227>

Manual abstract:

Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed. 9 Adjusting the Angle of the Panel. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U. @@@@Memory Stick Duo, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, Memory Stick Micro, and MagicGate Memory Stick Duo are trademarks of Sony Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

! Caution; must be followed carefully to avoid bodily injury. C Important; must be observed to avoid damage to your equipment. Must be observed to avoid bodily injury and damage to your equipment. Q Note Remarque Hinweis Opmerking Information Informations Informationen Informatie % R & Reference page Page de référence Referenzseite Verwijzing □ Important Safety Instructions Consignes de sécurité importantes Wichtige Sicherheitshinweise Belangrijke veiligheidsvoorschriften Use only the power cord that comes with the printer. Use of another cord may cause fire or shock.

Do not use the cord with any other equipment. @@Use only the type of power source indicated on the printer. Make sure the power cord meets all relevant local safety standards. Do not let the power cord become damaged or frayed. Keep the printer away from direct sunlight or strong light.

Do not open the scanner unit while copying, printing, or scanning. @@Doing so may cause fire. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Keep ink cartridges out of the reach of children. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. @@@@Do not touch the ink supply port or surrounding area. Stays off when the printer is not connected to the network. Flashes while the Wi-Fi network settings are being made.

X Starts the operation you selected. @@@@For more information, visit the following URL: <https://www>. For more information, see the online Network Guide. @@Press any button to return the screen to its previous state. O The product turns off automatically if no operations are performed for the period selected at the following menu: Setup -> Printer Setup -> Power Off Timer. To lower or close the panel, unlock by pulling the lever on the rear until it clicks, and then lower down. Simply lift the panel to raise it. 10 Selecting Paper Sélection du papier Papier auswählen Papier selecteren a b c d If you want to print

Choose this Paper Type on the LCD on this paper. You can perform manual 2-sided printing with this paper. Paper with a weight of 64 to 90 g/m². 30 sheets for paper that already has printing on one side. See the table on the right-hand side for the English paper names. 12 Loading Paper Chargement du papier Papier einlegen Papier laden % When using Legal size paper or envelopes, see the online User's Guide. Make sure to face the printable side up. 13 F c Do not load paper above the H arrow mark inside the edge guide.

Do not use paper punched by yourself or paper with many holes. 14 Inserting a Memory Card Insertion d'une carte mémoire Einsetzen einer Speicherkarte Geheugenkaart plaatsen A B c Do not try to force the card all the way into the slot. 15 SD SDHC MultiMediaCard MMCplus SDXC *Adapter required *Adaptateur requis *Adapter erforderlich *Adapter nodig MMCmobile *MMCmicro *miniSD *miniSDHC *miniSDXC *microSD *microSDHC *microSDXC * Memory Stick Duo Memory Stick PRO Duo Memory Stick PRO-HG Duo MagicGate Memory Stick Duo Memory Stick Micro * c If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck. D E F Q To change the settings, press d and go to step G. @@Select the item and change the setting.

@@@@D E Q To select more photos, repeat steps D and E. 19 G Q To change the settings, press d and go to step H. @@@@Select the item and change the setting. @@21 % The following options are available for scanning to a computer. @@@@@@@Q If an ink cartridge is running low, prepare a new ink cartridge. @@@@@@D E Q If you select Yes, go to the next step. Examine the printed pattern for missing segments. 25 F G c Print head cleaning uses some ink from all cartridges, so clean the print head only if quality declines. C Do not turn off the printer during head cleaning. If the head cleaning is incomplete, you may not be able to print.

Q If quality does not improve after cleaning four times, turn off the printer for at least six hours. Then try cleaning the print head again. Examine the patterns and select the most solid pattern from groups #1, #2, #3, and #4. @@You can adjust the time before power management is applied. Any increase will affect the products's energy efficiency. Please consider the environment before making any change. You can change the language displayed on the LCD panel. see the online Network Guide. You can check the network connection status, and print the report. @@@@ see the online Network Guide.

You can restore the default settings. @@@@Make sure that no paper is still in the printer. if the error still appears , contact Epson support. Turn the printer off and then back on. if the error message still appears , contact Epson support.

Turn off the printer. @@ r & 40 Paper jam. Open the scanner unit, remove the jammed paper, and then press x. R & 39 The ink cartridge(s) shown on the LCD panel have not been installed. install them.

R & 36 Cannot recognize the ink cartridge(s) shown on the LCD panel. The message will be displayed until the ink pad is replaced. Contact Epson support to replace ink pads before the end of their service life. When the ink pads are saturated, the printer stops and Epson support is required to continue printing. To establish a wireless connection using an access point, press the push button on the access point or click the button on the access point's wireless settings screen displayed on your computer's screen. @@ press x to resume printing. @@Your computer may not support WSD (Web Services for Devices). @@ the firmware update has failed.



[You're reading an excerpt. Click here to read official EPSON XP-305 user guide](http://yourpdfguides.com/dref/5130227)
<http://yourpdfguides.com/dref/5130227>

*You will need to re-attempt the firmware update. @I-22 I-23 I-31 I-60 Recovery Mode 33 Ink Precautions Mise en garde relative à l'encre
Vorsichtsmaßnahmen für Tinte Voorzorgsmaatregelen voor inkt c O To maintain optimum print head performance, some ink is consumed from all cartridges
not only during printing but also during maintenance operations such as ink cartridge replacement and print head cleaning.*

*O For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when
reinserted. o Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-
genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information
about non-genuine ink levels may not be displayed. O Do not leave the printer with the ink up or recovering data and/or settings even during a warranty
period. We recommend that you make your own backup data or take notes. .*



[You're reading an excerpt. Click here to read official EPSON XP-305
user guide
http://yourpdfguides.com/dref/5130227](http://yourpdfguides.com/dref/5130227)