



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON XP-405. You'll find the answers to all your questions on the EPSON XP-405 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON XP-405
User guide EPSON XP-405
Operating instructions EPSON XP-405
Instructions for use EPSON XP-405
Instruction manual EPSON XP-405

XP-402/XP-403/XP-405/XP-406

- EN Basic Operation Guide
- FR Guide des opérations de base
- DE Benutzerhandbuch - Grundlagen
- NL Basishandleiding

Please see the online manuals which are installed from the CD for printing and scanning from your computer. ☞ 11
Veuillez vous reporter aux manuels en ligne que vous pouvez installer à partir du CD pour procéder à l'impression et à la numérisation à partir de votre ordinateur. ☞ 11
Informationen zum Drucken und Scannen vom Computer finden Sie in den Online-Handbüchern, die von der CD installiert werden können. ☞ 11
Zie voor het afdrukken en scannen vanaf de computer de online-handleidingen die vanaf de cd worden geïnstalleerd. ☞ 11



EPSON
EXCEED YOUR VISION



[You're reading an excerpt. Click here to read official EPSON XP-405 user guide](http://yourpdfguides.com/dref/5130231)
<http://yourpdfguides.com/dref/5130231>

Manual abstract:

Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed. 11 Adjusting the Angle of the Panel. 58 □ Marks Used in This Guide Symboles utilisés dans ce guide Verwendete Symbole Pictogrammen in deze handleiding Copyright Notice Mise en garde relative aux droits d'auteur Hinweis zum Copyright Auteursrechten No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U. @ @ @ @ @ General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. ! Caution; must be followed carefully to avoid bodily injury. C Important; must be observed to avoid damage to your equipment. Must be observed to avoid bodily injury and damage to your equipment. @@ Use of another cord may cause fire or shock. Do not use the cord with any other equipment. @@ Use only the type of power source indicated on the printer. Make sure the power cord meets all relevant local safety standards. Do not let the power cord become damaged or frayed. Keep the printer away from direct sunlight or strong light. Do not open the scanner unit while copying, printing, or scanning. @@ Doing so may cause fire. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Keep ink cartridges out of the reach of children. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away. Do not shake the ink cartridges too vigorously; otherwise ink may leak from the cartridge. If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area.

Stays off when the printer is not connected to the network. Flashes while the Wi-Fi network settings are being made. @@ H i j x Starts the operation you selected. For more information, see the online Network Guide. @@ Images are sorted by the date they were taken. @@ @ @ @ @ For more information, visit the following URL: <https://www. @ @ @ @ @> 11 Adjusting the Angle of the Panel Réglage de l'angle du panneau Winkel des Bedienfelds ändern De hoek van het paneel aanpassen Power Saving Function Fonction d'économie d'énergie Energiesparfunktion Energiebesparing O After 13 minutes of inactivity, the LCD screen turns black. Press any button to return the screen to its previous state. O The product turns off automatically if no operations are performed for the period selected at the following menu: Setup -> Printer Setup -> Power Off Timer. To lower or close the panel, unlock by pulling the lever on the rear until it clicks, and then lower down.

Simply lift the panel to raise it. 12 Selecting Paper Sélection du papier Papier auswählen Papier selecteren a b c d If you want to print Choose this Paper Type on the LCD on this paper. You can perform manual 2-sided printing with this paper. Paper with a weight of 64 to 90 g/m². 30 sheets for paper that already has printing on one side. See the table on the right-hand side for the English paper names. 14 Loading Paper Chargement du papier Papier einlegen Papier laden % When using Legal size paper or envelopes, see the online User's Guide. Make sure to face the printable side up. 15 F c Do not load paper above the H arrow mark inside the edge guide. Do not use paper punched by yourself or paper with many holes. 16 Inserting a Memory Card Insertion d'une carte mémoire Einsetzen einer Speicherkarte Geheugenkaart plaatsen A B c Do not try to force the card all the way into the slot. 17 SD SDHC MultiMediaCard MMCplus SDXC *Adapter required *Adaptateur requis *Adapter erforderlich *Adapter nodig MMCmobile *MMCmicro *miniSD *miniSDHC *miniSDXC *microSD *microSDHC *microSDXC *Memory Stick Duo Memory Stick PRO Duo Memory Stick PRO-HG Duo MagicGate Memory Stick Duo Memory Stick Micro * c If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck. 19 H I Q Make sure you set the Paper Size and Paper Type. Make the appropriate copy settings. @ @ @ @ Use +/- to resize the image area. @ @ Check the message on the screen. @ @ @ @ @ @ @ @ @ @ D E Q To select more photos, repeat D and E. 28 G H Q Make sure you set the Paper Size and Paper Type. Use +/- to resize the image area. @ @ H Q To select more photos, repeat step H.

@ @ They do not change your original images. @ @ Q If an ink cartridge is running low, prepare a new ink cartridge. @ @ @ @ @ @ @ @ @ @ 36 Checking/Cleaning the Print Head Vérification/ nettoyage de la tête d'impression Druckkopf prüfen/ reinigen Printkop controleren/reinigen c Print head cleaning uses some ink from all cartridges, so clean the print head only if quality declines. C Do not turn off the printer during head cleaning. If the head cleaning is incomplete, you may not be able to print. Q If quality does not improve after cleaning four times, turn off the printer for at least six hours. Then try cleaning the print head again. 38 Aligning the Print Head Alignement de la tête d'impression Druckkopf ausrichten Printkop uitlijnen A R & 15 B C Load A4 size paper. Enter the pattern number for #1. Finish aligning the print head. 40 Setup Mode Menu List Liste de menus du mode Config Setup-Modus Menüpunkte Menu's van de modus Inst EN Setup Mode menu Ink Levels Maintenance OK Cartridge Replacement Nozzle Check Head Cleaning Head Alignment Ink Cartridge Replacement Printer Setup Sound Power Off Timer *1 Language Wi-Fi Settings Wi-Fi Setup Manual Wi-Fi Setup Wi-Fi Connection Check *2 Confirm Wi-Fi Settings *3 File Sharing Setup USB Wi-Fi For more information, see the online Network Guide. @ @ Any increase will affect the product's energy efficiency.



[You're reading an excerpt. Click here to read official EPSON XP-405 user guide](http://yourpdfguides.com/dref/5130231)
<http://yourpdfguides.com/dref/5130231>

Please consider the environment before making any change. Make sure the computer is connected correctly. Turn the printer off and then back on.

Make sure that no paper is still in the printer. The message will be displayed until the ink pad is replaced. When the ink print head from Maintenance in the Setup menu on the LCD panel. If quality is not improved, try aligning using the printer driver utility. See your online User's Guide to align the print head. To clean the inside of the printer, make a copy without placing a document on the document glass. For further information, see your online User's Guide. For best results, use up ink cartridge within six months of opening the package. Try to use genuine Epson ink cartridges and paper recommended by Epson. If a moiré (cross-hatch) pattern appears on your copy, change the Reduce/Enlarge setting or shift the position of your original. Or contact Epson support for your area listed in the warranty card or online User's Guide. If it is not listed there, contact the dealer where you purchased your product. C The dial list data for fax and/or network settings may be stored in the product's memory. due to breakdown or repair of a product, data and/or settings may be lost. Epson shall not be responsible for the loss of any data, for backing up or recovering data and/or settings even during a warranty period.

We recommend that you make your own backup data or take notes. .



[You're reading an excerpt. Click here to read official EPSON XP-405 user guide](#)

<http://yourpdfguides.com/dref/5130231>