



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON XP-405. You'll find the answers to all your questions on the EPSON XP-405 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON XP-405  
User guide EPSON XP-405  
Operating instructions EPSON XP-405  
Instructions for use EPSON XP-405  
Instruction manual EPSON XP-405

## XP-402/XP-405

- EN Basic Operation Guide
- IT Guida d'uso generale
- ES Manual de funcionamiento básico
- PT Guia de Operações Básicas

Please see the online manuals which are installed from the CD for printing and scanning from your computer. ☞ 11  
Per la stampa e la scansione dal computer, vedere i manuali online installati da CD. ☞ 11  
Consulte las instrucciones para imprimir y escanear desde su ordenador en los manuales on-line (que puede instalar del CD). ☞ 11  
Consulte os manuais interactivos que são instalados a partir do CD para imprimir e digitalizar através do computador. ☞ 11



**EPSON**  
EXCEED YOUR VISION



[You're reading an excerpt. Click here to read official EPSON XP-405 user guide](#)

<http://yourpdfguides.com/dref/5130252>

**Manual abstract:**

Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed. 11 Adjusting the Angle of the Panel. Caution; must be followed carefully to avoid bodily injury. C Important; must be observed to avoid damage to your equipment. Must be observed to avoid bodily injury and damage to your equipment. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers.

@@@Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation. Memory Stick Duo, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, Memory Stick Micro, and MagicGate Memory Stick Duo are trademarks of Sony Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. sDXC Logo is a trademark of SD-3C, LLC.

Use of another cord may cause fire or shock. Do not use the cord with any other equipment. @@Use only the type of power source indicated on the printer. Make sure the power cord meets all relevant local safety standards. Do not let the power cord become damaged or frayed.

Keep the printer away from direct sunlight or strong light. Do not open the scanner unit while copying, printing, or scanning. @@Doing so may cause fire. Except as specifically explained in your documentation, do not attempt to service the printer yourself. Keep ink cartridges out of the reach of children. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. @@@@Do not touch the ink supply port or surrounding area. Stays off when the printer is not connected to the network.

Flashes while the Wi-Fi network settings are being made. @H i j x Starts the operation you selected. For more information, see the online Network Guide.

@Images are sorted by the date they were taken. @@To re-select a group, select Print Photos, and then select Select Group. Using Epson Connect and other companies' related services, you can easily print directly from your smartphone, tablet PC, or portable computer, anytime and practically anywhere, even across the globe! For more information, visit the following URL: <https://www.> For information on network setup and network troubleshooting, see the online Network Guide (network-compatible models only). 11 Adjusting the Angle of the Panel Regolazione dell'angolo del pannello Ajuste del ángulo del panel de control Ajustar o ângulo do painel Power Saving Function Funzione di risparmio energia Función de ahorro de energía Função de poupança de energia O After 13 minutes of inactivity, the LCD screen turns black. Press any button to return the screen to its previous state. O The product turns off automatically if no operations are performed for the period selected at the following menu: Setup -> Printer Setup -> Power Off Timer.

To lower or close the panel, unlock by pulling the lever on the rear until it clicks, and then lower down. Simply lift the panel to raise it. @@You can perform manual 2-sided printing with this paper. Paper with a weight of 64 to 90 g/m<sup>2</sup>. 30 sheets for paper that already has printing on one side.

See the table on the right-hand side for the English paper names. @@Make sure to face the printable side up. @@Do not use paper punched by yourself or paper with many holes. @@@@19 H I Q Make sure you set the Paper Size and Paper Type. Make the appropriate copy settings.

@@@@Use +/- to resize the image area. @@Check the message on the screen. @@@@DEQ To select more photos, repeat D and E. 28 G H Q Make sure you set the Paper Size and Paper Type. Use +/- to resize the image area. @H Q To select more photos, repeat step H. , 1 photo, Thumbnail Paper Size Paper Type Borderless Fix Red-Eye \*1 \*2 Crop/Zoom Select Group \*1 These functions only affect your printouts. They do not change your original images. \*2 Depending on the type of photo, parts of the image other than the eyes may be corrected. Q If an ink cartridge is running low, prepare a new ink cartridge.

35 % On the screen in step C, you can select to replace ink cartridges even if they are not expended. You can also start this operation by selecting Setup mode, Maintenance, and then Ink Cartridge Replacement. @@@@C Do not turn off the printer during head cleaning. If the head cleaning is incomplete, you may not be able to print. @@Then try cleaning the print head again. Enter the pattern number for #1. Finish aligning the print head. @@@@Any increase will affect the product's energy efficiency. Please consider the environment before making any change. \*2 You can check the network connection status, and print the report.

If there is any problem with the connection, the report helps you find the solution. \*3 You can print the network status sheet to confirm the current settings.

Otherwise, make sure the number of sheets does not exceed the limit specified for the type of media you are using. Make sure the computer is connected correctly. @@Turn the printer off and then back on.

Make sure that no paper is still in the printer. The message will be displayed until the ink pad is replaced. @@@@ contact Epson support to replace ink pads. Make sure the memory card has been inserted correctly. @@You will need to re-attempt the firmware update.

Ready a USB cable and visit your local Epson website for further instructions. solution Printer error. Turn power off and on again. A printer's ink pad is nearing the end of its service life. please contact Epson Support. A printer's ink pad is at the end of its service life. Recovery Mode 47 Ink Precautions Precauzioni per l'inchiostro Precauciones con la tinta Precauções com a tinta c O To maintain optimum print head performance, some ink is consumed from all cartridges not only during printing but also during maintenance operations such as ink cartridge replacement and print head cleaning. O For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when reinserted. o Epson recommends the use of genuine Epson ink cartridges.



[You're reading an excerpt. Click here to read official EPSON XP-405 user guide](http://yourpdfguides.com/dref/5130252)  
<http://yourpdfguides.com/dref/5130252>