




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ESTATE EGD4100SQ. You'll find the answers to all your questions on the ESTATE EGD4100SQ in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual ESTATE EGD4100SQ**
- User guide ESTATE EGD4100SQ**
- Operating instructions ESTATE EGD4100SQ**
- Instructions for use ESTATE EGD4100SQ**
- Instruction manual ESTATE EGD4100SQ**



DRYER USER INSTRUCTIONS

Table of Contents

ASSISTANCE OR SERVICE	1
DRYER SAFETY	1
DRYER USE	3
DRYER CARE	5
TROUBLESHOOTING.....	6
WARRANTY	8

Assistance or Service

If you need service, first see the "Troubleshooting" section. Additional help is available by calling our Customer Interaction Center at 1-800-255-1301 from anywhere in the U.S.A., or write:

Estate Brand Home Appliances
Customer Interaction Center
553 Benton Road
Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence. To order accessories, call 1-800-442-9991 or visit our website at www.estateappliances.com.

Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

Write down the following information about your appliance to help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label, located on your appliance.

Dealer name: _____

Serial number: _____

Address: _____

Phone number: _____


Model number: _____

Purchase date: _____

DRYER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:

▲ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

▲ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

8578193



[You're reading an excerpt. Click here to read official ESTATE EGD4100SQ user guide](http://yourpdfguides.com/dref/208992)
<http://yourpdfguides.com/dref/208992>

Manual abstract:

.....
.....
.....
..... 1 DRYER SAFETY ...

.....
.....
.....
.....

.....
.... 1 DRYER USE.

.....
.....

.....
.....
.....
.....

..... 3 DRYER CARE ..

.....
.....
.....

.....
.....
.....

..... 5 TROUBLESHOOTING.

.....
.....
.....
.....

..... 6 WARRANTY ...

.....
.....
.....
.....
.....
.....
.....

. 8 Assistance or Service If you need service, first see the "Troubleshooting" section. Additional help is available by calling our Customer Interaction Center at 1-800-253-1301 from anywhere in the U.S.A., or write: Estate Brand Home Appliances Customer Interaction Center 553 Benson Road Benton Harbor, MI 49022-2692 Please include a daytime phone number in your correspondence. To order accessories, call 1-800-442-9991 or visit our website at

www.estateappliances.com. Keep this book and your sales slip together for future reference.

You must provide proof of purchase or installation date for in-warranty service. Write down the following information about your appliance to help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label, located on your appliance. Dealer name _____ Serial number _____

_____ Address _____ Phone number _____

_____ Model number _____ Purchase date _____

_____ DRYER SAFETY Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

" These words mean: DANGER WARNING You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. 8578193 IMPORTANT SAFETY INSTRUCTIONS WARNING: To reduce the risk of fire, electric shock, or injury to persons when using the dryer, follow basic precautions, including the following: s s Read all instructions before using the dryer. Do not place items exposed to cooking oils in your dryer. @@@@Do not allow children to play on or in the dryer. @@@@Do not reach into the dryer if the drum is moving. Do not install or store the dryer where it will be exposed to the weather. Do not tamper with controls. s Do not repair or replace any part of the dryer or attempt any servicing unless specifically recommended in this Use and Care Guide or in published user-repair instructions that you understand and have

the skills to carry out.

Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product. Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials. Clean lint screen before or after each load. Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt. The interior of the dryer and exhaust vent should be cleaned periodically by qualified service personnel. See installation instructions for grounding requirements. s s s s s s s s s s s s s **SAVE THESE INSTRUCTIONS WARNING: For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, or to prevent property damage, personal injury, or death. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. WHAT TO DO IF YOU SMELL GAS:** · Do not try to light any appliance. · Do not touch any electrical switch; do not use any phone in your building.

· Clear the room, building, or area of all occupants. · Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. · If you cannot reach your gas supplier, call the fire department. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

2 Checking Your Vent Your dryer must be properly installed and vented to achieve maximum drying efficiency and shorten drying times. Use the minimum recommended installation clearances found in your Installation Instructions. See the Installation Instructions for more information. 1. Do not use plastic vent or metal foil vent.

Use 4" (10.2 cm) metal or flexible metal vent. Do not kink or crush flexible metal vent. It must be completely extended to allow adequate exhaust air to flow. Check vent after installation. Refer to your Installation Instructions for proper length requirements of vent. 2. Use a 4" (10.2 cm) exhaust hood. 3.

Use the straightest path possible when routing the vent. **WARNING Fire Hazard Use a heavy metal vent. Do not use a plastic vent. Do not use a metal foil vent.** Failure to follow these instructions can result in death or fire. If the dryer is not properly installed and vented, it will not be covered under the warranty.

NOTE: Service calls caused by improper venting will be paid for by the customer, whether it was a paid installation or selfinstalled. 4. Use clamps to seal all joints. Do not use duct tape, screws or other fastening devices that extend into the interior of the vent to secure vent.

5. Clean exhaust vent periodically, depending on use, but at least every 2 years, or when installing your dryer in a new location. When cleaning is complete, be sure to follow the Installation Instructions supplied with your dryer for final product check. **DRYER USE** Loading Load clothes loosely into the dryer. Do not pack the dryer.

Allow space for clothes to tumble freely. The following charts show examples of balanced loads that would allow for proper tumbling. **SUPER CAPACITY DRYERS** Heavy Work Clothes 4 pair of pants 4 pair of jeans 2 sweatshirts 2 sweatpants 4 shirts Mixed Load 3 sheets (1 king, 2 twin) 4 pillowcases 9 T-shirts 9 pair of shorts 3 blouses 10 handkerchiefs 3 shirts Towels 10 bath towels 10 hand towels 14 washcloths 1 bath mat Delicates 3 camisoles 1 robe 4 slips 8 undergarments 2 sets of sleepwear 1 child's outfit **EXTRA LARGE CAPACITY DRYERS** Heavy Work Clothes 3 pair of pants 4 pair of jeans 2 pair of overalls 3 shirts Mixed Load 3 double sheets 4 pillowcases 8 T-shirts 6 pair of shorts 2 blouses 8 handkerchiefs Towels 10 bath towels 10 hand towels 14 washcloths 1 bath mat Delicates 3 camisoles 1 robe 4 slips 6 undergarments 2 sets of sleepwear 1 child's outfit 3 **Starting Your Dryer** **WARNING WARNING Explosion Hazard** Keep flammable materials and vapors, such as gasoline, away from dryer. Do not dry anything that has ever had anything flammable on it (even after washing).



[You're reading an excerpt. Click here to read official ESTATE EGD4100SQ user guide](#)
<http://yourpdfguides.com/dref/208992>

Failure to follow these instructions can result in death, explosion, or fire.

Fire Hazard No washer can completely remove oil. Do not dry anything that has ever had any type of oil on it (including cooking oils). Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle. Your dryer may not have all of the cycles and features described. 1. Load clothes loosely into the dryer and close the door. Do not pack the dryer. Allow space for clothes to tumble freely. 2. 3.

On some models, temperature is included in the cycle selections. 4. (OPTIONAL) Your dryer may have a WRINKLE PREVENT™ feature setting. 5. Turn the PUSH TO START button to ON or OFF. The signal will sound only if the selector is set to On. 6. If desired, add fabric softener sheet. Follow package instructions. 7.

The drum turns, but the rack does not move. NOTE: The rack must be removed for normal tumbling. Do not use the automatic cycle with the drying rack. To use the drying rack 1. Place drying rack in dryer.

Style 1: Your drying rack has front legs. Slide rear pegs into the dimples on the back wall of the dryer. Lower the front legs to rest on the dryer opening. Style 2: Your drying rack does not have front legs. Do not remove the lint screen.

Slide drying rack over the bottom of the dryer door opening. Push down to secure rack on frame. 2. Put wet items on top of rack, leaving space between items. Do not allow items to hang over the edge of the rack. Close the door. 3. Select a timed drying cycle and temperature, or an air cycle. Refer to the following table. 4.

Start the dryer. Reset cycle to complete drying, if needed. 60 min. Select a new cycle and temperature (if desired). Roll lint off the screen with your fingers. 2. Wet both sides of lint screen with hot water. 3. Wet a nylon brush with hot water and liquid detergent. Scrub lint screen with the brush to remove residue buildup.

4. Rinse screen with hot water. 5. Thoroughly dry lint screen with a clean towel. Failure to do so can result in death, explosion, or fire. 1. Wipe drum thoroughly with a damp cloth. 3. Tumble a load of clean cloths or towels to dry the drum.

These stains are not harmful to your dryer and will not stain future loads of clothes. Dry unstable dye items inside-out to prevent dye transfer. Match dryer setting to load type. Dryer Results Loads are wrinkled Was the load removed from dryer at the end of the cycle? Was the dryer overloaded? Dry smaller loads that can tumble freely. Did the load overdry? Check the manufacturer's care label. Match dryer setting to load type. Clothes are not drying satisfactorily Check the following: Is the lint screen clogged with lint? Is the exhaust vent or outside exhaust hood clogged with lint, restricting air movement? Run the dryer for 5-10 minutes. Hold your hand under the outside exhaust hood to check air movement. If you do not feel air movement, clean exhaust system of lint or replace exhaust vent with heavy metal or flexible metal vent.

See your Installation Instructions. Is the exhaust vent crushed or kinked? Replace with heavy metal or flexible metal vent. See your Installation Instructions. Are fabric softener sheets blocking the grille? Use only one fabric softener sheet, and use it only once. Odors Have you recently been painting, staining or varnishing in the area where your dryer is located? If so, ventilate the area. When the odors or fumes are gone from the area, rewash and dry the clothing. If the dryer is electric, is it being used for the first time? The new electric heating element may have an odor. The odor will be gone after the first cycle. Is the dryer located in a room with temperature below 45°F (7°C)? Proper operation of dryer cycles requires temperatures above 45°F (7°C). Was a cold rinse water used? Was the load very wet? Expect longer drying times with items rinsed in cold water and with items that hold moisture (cottons).

Is the load too large and heavy to dry quickly? Separate the load to tumble freely. Garment damage Check the following: Were zippers, snaps, and hooks left open? Were strings and sashes tied to prevent tangling? Were care label instructions followed? Were items damaged before drying? 6 Notes 7

WHIRLPOOL CORPORATION MAJOR APPLIANCE WARRANTY ONE YEAR LIMITED WARRANTY For one year from the date of purchase, when this major appliance is operated and maintained according to instructions attached to or furnished with the product, Whirlpool Corporation or Whirlpool Canada LP (hereafter "Whirlpool") will pay for FSP® replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by a Whirlpool designated service company. **ITEMS WHIRLPOOL WILL NOT PAY FOR** 1. Service calls to correct the installation of your major appliance, to instruct you how to use your major appliance, to replace or repair house fuses or to correct house wiring or plumbing.

2. Service calls to repair or replace appliance light bulbs, air filters or water filters. Those consumable parts are excluded from warranty coverage. 3.

Repairs when your major appliance is used for other than normal, single-family household use.

4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by Whirlpool. 5. Any food loss due to refrigerator or freezer product failures. 6. Replacement parts or repair labor costs for units operated outside the United States or Canada. 7. Pickup and delivery. This major appliance is designed to be repaired in the home. 8.

Repairs to parts or systems resulting from unauthorized modifications made to the appliance. 9. Expenses for travel and transportation for product service in remote locations. 10. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions. **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE**

REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. WHIRLPOOL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU.

After checking "Troubleshooting," additional help can be found by checking the "Assistance or Service" section or by calling Whirlpool.

In the U.S.A., call 1-800-253-1301. In Canada, call 1-800-807-6777.

8/05 Replacement Parts If you need to order replacement parts, we recommend that you only use FSP® factory specified parts.



[You're reading an excerpt. Click here to read official ESTATE EGD4100SQ user guide](http://yourpdfguides.com/dref/208992)
<http://yourpdfguides.com/dref/208992>

These parts will fit right and work right because they are made with the same precision used to build every new ESTATE® appliance. To locate FSP replacement parts in your area: Call the Customer Interaction Center at 1-800-253-1301, or your nearest designated service center. For information on how to contact Whirlpool Corporation, please see front page of this document. 8578193 © 2005 Whirlpool Corporation.

All rights reserved. ® Registered Trademark/TM Trademark of Whirlpool, U.S.A. 9/05 Printed in U.S.A. .



[You're reading an excerpt. Click here to read official ESTATE
EGD4100SQ user guide
http://yourpdfguides.com/dref/208992](http://yourpdfguides.com/dref/208992)