


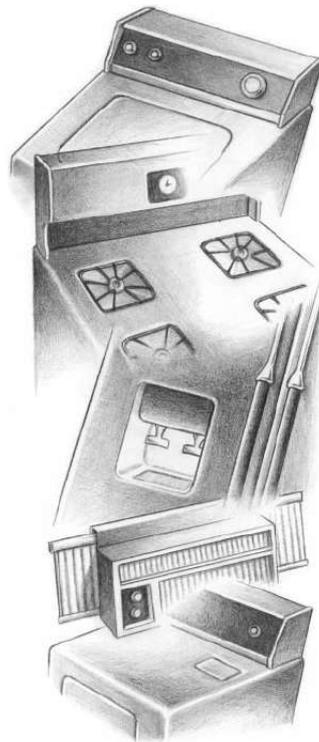

Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ESTATE TMH16XSD. You'll find the answers to all your questions on the ESTATE TMH16XSD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ESTATE TMH16XSD
User guide ESTATE TMH16XSD
Operating instructions ESTATE TMH16XSD
Instructions for use ESTATE TMH16XSD
Instruction manual ESTATE TMH16XSD



MICROWAVE HOOD COMBINATION

Use & Care Guide

For questions about features, operation/performance, parts, accessories or service, call: 1-800-253-1301 or visit our website at: www.estateappliances.com

Table of Contents	2
-------------------	---

Model TMH16XS

8205872



[You're reading an excerpt. Click here to read official ESTATE TMH16XSD user guide](http://yourpdfguides.com/dref/209002)
<http://yourpdfguides.com/dref/209002>

Manual abstract:

.. @@@@Always read and obey all safety messages. This is the safety alert symbol. @@@@You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. **IMPORTANT SAFETY INSTRUCTIONS** When using electrical appliances basic safety precautions should be followed, including the following: **WARNING: To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy: Read all instructions before using the microwave oven. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found in this section. The microwave oven must be grounded. Connect only to properly grounded outlet.**

See "GROUNDING INSTRUCTIONS" found in this section and in the provided Installation Instructions. Install or locate the microwave oven only in accordance with the provided Installation Instructions. @@@@Do not use corrosive chemicals or vapors in the microwave oven. @@It is not designed for industrial or laboratory use. @@ Do not operate the microwave oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

The microwave oven should be serviced only by qualified service personnel. Call an authorized service company for examination, repair, or adjustment. See door surface cleaning instructions in the "Microwave Oven Care" section. To reduce the risk of fire in the oven cavity: Do not overcook food. Carefully attend the microwave oven when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.

Remove wire twist-ties from paper or plastic bags before placing bags in oven. If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to persons: Do not overheat the liquid. Stir the liquid both before and halfway through heating it. Do not use straight-sided containers with narrow necks.

After heating, allow the container to stand in the microwave oven for a short time before removing the container. Use extreme care when inserting a spoon or other utensil into the container. Oversized foods or oversized metal utensils should not be inserted in the microwave oven as they may create a fire or risk of electric shock. Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock. **SAVE THESE INSTRUCTIONS 3 IMPORTANT SAFETY INSTRUCTIONS** Suitable for use above both gas and electric cooking equipment. Intended to be used above ranges with maximum width of 36" (91.44 cm). Clean Ventilating Hoods Frequently - Grease should not be allowed to accumulate on hood or filter. Do not use paper products when appliance is operated in the "PAN BROWN" mode (on models with this feature).

Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use. Do not store anything directly on top of the microwave oven when the microwave oven is in operation. When flambeing foods under the hood, turn the fan on. Use care when cleaning the vent-hood filter. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filter.

Do not cover or block any openings on the microwave oven. Do not store this microwave oven outdoors. Do not use the microwave oven near water - for example, near a kitchen sink, in a wet basement, or near a swimming pool, or similar locations. Do not immerse cord or plug in water. Keep cord away from heated surfaces.

Do not let cord hang over edge of table or counter. Do not mount over a sink. Do not cover racks or any other part of the oven with metal foil. This will cause overheating of the oven. **SAVE THESE INSTRUCTIONS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a)** Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks. (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) Door (bent), (2) Hinges and latches (broken or loosened), (3) Door seals and sealing surfaces. (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

Electrical Requirements WARNING A separate circuit serving only this appliance. **GROUNDING INSTRUCTIONS** Electrical Shock Hazard Plug into a grounded 3 prong outlet. Do not remove ground prong. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock. Observe all governing codes and ordinances. Required: A 120 Volt, 60 Hz, AC only, 15- or 20-amp electrical supply with a fuse or circuit breaker. Recommended: A time-delay fuse or time-delay circuit breaker. For all cord connected appliances: The microwave oven must be grounded.

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. The microwave oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING: Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the microwave oven. **SAVE THESE INSTRUCTIONS** This device complies with Part 18 of the FCC Rules. **4 PARTS AND FEATURES** This manual may cover several different models. The model you have purchased may have some or all of the features shown here.

The appearance of your particular model may differ slightly from the illustrations in this manual.



[You're reading an excerpt. Click here to read official ESTATE
TMH16XSD user guide
http://yourpdfguides.com/dref/209002](http://yourpdfguides.com/dref/209002)

MICROWAVE OVEN CONTROL A B C D E F G H I J K A. Vent grille B. Model and serial number plate C. Charcoal filter (behind vent grille) D. Microwave oven light E. Door lock system F. Metal shielded window G. Cooking guide label H. Grease filters (shipped in microwave oven cavity) I.

Cooktop light J. Microwave inlet cover K. Control panel Parts and Features not shown Turntable Turntable A B C A. Turntable B. Hub C. Support Display When power is first supplied to the microwave oven, a ":" will blink in the display. Touch OFF CANCEL to stop the blinking. If the ":" blinks in the display at any other time, a power failure has occurred. Touch OFF CANCEL and reset the clock if needed. If an invalid value has been entered, the invalid entry tones will sound, and the input prompt will reappear in the display.

Retry your entry. When the microwave oven is in use, the display shows cooking power, quantities, weights and/or prompts. When the microwave oven is not in use (standby mode), the display shows the time of day or Timer countdown. The speed of the scroplay. Tones Tones are audible signals, indicating the following: One tone Valid entry (short tone) Two tones End of timer countdown Control Lock The Control Lock shuts down the control panel pads to prevent unintended use of the microwave oven.

When the control is locked, only the Vent Fan and Light pads will function. If any other control pad is touched, "LOCKED" will appear in the display and the invalid entry tones will sound. To Lock/Unlock Control: The microwave oven must be in standby mode. Touch and hold OFF CANCEL for 3 seconds until 2 tones sound and a padlock icon appears in the display. Repeat to unlock and remove the padlock icon from display.

End of stage in multistage cooking Control Lock active Hidden feature has been entered or exited Reminder, repeat each minute after the end-of-cycle tones 6

Vent Fan The vent (exhaust) fan has 2 speeds: high and low. To protect the microwave oven, if the temperature from the range or cooktop below the microwave oven gets too hot, the vent fan will automatically turn on at low speed. It may stay on for up to 1 hour to cool the microwave oven. When this occurs, the vent fan cannot be turned off. If the vent fan pad is touched during automatic fan operation, "AUTO FAN IS ON, FAN SPEED WILL REMAIN ON UNTIL HEAT IS NO LONGER SENSED" will scroll in the display as a reminder. The vent fan is also the cooling fan, and will start at low speed when any cooking function begins. It will remain on until the cooking function ends. To Turn Vent Fan On/Off: Touch VENT FAN pad once for high, twice for low or 3 times for off. Demo Mode The Demo Mode is ideal for learning how to use the microwave oven. When set, functions can be entered without actually turning on the microwave generator (magnetron).

The microwave oven light will come on, the fan will run, and the turntable will rotate (if set on). The DEMO icon will appear in the display while the microwave oven is off, and will flash during any function. After 5 minutes of inactivity, a reminder message will scroll in the display when any control pad is touched. To Turn On/Off: The microwave oven must be in standby mode. Touch and hold the number pad "3" for 3 seconds until 2 tones sound and the DEMO icon appears in the display. Repeat to turn off and remove the DEMO icon from the display. Cooktop Light The cooktop light has 3 settings: high, low and off.

To Turn Light On/Off: Touch LIGHT pad once for high, twice for low or 3 times for off. MICROWAVE OVEN USE A magnetron in the oven produces microwaves which reflect off the metal floor, walls and ceiling and pass through the turntable and appropriate cookware to the food. Microwaves are attracted to and absorbed by fat, sugar and water molecules in the food, causing them to move, producing friction and heat which cooks the food.

Do not lean on or allow children to swing on the microwave oven door. Food Characteristics When microwave cooking, the amount, size and shape, starting temperature, composition and density of the food affect cooking results. Amount of Food The more food heated at once, the longer the cook time needed.

Check for doneness and add small increments of time if necessary. Do not operate microwave oven when it is empty.

The turntable must be in place and correct side up when microwave oven is in use. Do not use if turntable is chipped or broken. See "Assistance or Service" section to reorder. Baby bottles and baby food jars should not be heated in microwave oven. Clothes, flowers, fruit, herbs, wood, gourds, paper, including brown paper bags and newspaper, should not be dried in microwave oven.

Do not use the microwave oven for canning, sterilizing or deep frying. The microwave oven cannot maintain appropriate temperatures. @@@@Do not overcook potatoes. @@Let potatoes stand for 5 minutes. They will finish cooking while standing. Do not cook or reheat whole eggs inside the shell. Steam buildup in whole eggs may cause them to burst. Cover poached eggs and allow a standicommendations. Acceptable for use. Follow manufacturer's recommendations.

@@@@For example, 70%=Medium-High. @@@@Heating cream soups. Heating rice, pasta or casseroles. Cooking and heating foods that need a cook power lower than high. For example, whole fish and meat loaf. Reheating a single serving of food. @@Cooking non-stirrable casseroles, such as lasagna. Cooking ham, whole poultry and pot roasts. Simmering stews. Melting chocolate.

Heating bread, rolls and pastries. Defrosting bread, fish, meats, poultry and precooked foods. Softening butter, cheese, and ice cream. Taking chill out of fruit. Manual Cooking To Use: 1.

Place food on the turntable and close the door. 2. Touch COOK TIME, then enter a length of time to cook. If cooking with 100% power, skip Step 3. 3.

@@See "Microwave Cooking Power" chart. 4. Touch START. The display will count down the cook time. @@5. @@@@To Change Cook Time: Touch COOK TIME. The countdown will freeze for a few seconds. @@@@Touch START. 80% 70%, Medium-High 60% 50%, Medium Cooking in Stages (or steps) The microwave oven can be set for manual cooking at different cooking powers for various lengths of time, up to 2 stages. 40% 30%, MediumLow, Defrost 20% 10%, Low To Cook in Stages: 1.

Place food on the turntable and close the door. 2. Touch COOK TIME, then enter length of time to cook for the first stage. If cooking with 100% power, skip Step 3. 3. Touch COOK POWER, then enter the desired power level for the first stage. See "Microwave Cooking Power" chart. 4. Repeat steps 2 and 3 for the second stage. 5.

Touch START. The display will count down each of the cook times. @@@@6. @@@@To Change Cook Time: Touch COOK TIME. The countdown will freeze for a few seconds.

@@@@@@@@@Doneness may be adjusted at this time by touching COOK TIME. 4. Touch START. The display will count down the cook time.



[You're reading an excerpt. Click here to read official ESTATE
TMH16XSD user guide
http://yourpdfguides.com/dref/209002](http://yourpdfguides.com/dref/209002)

@@5.

Popcorn Popping time has been preset based on commercially packaged microwave popcorn. @@@@ Use the following chart as a guide. @@Loosen cover on 3 sides. @@For 10- or 20-oz entrée, let stand 2-3 minutes after cooking. For 40- or 60-oz entrée, remove film halfway through cycle. Let stand 5 minutes after cooking. 1-4 cups (250 mL-1 L)/ Place in microwave-safe container. Add 2-4 tbs (30-60 mL) water. Cover with plastic wrap and vent. Stir and let stand 2-3 minutes after cooking.

1-4 cups (250 mL-1 L)/ Remove from package. Place in microwave-safe container. Cover with plastic wrap and vent. @@@@Do not try to pop unpopped kernels. Use fresh bags of popcorn for optimal results. Cooking results may vary by brand and fat content. @@Place popcorn bag on the turntable, and close the door. 2. Touch POPCORN. Bag size selections will scroll across the display.

3. Enter the bag size, in ounces, using the number pads (invalid numbers will not be accepted) or 4. Touch POPCORN repeatedly to scroll through the bag size selections. 5. Touch START.

The display will count down the popping time. When the popcorn cycle ends, "END" will appear in the display, and the end-of-cycle tones will sound, followed by reminder tones. 6. Fresh Vegetables 2 Frozen Vegetables 3 To Use Preset Cooking: 1. Place food on the turntable, and close the door.

2. Touch COOK. 3. Select food by entering the number from the chart or Touch COOK repeatedly to scroll through food selections. 4. Enter quantity. Doneness may be adjusted at this time by touching COOK TIME. 5. Touch START. The display will count down the cook time.

@@6. Baked Potato One to four 10 oz (283 g) potatoes may be baked automatically in the microwave oven by using the Baked Potato function. Pierce each potato several times with a fork before baking. Place a single potato on the turntable, off to the side (not centered). Place 2, 3 or 4 potatoes on the turntable around the edges, at least 1" (2.5 cm) apart. Let potato(es) stand for 5 minutes after baking. To Bake Potatoes: 1. Place potato(es) on the turntable and close the door. 2.

Touch BAKED POTATO. 10 Reheating Times and cooking power have been preset for reheating specific food types. Use the following chart as a guide.

FOOD Pizza PAD 1 QUANTITY/INSTRUCTIONS 1-3 slices, 3 oz (85 g) each (refrigerated)/ Place pizza slice(s) on paper towel or paper plate. 1-4 cups (250 mL-1 L)/ Place in microwave-safe container, and cover with plastic wrap.

Stir and let stand 2-3 minutes after reheating. 1 serving (1 plate), 8-10 oz (227-283 g)/ Place food on plate, cover with plastic wrap and vent. Let stand 2-3 minutes after reheating. 1-4 cups (250 mL-1 L)/ Place in microwave-safe container. Cover with plastic wrap and vent.

Stir and let stand 2-3 minutes after reheating. 1-6 pieces, 2 oz (57 g) each*/ Place on paper towel. Defrosting The Auto Defrost feature can be used or the microwave oven can be manually set to defrost. Food should be 0°F (-18°C) or colder at defrosting for optimal results. Unwrap foods and remove lids (for example, from fruit juice containers) before defrosting. Shallow packages will defrost more quickly than deep blocks. Separate food pieces as soon as possible during or at the end of cycle for more even defrosting. Use small pieces of aluminum foil to shield parts of food such as chicken wings, leg tips and fish tails.

See "Aluminum Foil and Metal" first. Casserole 2 Dinner Plate 3 The Auto Defrost system has 3 categories: Meat, Poultry and Fish.

It should not be used for food left outside the freezer more than 20 minutes and frozen ready-made food. Use the following chart as a guide. @@Do not defrost less than 1/4 lb (113 g) or two 4 oz (113 g) patties. @@Place food on the turntable, and close the door. 2. Touch REHEAT. 3. @@4. Enter quantity. Doneness may be adjusted at this time by touching COOK TIME.

5. Touch START. The display will count down the reheat time. @@6. @@@@Unwrap food, place on the turntable, and close the door. 2. Touch DEFROST. 3. @@4. Enter the weight in pounds.

Meats and Poultry can be set from 0.2 to 6.6 lb (90 g to 3 kg). Fish can be set from 0.2 to 4.4 lb (90 g to 2 kg). Doneness may be adjusted at this time by touching COOK TIME. 5. Touch START. The display will count down the defrost time.

@@6. @@@@Always follow label instructions on cleaning products. @@@@ Hot water and mild detergent: Soak filters, then scrub and swish to remove embedded dirt and grease. Rinse well and shake to dry. Glass cleaner and paper towels or nonabrasive plastic scrubbing pad: Apply glass cleaner to towel, not directly to surface. Dishwasher: Wash separately, not with dirty dishes, because food can be trapped in the filters. NOTE: Some discoloration of the filters may occur after cleaning them in the dishwasher. This is normal, and will not affect the performance of the grease filters. Stainless Steel (on some models) To avoid damage to microwave oven door and exterior, do not use soap-filled scouring pads, abrasive cleaners, steel-wool pads, gritty washcloths or some paper towels. Rub in direction of grain.

Stainless Steel Cleaner & Polish (not included): See "Assistance or Service" section to order. Liquid detergent or all-purpose cleaner: Rinse with clean water and dry with soft, lint-free cloth. Vinegar for hard water spots MICROWAVE OVEN CAVITY To avoid damage to the microwave oven cavity, do not use soapfilled scouring pads, abrasive cleaners, steel-wool pads, gritty washcloths or some recycled paper towels. To avoid damage to stainless steel models, rub in direction of grain. The area where the microwave oven door and frame touch when closed should be kept clean.

Average soil Mild, nonabrasive soaps and detergents: Rinse with clean water and dry with soft, lint-free cloth. Heavy soil Mild, nonabrasive soaps and detergents: Heat 1 cup (250 mL) of water for 2 to 5 minutes in microwave oven. Steam will soften soil. Rinse with clean water and dry with soft, lint-free cloth. Odors Lemon juice or vinegar: Heat 1 cup (250 mL) of water with 1 tbs (15 mL) of either lemon juice or vinegar for 2 to 5 minutes in microwave oven. Microwave Inlet Cover To avoid arcing and damage to the microwave oven, the microwave inlet cover (see "Parts and Features") should be kept clean. Wipe with wet cloth. CONTROL PANEL Sponge or soft cloth and water: Dampen sponge with water and wipe panel. Dry with soft cloth. Do not use chemical or abrasive cleansers. TURNTABLE Replace turntable immediately after cleaning. Do not operate the microwave oven without the turntable in place. Mild cleanser and scouring pad Dishwasher Replacing Filters The grease filters should be removed and cleaned at least once a month. Do not operate the microwave oven or exhaust fan without the grease filters in place. The charcoal filters cannot be washed and should be replaced every 6 to 12 months.

See "General Cleaning" for cleaning instructions.



[You're reading an excerpt. Click here to read official ESTATE
TMH16XSD user guide
http://yourpdfguides.com/dref/209002](http://yourpdfguides.com/dref/209002)

See "Assistance or Service" to reorder filters. To Remove and Replace Grease Filters: 1. Remove each grease filter by sliding filter to the end. Pull tab down until the filter drops out. A A. Tabs 2. Replace grease filter by inserting one end of the filter into the outer end of the frame. Swing the other end up and slide into position. 12 To Remove and Replace Charcoal Filter: 1.

Remove the 2 vent grille mounting screws located directly behind the top louver. Replacing Microwave Oven Light The microwave oven light is a candelabra base bulb. It will automatically come on when the door is opened and when the microwave oven is operating. See "Assistance or Service" section to reorder. A B C To Replace: 1.

Unplug microwave oven or disconnect power. 2. Remove the 2 vent grille mounting screws located directly behind the top louver. A A. Vent grille B. Top louver C. Mounting screws B C 2. Tip the vent grille forward and down, then lift to remove. A. Vent grille B. Top louver C. Mounting screws 3. Tip the vent grille forward and down, then lift out to remove. 3. Slide filter back slightly, lift front end, and pull out filter.

4. Lift up the bulb cover. 4. Install new charcoal filter. 5. Replace vent grille and mounting screws. A Replacing Cooktop Light The cooktop light is a candelabra base bulb. See "Assistance or Service" section to reorder. To Replace: 1. Unplug microwave oven or disconnect power.

2. Remove the bulb cover mounting screw. A. Bulb cover A 5. Replace light. Close bulb cover. 6. Reattach vent grille. Replace the mounting screws. 7.

Plug in microwave oven or reconnect power. A. Mounting screw 3. Replace light. Close bulb cover. Replace mounting screw. 4. Plug in microwave oven or reconnect power. 13 TROUBLESHOOTING Try the solutions suggested here first in order to avoid the cost of an unnecessary service call. Nothing will operate Turntable alternates rotation directions Has a household fuse blown, or has the circuit breaker tripped? Replace the fuse or reset the circuit breaker.

If the problem continues, call an electrician. Is the appliance wired properly? See Installation Instructions provided with your microwave oven. This is normal and depends on motor rotation at the beginning of the cycle. Display shows messages Microwave oven will not operate Is the display showing ":-"? There has been a power failure or the clock time has been turned off. See "Display" section to clear display. See "Clock" section to reset the clock or to turn it on. Is the display showing a letter followed by a number? See "Display" section to clear. If it reappears, call for service. See "Assistance or Service" section. Is the door completely closed? Firmly close door.

Is a spacer (on some models) attached to the inside of the door? Remove spacer, then firmly close door. Is the electronic oven control set correctly? See "Microwave Oven Control" section. On some models, is the Control Lock set? See "Control Lock" section. On some models, is the Demo Mode activated? See "Demo Mode" section. Is the magnetron working properly? Try to heat 1 cup (250 mL) of cold water for 2 minutes at 100% cooking power.

If water does not heat, call for service. See "Assistance or Service" section. Display shows time countdown, but is not operating Is the Timer in use? See "Timer" section. On some models, is the Demo Mode in use? See "Demo Mode" section. Tones are not sounding Are tones turned off? See "Tones" section. Steam is coming from the vent grille Microwave oven makes humming noise Some steam is normal. This is normal and occurs when the power supply switches the magnetron on and off. Fan running slower than usual Has the microwave oven been stored in a cold area? The fan will run slower until the microwave oven warms up to normal room temperature. Microwave oven door looks wavy This is normal and will not affect performance. Fan running during microwave cooking Turntable will not operate Has the tape been removed from turntable hub? See "Turntable" section. Is the turntable properly in place? Make sure turntable is correct side up and is sitting securely on the turntable support. Is the turntable support operating properly? Remove turntable. Remove and clean turntable support and rollers. Replace turntable support. Replace turntable.

Place 1 cup (250 mL) of water on the turntable, then restart microwave oven. If it still is not working, call for service. See "Assistance or Service" section. Do not operate the microwave oven without turntable and turntable support working properly. This is normal. The fan comes on at low speed to cool the microwave oven. See "Vent Fan" section. 14 Fan comes on during cooktop usage Radio, TV or cordless phone interference This is normal. The fan automatically comes on to cool the microwave oven if the temperature from the cooktop below gets too hot. See "Vent Fan" section.

Is the microwave oven plugged into the same outlet? Try a different outlet. Is the radio or TV receiver near the microwave oven? Move the receiver away from the microwave oven, or adjust the radio or TV antenna. Are the microwave oven door and sealing surfaces clean? Make sure these areas are clean. Is the cordless phone frequency 2.4 GHz? Some 2.

4 GHz-based cordless phones and home wireless networks may experience static or noise while the microwave oven is on. Use a corded phone, a different frequency cordless phone or avoid using these items during microwave oven operation. Cooking times seem too long Is the cooking power set properly? See "Microwave Cooking Power" section. Are large amounts of food being heated? Larger amounts of food need longer cooking times. Is the incoming voltage less than that specified in "Microwave Hood Combination Safety?" Have a qualified electrician check the electrical system in the home.

ASSISTANCE OR SERVICE Before calling for assistance or service, please check "Troubleshooting." It may save you the cost of a service call. If you still need help, follow the instructions below. When calling, please know the purchase date and the complete model and serial number of your appliance. @@@@ Use and maintenance procedures. Accessory and repair parts sales. Specialized customer assistance (Spanish speaking, hearing impaired, limited vision, etc.). Referrals to local dealers, repair parts distributors, and service companies. Whirlpool designated service technicians are trained to fulfill the product warranty and provide afterwarranty service, anywhere in the United States.

To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages. 15 WHIRLPOOL CORPORATION MAJOR APPLIANCE WARRANTY ONE YEAR LIMITED WARRANTY For one year from the date of purchase, when this major appliance is operated and maintained according to instructions attached to or furnished with the product, Whirlpool Corporation or Whirlpool Canada LP (hereafter "Whirlpool") will pay for Factory Specified Parts and repair labor to correct defects in materials or workmanship.



[You're reading an excerpt. Click here to read official ESTATE
TMH16XSD user guide
http://yourpdfguides.com/dref/209002](http://yourpdfguides.com/dref/209002)

Service must be provided by a Whirlpool designated service company. @ @ITEMS WHIRLPOOL WILL NOT PAY FOR 1. @ @2. @ @Those consumable parts are excluded from warranty coverage. 3. @ @4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by Whirlpool. 5. Any food loss due to refrigerator or freezer product failures. 6. Replacement parts or repair labor costs for units operated outside the United States or Canada. 7. Pickup and delivery.

This major appliance is designed to be repaired in the home. 8. Repairs to parts or systems resulting from unauthorized modifications made to the appliance. 9. Expenses for travel and transportation for product service in remote locations.

10. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions. 11. Replacement parts or repair labor costs when the major appliance is used in a country other than the country in which it was purchased.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. WHIRLPOOL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE. Outside the 50 United States and Canada, this warranty does not apply.

Contact your authorized Whirlpool dealer to determine if another warranty applies. If you need service, first see the "Troubleshooting" section of the Use & Care Guide. After checking "Troubleshooting," additional help can be found by checking the "Assistance or Service" section or by calling Whirlpool. In the U.S.A., call 1-800-253-1301. In Canada, call 1-800-807-6777. 12/05 Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

Write down the following information about your major appliance to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label located on the product. Dealer

name _____ Address _____ Phone
number _____ Model number _____ Serial
number _____ Purchase date _____ 8205872

© 2006 Whirlpool Corporation. All rights reserved.

® Registered Trademark/TM Trademark of Whirlpool, U.S.A. 4619-652-68391 4/06 Printed in China .



[You're reading an excerpt. Click here to read official ESTATE](#)

[TMH16XSD user guide](#)

<http://yourpdfguides.com/dref/209002>