




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ESTATE TUD8750SD. You'll find the answers to all your questions on the ESTATE TUD8750SD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ESTATE TUD8750SD
User guide ESTATE TUD8750SD
Operating instructions ESTATE TUD8750SD
Instructions for use ESTATE TUD8750SD
Instruction manual ESTATE TUD8750SD

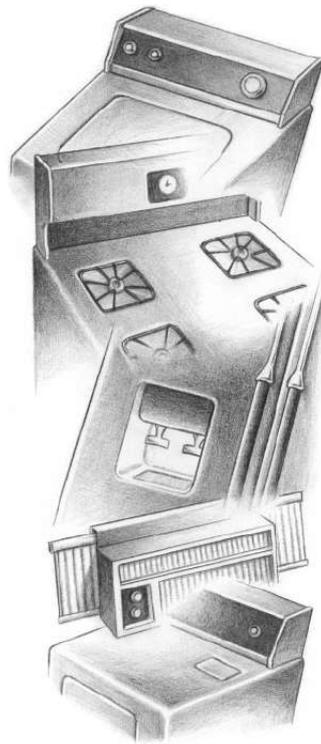

W10073800



BY WHIRLPOOL CORPORATION

UNDERCOUNTER DISHWASHER

Use & Care Guide

For questions about features, operation/performance,
parts, accessories or service, call 1-800-253-1301
or visit our website at:
www.estateappliances.com

Table of Contents 2



Model TUD8750S



[You're reading an excerpt. Click here to read official ESTATE TUD8750SD user guide](http://yourpdfguides.com/dref/209051)
<http://yourpdfguides.com/dref/209051>

Manual abstract:

.. @@@@Always read and obey all safety messages. This is the safety alert symbol. @@@@All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean: DANGER WARNING You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. IMPORTANT SAFETY INSTRUCTIONS WARNING: When using the dishwasher, follow basic precautions, including the following: s s s s Read all instructions before using the dishwasher. Use the dishwasher only for its intended function.

Use only detergents or rinse agents recommended for use in a dishwasher, and keep them out of the reach of children. When loading items to be washed: 1) Locate sharp items so that they are not likely to damage the door seal; and 2) Load sharp knives with the handles up to reduce the risk of cut-type injuries.

@@@Do not touch the heating element during or immediately after use. @@@@To reduce the risk of injury, do not allow children to play in or on the dishwasher. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more.

HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the dishwasher turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time. Remove the door or lid to the washing compartment when removing an old dishwasher from service or discarding it.

s s s **SAVE THESE INSTRUCTIONS** 3 Before Using Your Dishwasher **WARNING** s **GROUNDING INSTRUCTIONS** For a grounded, cord-connected dishwasher: The dishwasher must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. The dishwasher is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. Tip Over Hazard Do not use dishwasher until completely installed. Do not push down on open door. Doing so can result in serious injury or cuts. **WARNING** s **WARNING:** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the dishwasher is properly grounded. Do not modify the plug provided with the dishwasher; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

For a permanently connected dishwasher: The dishwasher must be connected to a grounded metal, permanent wiring system, or an equipmentgrounding conductor must be run with the circuit conductors and connected to the equipmentgrounding terminal or lead on the dishwasher. Electrical Shock Hazard Electrically ground dishwasher. Connect ground wire to green ground connector in terminal box. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock. s **SAVE THESE INSTRUCTIONS** Install where dishwasher is protected from the elements. Protect against freezing to avoid possible rupture of fill valve. Such ruptures are not covered by the warranty. See "Storing" section for winter storage information.

Install and level dishwasher on a floor that will hold the weight, and in an area suitable for its size and use.

Remove all shipping plugs from hoses and connectors (such as the cap on the drain outlet) before installing. See Installation Instructions for complete information. s s 4 **PARTS AND FEATURES** A K B L C D E F G H N M I O J A. Upper level wash B. Top rack C.

Lower spray arm D. Bottom rack E. Model and serial number label F. Heating element G. Water inlet opening (in tub wall) H.

Silverware basket I. Detergent dispenser J. Vent K. Cup shelves L. Top spray arm M. Filter module N. Overfill protection float O. Rinse aid dispenser Control Panel 5 **START-UP GUIDE** Before using your dishwasher, remove all packaging materials. Read this entire Use and Care Guide. You will find important safety information and useful operating tips.

5. Select the desired cycle and options. (See "Dishwasher Use.") Using Your New Dishwasher 1. Scrape large food soil and hard items (toothpicks or bones) from dishes. 2. Properly load the dishwasher. (See "Dishwasher Loading.") Make sure nothing keeps the spray arm(s) from spinning freely. 6. Press **START/RESUME**. **NOTE:** If the door is opened during a cycle or the power is interrupted, the Start/Resume indicator flashes. The cycle will not resume until the door is closed, and Start/Resume is pressed. 3. Add detergent and check the rinse aid dispenser.

Add rinse aid if needed. (See "Dishwasher Use.") Stopping Your Dishwasher You can stop your dishwasher anytime during a cycle. 1. Open the door slightly. 2. Wait for the spraying action to stop. Then open the door all the way, if needed. Close the door and press **START/RESUME** to continue the cycle. **OR** Press **CANCEL/DRAIN**. A 2-minute drain starts. 4. Push door firmly closed. The door latches automatically. Run hot water at the sink nearest your dishwasher until the water is hot.

(See "Dishwasher Efficiency Tips.") Turn off water. 6 **DISHWASHER LOADING** s Loading Suggestions s Place items so open ends face down for cleaning and draining. Load glasses in top rack only. The bottom rack is not designed for glasses. Damage can occur. Place cups and glasses in the rows between tines. Placing them over the tines can lead to breakage and water spots. China, crystal, and other delicate items must not touch each other during dishwasher operation. Damage may occur.

Load lightweight plastic items in the top rack only. Only plastic items marked "dishwasher safe" are recommended. Load plastic items so the force of the spray does not move them during the cycle. To avoid chipping, do not let stemware touch other items. Small bowls, pans, and other utensils can be placed in the top rack.

Load bowls in the center section for best stability. Remove leftover food, bones, toothpicks and other hard items from the dishes. It is not necessary to rinse the dishes before putting them into the dishwasher. The wash module removes food particles from the water. The module contains a chopping device which will reduce the size of food items.

NOTE: If hard items such as fruit seeds, nuts, and eggshells enter the wash module, you might hear chopping, grinding, crunching, or buzzing sounds. These sounds are normal when hard items enter the module.



[You're reading an excerpt. Click here to read official ESTATE TUD8750SD user guide](http://yourpdfguides.com/dref/209051)
<http://yourpdfguides.com/dref/209051>

To avoid damage to the dishwasher, do not let metallic items (such as pot handle screws) get into the wash module. It is important for the water spray to reach all soiled surfaces. Load dishes so they are not stacked or overlapping, if possible. For best drying, water must be able to drain from all surfaces. Make sure pot lids and handles, pizza pans, cookie sheets, etc., do not interfere with the spray arm rotation. Run a rinse cycle to keep dishes moist if you do not plan to wash them soon. Foods such as eggs, rice, pasta, spinach, and cooked cereals may be hard to remove if they are left to dry over a period of time.

Cup shelves Fold down the extra shelf on the left-hand or right-hand side of the top rack to hold additional cups, stemware or long items such as utensils and spatulas. **NOTE:** The features on your dishwasher may vary from those shown below. **Quiet operating tips** To avoid thumping/clattering noises during operation: Make sure lightweight load items are secured in the racks. Make sure pot lids and handles, pizza pans, cookie sheets, etc., do not touch interior walls or interfere with the rotation of the spray arm. Load dishes so they do not touch one another. **NOTE:** For built-in models, keep sink drain plugs closed during dishwasher operation to avoid noise transfer through drains. **Loading Top Rack** The top rack is designed for cups, glasses, and smaller items. Many items, up to 9" (22 cm), fit in the top rack. (See recommended loading patterns shown.)

NOTE: The features on your dishwasher rack may vary from the drawings shown. **10 place setting** Secure heavily soiled cookware face down in the rack. Make sure pot handles and other items do not stop rotation of the spray arm(s). The spray arm(s) must move freely. Do not load items between the bottom rack and the side of the dishwasher tub because they might block the water inlet opening.

Loading Bottom Rack The bottom rack is designed for plates, pans, casseroles, and utensils. Many items, up to 13" (33 cm) fit in the bottom rack. **Pre-Wash section** 2 tsp (10 mL) Fill to Soft Water line 4 tsp (20 mL) Fill to Hard Water line 7 tsp (35 mL) Fill cup completely **Heavy Soil Main Wash section** 9 tsp (45 mL) Fill cup completely 9 tsp (45 mL) Fill cup completely 9 tsp (45 mL) Fill cup completely **Pre-Wash section** 7 tsp (35 mL) Fill cup completely 7 tsp (35 mL) Fill cup completely 7 tsp (35 mL) Fill cup completely **Detergent Dispenser** fill recommendations per dish load soil level and water hardness **Soft** (0-2 grains per U.S. gallon) **Medium** (2-6 grains per U.S. gallon) **Hard** (7 grains per U.S. gallon and above) 2 tsp (10 mL) Fill to Soft Water line 4 tsp (20 mL) Fill to Hard Water line **NOTE:** Fill amounts shown are for standard powdered detergent. Amounts may vary if you use liquid or concentrated powdered detergent. Tablet detergents should be placed in the main wash section of the detergent dispenser with the cover closed. Follow instructions on the package when using liquid dishwasher detergent, concentrated powdered detergent or tablet detergent. **9 Rinse Aid Dispenser** **IMPORTANT:** Your dishwasher is designed to use a liquid rinse aid. The use of rinse aids greatly improves drying by allowing water to drain from the dishes after the final rinse. They also keep water from forming droplets that can dry as spots or streaks. Do not use a solid or bar-type rinse aid.

Rinse aid setting The amount of rinse aid released into the final rinse can be adjusted. For most water conditions, the factory setting of 2 will give good results. If you have hard water or notice rings or calcium spots on your glasses or dishes, try a higher setting. **Filling the dispenser** The rinse aid dispenser holds 5 oz (150 mL) of rinse aid. Under normal conditions, this will last for about 1 to 3 months. **1. Make sure the dishwasher door is fully open. 2. Turn the dispenser knob to "Open" and lift it out. Lock -- 6 5 4 3 2 fi ll - Open m a x 1 - - USE RINSE AID FOR BETTER DRYING Lock Full B C - --- - Add Open To adjust the setting 1.**

Remove the dispenser knob. 2. Turn the arrow adjuster inside the dispenser to the desired setting by either using your fingers or inserting a flat-blade screwdriver into the center of the arrow and turning. 3. Replace the dispenser knob.

A. A. Dispenser knob B. Indicator C. Indicator window **Dishwasher Efficiency Tips** Hot water dissolves and activates the dishwashing detergent. Hot water also dissolves grease on dishes and helps glasses dry spot-free.

For best dishwashing results, water should be 120°F (49°C) as it enters the dishwasher. Loads may not wash as well if the water temperature is too low. Water that is too hot can make some soils harder to remove and cause certain detergent ingredients not to function. If your water heater is located far from the dishwasher, it may be necessary to run the hot water at the faucet closest to the dishwasher to minimize the amount of cold water in the water line. **3. Pour rinse aid into the opening until the indicator points to "Full." Take care not to overfill. (When the rinse aid indicator drops to the "Add" level, add more rinse aid.) Full Add 4. Clean up any spilled rinse aid with a damp cloth.**

5. Place the knob back into the opening. 6. Let the dishwasher drain completely. 7. Lift up the door latch to stop the cycle. Wait for the spraying action to stop before opening the door. 2. Open the door. If the detergent dispenser cover is still closed, add the item. 3. Close the door firmly until it latches. 4. Press START/RESUME. 5. You can change an option anytime before the selected option begins. 6. After a wash cycle, the dishwasher remembers the options used. 7. Press a new cycle and/or options. 2.

Check the detergent dispensers. They must be filled properly for the new cycle. 3. Heating the water helps improve washing results. Hi-Temp Wash is useful when loads contain baked-on food. This option adds heat, wash time and water to the cycle. **2. Press CANCEL/DRAIN. 3. Let the dishwasher drain completely. 4. Check the detergent dispensers. They must be filled properly for the new cycle. 3. Press a new cycle and/or options. 4. Press START/RESUME.**

Switching off Heated Dry skips the dry period. The dishes take longer to dry, and some spotting may occur. Some items (such as plastics) may need towel drying. For best drying, use a liquid rinse aid. **6. Open the door and check the detergent dispenser. 7. When the lock is lit, all buttons are disabled. 8. The lock glows. 9. Wash cycles are adjusted based on what is sensed. 10. It automatically adjusts the wash cycle for the best wash. Lightly soiled dishes will use less water and energy.**

11. This cycle must not be interrupted for proper sensor adjustment. 12. You can add items to the load anytime during the delay countdown. After adding items, close the door firmly until it latches. The delay countdown will not continue if the door is not latched.



[You're reading an excerpt. Click here to read official ESTATE TUD8750SD user guide](http://yourpdfguides.com/dref/209051)
<http://yourpdfguides.com/dref/209051>

Press START/RESUME.

If the door is unlatched, the Start/Resume indicator flashes. @@Press DELAY for a 4-hour delay. The light above the Delay pad glows. 2. @@3.

Press START/RESUME. @@@@Clean glows when a cycle is finished. The light turns off when you open the door or press CANCEL/DRAIN.

IMPORTANT: The vapor is hot. Do not touch the vent during drying. Overfill Protection Float Washing glows while the dishwasher is washing or rinsing the dishes. The overfill protection float (in the front right corner of the dishwasher tub) keeps the dishwasher from overflowing. It must be in place for the dishwasher to operate. Drying Drying glows while the dishwasher is drying your dishes. Clean Clean glows when a cycle is finished.

The light turns off when you open the door or press CANCEL/DRAIN. Check under the float for objects that may keep the protector from moving up or down.

13 WASHING SPECIAL ITEMS If you have doubts about washing a particular item, check with the manufacturer to see if it is dishwasher safe. Material Aluminum Dishwasher Safe?/Comments Yes High water temperature and detergents can affect finish of anodized aluminum. No Do not wash throwaway aluminum pans in the dishwasher. These might shift during washing and transfer black marks to dishes and other items. No Wash bottles and cans by hand. Labels attached with glue can loosen and clog the spray arms or pump and reduce washing performance. No Seasoning will be removed, and iron will rust.

Yes Always check manufacturer's recommendations before washing.

Antique, hand-painted, or over-the-glaze patterns may fade. Gold leaf can discolor or fade. Yes Always check manufacturer's recommendations before washing. Some types of leaded crystal can etch with repeated washing. No Gold-colored flatware will discolor.

Yes Milk glass yellows with repeated dishwasher washing. No Handles of some knives are attached to the blade with adhesives which can loosen if washed in the dishwasher. Stainless Steel Material Pewter, Brass, Bronze Dishwasher Safe?/Comments No High water temperatures and detergent can discolor or pit the finish. No Cannot withstand high water temperatures and detergents. Yes Always check manufacturer's recommendations before washing.

Plastics vary in their capacity to withstand high temperatures and detergents. Load plastics in top rack only. Yes Run a rinse cycle if not washing immediately. Prolonged contact with food containing salt, vinegar, milk products, or fruit juice can damage finish. Yes Run a rinse cycle if not washing immediately. Prolonged contact with food containing salt, acid, or sulfide (eggs, mayonnaise, and seafood) can damage finish. No Can rust. No Wash by hand. Always check manufacturer's instructions before washing. Untreated wood can warp, crack, or lose its finish.

Disposable Aluminum Disposable Plastics Plastics Bottles and Cans Cast Iron China/ Stoneware Sterling Silver or Silver Plate Crystal Tin Gold Wooden Ware Glass Hollow-Handle Knives **14 DISHWASHER CARE** Cleaning Cleaning the exterior In most cases, regular use of a soft, damp cloth or sponge and a mild detergent is all that is necessary to keep the outside of your dishwasher looking nice and clean. If your dishwasher has a stainless steel exterior, a stainless steel cleaner is recommended. Drain Air Gap Check the drain air gap anytime your dishwasher isn't draining well. Some state or local plumbing codes require the addition of a drain air gap between a built-in dishwasher and the home drain system. If a drain is clogged, the drain air gap protects your dishwasher from water backing up into it. Cleaning the interior Hard water minerals can cause a white film to build up on the inside surfaces, especially just beneath the door area. Do not clean the dishwasher interior until it has cooled. You may want to wear rubber gloves. Do not use any type of cleanser other than dishwasher detergent because it may cause foaming or sudsing. The drain air gap is usually located on top of the sink or countertop near the dishwasher.

To order a drain air gap, contact your local dealer; or call us or your designated service center and ask for Part Number 300096. For more information, see "Assistance or Service." NOTE: The drain air gap is an external plumbing device that is not part of your dishwasher. The warranty provided with your dishwasher does not cover service costs directly associated with the cleaning or repair of the external drain air gap. To clean interior Make a paste with powdered dishwasher detergent on a damp sponge and clean.

OR Use liquid automatic dishwasher detergent and clean with a damp sponge. OR See the vinegar rinse procedure in "Spotting and filming on dishes" in "Troubleshooting." NOTE: Run a normal cycle with detergent after cleaning the interior. To clean the drain air gap Clean the drain air gap periodically to ensure proper drainage of your dishwasher. Follow the cleaning instructions provided by the manufacturer.

With most types, you lift off the chrome cover. Unscrew the plastic cap. Then check for any soil buildup. @@@@Is the detergent lump-free? Replace detergent if necessary. @@Refer to the "Detergent Dispenser" section. Is the brand of detergent making excess foam? @@Opening the door or interrupting the power stopped the cycle. Close the door and press START/RESUME. @@@@Open and close the door, then press START/RESUME. Is the door closed tightly and latched? @@@@Has a household fuse blown, or has a circuit breaker tripped? Replace the fuse or reset the circuit breaker. If the problem continues, call an electrician.

Has the motor stopped due to an overload? The motor automatically resets itself within a few minutes. If it does not restart, call for service. Is the water shutoff valve (if installed) turned on? @@Run a rinse cycle once or twice a day until you have a full load. Does the dishwasher have a new plastic smell? @@@@Moisture from the vent in the dishwasher console can form on the counter. Refer to the Installation Instructions for more information. Dishes are not completely clean Food soil left on the dishes Is the dishwasher loaded correctly? Refer to the "Dishwasher Loading" section. Is the water temperature too low? For best dishwashing results, water should be 120°F (49°C) as it enters the dishwasher. Refer to the "Dishwasher Efficiency Tips" section. Did you use the correct amount of fresh detergent? Use recommended dishwasher detergents only. Refer to the "Detergent Dispenser" section.

Detergent must be fresh to be effective. Store detergent in a cool, dry area. Heavy soil and/ or hard water generally require extra detergent. Do you have hard water? You may need to increase the amount of detergent you are using. Refer to the "Detergent Dispenser" section.

Also, you may need to switch to a detergent with a phosphorus content of 8.7%. Is detergent caked in dispenser? Use fresh detergent only.



[You're reading an excerpt. Click here to read official ESTATE](#)

[TUD8750SD user guide](#)

<http://yourpdfguides.com/dref/209051>

Do not allow detergent to sit for several hours in a wet dispenser. Clean dispenser when caked detergent is present.

Is the pump or spray arm clogged by labels from bottles and cans? Is the home water pressure high enough for proper dishwasher filling? Home water pressure should be 20 to 120 psi (138 to 828 kPa) for proper dishwasher fill. If you have questions about your water pressure, call a licensed, qualified plumber. Are high suds slowing the wash arm? Do not use soap or laundry detergents. Use recommended dishwasher detergents only. s Clean light is flashing The dishwasher has malfunctioned. Call for service to check heater circuit. s Dishwasher will not fill Is the overflow protection float able to move up and down freely? Press down to release. s Dishwasher seems to run too long Is the water supplied to the dishwasher hot enough? The dishwasher runs longer while heating water. Refer to the "Dishwasher Efficiency Tips" section. A delay automatically occurs in some wash and rinse cycles until the water reaches the proper temperature.

s Water remains in the dishwasher Is the cycle complete? 16 s Black or gray marks on dishes Are aluminum items rubbing dishes during washing? Disposable aluminum items can break down in the dishwasher and cause marking. Hand wash these items. Remove aluminum markings by using a mild abrasive cleaner. Spots and stains on dishes s Spotting and filming on dishes Is your water hard or is there a high mineral content in your water? Conditioning the final rinse water with a liquid rinse aid helps eliminate spotting and filming. Keep the rinse aid dispenser filled. Is the water temperature too low? For best dishwashing results, water should be 120°F (49°C) as it enters the dishwasher. Refer to the "Dishwasher Efficiency Tips" section. Did you use the correct amount of effective detergent? Use recommended dishwasher detergents only. Refer to the "Detergent Dispenser" section. Detergent must be fresh to be effective. Store detergent in a cool, dry area. Heavy soil and/or hard water generally require extra detergent. Is the home water pressure high enough for proper dishwasher filling? Home water pressure should be 20 to 120 psi (138 to 828 kPa) for proper dishwasher fill. If you have questions about your water pressure, call a licensed, qualified plumber. NOTE: To remove spots and film from dishes, try a white vinegar rinse.

This procedure is intended for occasional use only. Vinegar is an acid, and using it too often could damage your dishwasher. 1. Wash and rinse dishes. Use an air-dry or an energy saving dry option.

Remove all silverware or metal items. 2. Put 2 cups (500 mL) white vinegar in a glass or dishwasher-safe measuring cup on the bottom rack. 3. Run the dishwasher through a complete washing cycle using an air-dry or an energy saving dry option. Do not use detergent. Vinegar will mix with the wash water. Silica film or etching (silica film is a milky, rainbowcolored deposit; etching is a cloudy film) Sometimes there is a water/chemical reaction with certain types of glassware. This is usually caused by some combination of soft or softened water, alkaline washing solutions, insufficient rinsing, overloading the dishwasher, and the heat of drying. It might not be possible to avoid the problem, except by hand washing.

To slow this process use a minimum amount of detergent but not less than 1 tb (15 g) per load. Use a liquid rinse aid and underload the dishwasher to allow thorough rinsing. Silica film and etching are permanent and cannot be removed. Do not use heated drying. s Orange stains on plastic dishes or dishwasher interior Are large amounts of tomato-based foods on dishes placed in the dishwasher? Stains gradually fade over time. Regular use of heated drying will slow fading. Stains will not affect dishwasher performance. Regular use of a rinse cycle and an air-dry or energy-saving dry option will reduce the likelihood of staining. Dishes do not dry completely s Dishes are not dry Did you load your dishwasher to allow proper water drainage? Do not overload. Refer to the "Dishwasher Loading" section.

Use a liquid rinse aid to speed drying. Are the plastics wet? Plastics often need towel drying. Is the rinse aid dispenser empty? Refer to the "Rinse Aid Dispenser" section. Did you use an air-dry or energy-saving dry option? Use a heated drying option for dryer dishes. Dishes are damaged during a cycle s Chipping of dishes Did you load the dishwasher properly? Load the dishes and glasses so they are stable and do not strike together from washing action.

Minimize chipping by moving the rack in and out slowly. NOTE: Antiques, feather-edged crystal, and similar types of china and glassware might be too delicate for automatic dishwashing. Wash by hand. s Noises s Grinding, grating, crunching or buzzing sounds A hard object has entered the wash module (on some models). When the object is ground up, the sound should stop.

If the noise persists after a complete cycle, call for service. s White spots on cookware with nonstick finish Has the dishwasher detergent removed cookware seasoning? Reseason cookware after washing in the dishwasher. s Brown stains on dishes and dishwasher interior Does your water have high iron content?

Rewash dishes using 1-3 tsp (5-15 mL) of citric acid crystals added to the covered section of the detergent dispenser. Do not use detergent. Follow with a Normal wash cycle with detergent. If treatment is needed more often than every other month, the installation of an iron removal unit is recommended. 17 ASSISTANCE OR SERVICE Before calling for assistance or service, please check "Troubleshooting." It may save you the cost of a service call. If you still need help, follow the instructions below. When calling, please know the purchase date and the complete model and serial number of your appliance.

@@@To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages. s If you need replacement parts If you need to order replacement parts, we recommend that you use only FSP® replacement parts. These parts will fit right and work right because they are made with the same precision used to build every new ESTATE® appliance. To locate FSP® replacement parts in your area, call us or your nearest designated service center. Call the Estate Customer eXperience Center toll free: 1-800-253-1301. Our consultants provide assistance with: s Features and specifications on our full line of appliances. s s For further assistance If you need further assistance, you can write to us with any questions or concerns at: Estate Brand Home Appliances Customer eXperience Center 553 Benson Road Benton Harbor, MI 49022-2692 Please include a daytime phone number in your correspondence. Installation information. @@Service must be provided by a Whirlpool designated service company.



[You're reading an excerpt. Click here to read official ESTATE TUD8750SD user guide](http://yourpdfguides.com/dref/209051)
<http://yourpdfguides.com/dref/209051>

@@ITEMS WHIRLPOOL WILL NOT PAY FOR I.

@@2. @@Those consumable parts are excluded from warranty coverage. 3. Repairs when your major appliance is used for other than normal, single-family household use. 4.

Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by Whirlpool. 5. Any food loss due to refrigerator or freezer product failures. 6. Replacement parts or repair labor costs for units operated outside the United States or Canada.

7. Pickup and delivery. This major appliance is designed to be repaired in the home. 8. Repairs to parts or systems resulting from unauthorized modifications made to the appliance. 9. Expenses for travel and transportation for product service in remote locations. 10. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions. 11.

Replacement parts or repair labor costs when the major appliance is used in a country other than the country in which it was purchased. **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. WHIRLPOOL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE. Outside the 50 United States and Canada, this warranty does not apply. Contact your authorized Whirlpool dealer to determine if another warranty applies. If you need service, first see the "Troubleshooting" section of the Use & Care Guide. After checking "Troubleshooting," additional help can be found by checking the "Assistance or Service" section or by calling Whirlpool.**

In the U.S.A., call 1-800-253-1301. In Canada, call 1-800-807-6777.

12/05 Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service. Write down the following information about your major appliance to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label located on the product.

Dealer name _____ Address _____
Phone number _____ Model number _____
Serial number _____ Purchase date _____

W10073800 © 2006 Whirlpool Corporation. All rights reserved. ® Registered Trademark/TM Trademark of Whirlpool, U.S.A. 8/06 Printed in U.S.A. .



[You're reading an excerpt. Click here to read official ESTATE TUD8750SD user guide](#)
<http://yourpdfguides.com/dref/209051>