




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE DRYER. You'll find the answers to all your questions on the FRIGIDAIRE DRYER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE DRYER User guide FRIGIDAIRE DRYER Operating instructions FRIGIDAIRE DRYER Instructions for use FRIGIDAIRE DRYER Instruction manual FRIGIDAIRE DRYER

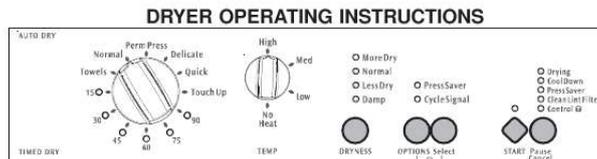

Before Operating Your Dryer

Read your dryer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best drying results.

WARNING To reduce the risk of fire, electric shock or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your dryer Owner's Guide before operating this appliance.

Operating Steps

Read "Drying Procedures" in your Owner's Guide. It explains these operating steps in detail.

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet. Close the door.
4. Select the cycle and drying temperature for each load. To change the temperature, turn the TEMP knob to the desired temperature.
5. A suitable dryness level and options will automatically be displayed for each cycle. To change the dryness level, press DRYNESS until the desired selection is made. To select an option, press OPTIONS until the indicator for a desired option flashes and press Select. Follow the same steps to delete an option. If a dryness level or option is not available for a cycle, it will not light.
6. The changes you make will be remembered the next time that cycle is selected. See the "Dryer Settings Chart" for more details.
7. Press START to begin cycle.
 - To pause the cycle or change settings, press Pause/Cancel once. To resume the cycle, press START again.
 - To stop or change the cycle, press Pause/Cancel twice.
8. A signal will sound at the end of the cycle and periodically during Press Saver when the Cycle Signal option is selected. When the cycle ends, remove items immediately and hang or fold.
9. Clean the lint screen after every load.

Cycle Selection

For best results, follow the fabric care label instructions on items to be dried.

Auto Dry

Auto Dry cycles take the guesswork out of drying time. The load will automatically be dried at the selected temperature to the desired dryness level. The dryer senses the moisture level of the load as it tumbles through heated air. Auto Dry cycles save time and energy and protect fabrics.

When the load has reached the selected dryness level, it will continue to tumble, unheated, during a Cool Down period. This helps reduce wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Towels

Select this Auto Dry cycle for towel loads.

Normal

Select this Auto Dry cycle for cotton items.

Perm Press

Select this Auto Dry cycle to dry cottons and blends with a non-iron finish.

Delicate

Select this Auto Dry cycle for knits and delicate items.

Quick

Select this cycle to quickly dry a small load made up of just a few items. It provides approximately 20 minutes of tumbling followed by a 10-minute cool down period.

Touch Up

Select Touch Up to help remove wrinkles from clean and dry items that were not taken from the dryer at the end of the cycle, have been stored in crowded closets or drawers, or unpacked from luggage following a trip. It provides approximately 10 minutes of tumbling followed by a 5-minute cool down period.

Timed Dry

To manually select the drying time for any load, turn the knob to a numbered setting. Drying times from 15 to 90 minutes are available in 15-minute increments. You will not be able to select a cycle or dryness level. Timed Dry is recommended when using the No Heat option.

Note: To change cycles, press Pause/Cancel twice.

Temperature Selection

For best results, follow the fabric care label instructions on items to be dried.

High is recommended for sturdy fabrics.

Medium is recommended for wrinkle free, permanent press and lightweight fabrics.

Low is recommended for delicate fabrics.

No Heat should only be used with a Timed Dry setting to dry items containing leathers, down, foam rubber, plastics or rubber-like materials; to freshen clothing, pillows or blankets; or to dust draperies.

PN 137102200 (0806)



[You're reading an excerpt. Click here to read official FRIGIDAIRE DRYER user guide](http://yourpdfguides.com/dref/3199887)
<http://yourpdfguides.com/dref/3199887>

Manual abstract:

@@@If a dryness level or option is not available for a cycle, it will not light. 6. The changes you make will be remembered the next time that cycle is selected. A signal will sound at the end of the cycle and periodically during Press Saver when the Cycle Signal option is selected. When the cycle ends, remove items immediately and hang or fold. 9. Clean the lint screen after every load. When the load has reached the selected dryness level, it will continue to tumble, unheated, during a Cool Down period. This helps reduce wrinkling and makes items easier to handle during unloading. Drying time varies depending on size and dampness of load, weight and fabric type.

Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time. Perm Press Select this Auto Dry cycle to dry cottons and blends with a noiron finish. delicate Select this Auto Dry cycle for knits and delicate items. Quick Select this cycle to quickly dry a small load made up of just a few items. @@@@You will not be able to select a cycle or dryness level.

@@ high is recommended for sturdy fabrics. @@Auto Dry Auto Dry cycles take the guesswork out of drying time. @@@@ auto Dry cycles save time dust draperies. And energy and protect fabrics. @@@@The settings can be changed before the cycle is started.

@@@ see the "Dryer Settings Chart" for more details. @@The cycle must be paused before the settings can be changed. Dryness Level @@ select Normal for most loads. Occasionally a load may seem too damp or over-dried at the end of the cycle. Select Damp Dry for items you wish to partially dry before hanging or ironing. Note: To prevent over-drying, not every dryness level is available with every cycle. options To select an option , press OPTIONS until the indicator for the desired option flashes and press Select. If an option is not available for a cycle, the indicator will not light. follow the same steps to delete an option. The Cycle Signal will sound at the end of the cycle and periodically during Press Saver.

Select Press Saver if the dried load might not be removed promptly at the end of the cycle. The dry load will continue tumbling without heat for 30 minutes to help reduce wrinkling. When the Cycle Signal is selected, a beep will be heard periodically. The load may be removed any time during Press Saver.

@@@@@.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](http://yourpdfguides.com/dref/3199887)

[DRYER user guide](http://yourpdfguides.com/dref/3199887)

<http://yourpdfguides.com/dref/3199887>