




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FAD704DUD. You'll find the answers to all your questions on the FRIGIDAIRE FAD704DUD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE FAD704DUD
User guide FRIGIDAIRE FAD704DUD
Operating instructions FRIGIDAIRE FAD704DUD
Instructions for use FRIGIDAIRE FAD704DUD
Instruction manual FRIGIDAIRE FAD704DUD

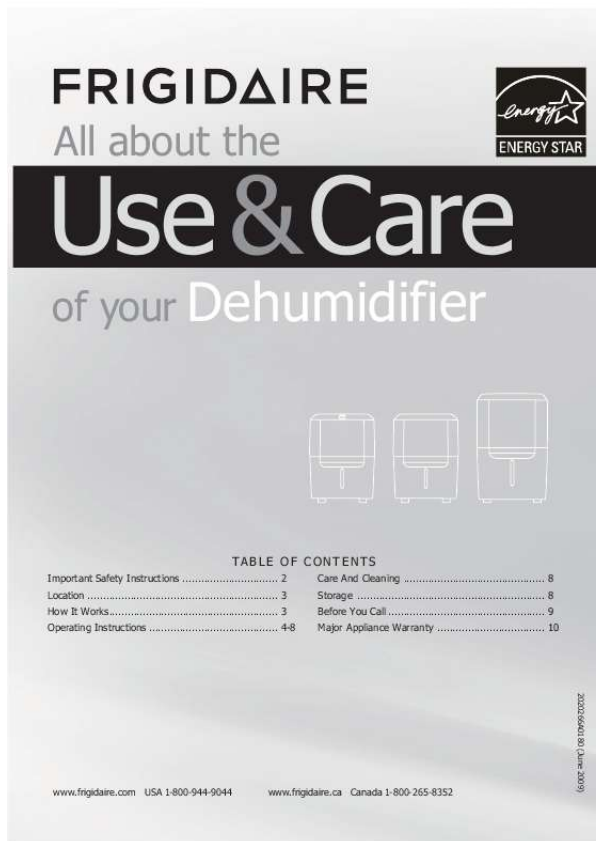

[You're reading an excerpt. Click here to read official FRIGIDAIRE FAD704DUD user guide](http://yourpdfguides.com/dref/3876223)
<http://yourpdfguides.com/dref/3876223>

Manual abstract:

.....
.....
.....
.....

2 Location

.....
.....
.....

.....
.....
.....
.....

.. 3 How It Works.....

.....
.....
.....

.....
.....
.....

..... 3 Operating Instructions ...

.....
.....
.....
.....

..... 4-8 Care And Cleaning .

.....
.....
.....

.....
.....
.....

..... 8 Storage

.....
.....
.....
.....

.....
.....
.....

..... 8 Before You Call

.....
.....
.....
.....

.....
.....

.. 9 Major Appliance Warranty ...

.....
.....
.....
.....

MANUAL. These instructions are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating, and maintaining any appliance.

WARNING Avoid fire hazard or electric shock. Do not use an extension cord or an adaptor plug. Do not remove any prong from the power cord. **WARNING** For Your Safety Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Read product labels for flammability and other warnings. Discard water from bucket. Water is not potable and cannot be used for drinking. Grounding type wall receptacle Do not, under any circumstances, cut, remove, or bypass the grounding prong. **WARNING** Child Safety Precautions Destroy the carton, plastic bags, and any packing materials immediately after the dehumidifier is unpacked. Children should never use these items for play.

Do not leave children unattended in an area where the appliance is operating. Do not use an extension cord or an adapter plug. Never unplug the dehumidifier by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle. Do not pinch, bend, or knot the power cord.

SAFETY PRECAUTIONS DANGER! Avoid Serious Injury or Death This dehumidifier contains no user-serviceable parts. Always call an authorized Electrolux servicer for repairs. Do not cut or damage the power cord. In the event of a malfunction (sparks, burning smell, etc.), immediately stop the operation, disconnect the power cord, and call an authorized Electrolux servicer.

Do not operate the dehumidifier with wet hands. Do not pull on the power cord. Do not drink any water from the dehumidifier. **SAFETY PRECAUTIONS CAUTION!** Avoid Injury or damage to the unit or other property Do not direct airflow at fireplaces or other heat related sources as this could cause flare ups. Do not climb on or place objects on the unit. Do not hang objects off the unit. Do not place containers with liquids on the unit. Turn off the dehumidifier at the power source when it will not be used for an extended period of time. Operate the unit with air filter in place. Do not block or cover the intake grille, discharge area and outlet ports.

Ensure that any electrical/electronic equipment is one yard away from the unit. Do not use or store flammable gases near the unit. 2009 Electrolux Home Products, Inc. All rights reserved. Location & How It Works Selecting a Location **IMPORTANT:** Location 1. Dehumidifier must be operated in an enclosed area to be most effective. Close all doors, windows, and other outside openings to the room. The effectiveness of the dehumidifier depends on the rate at which new moisture-laden air enters the room. 2. 3.

4. 5. The unit will not work properly if the temperature is out of this temperature range, or the performance of the unit will fall greatly. The "Compressor" circuit has an automatic 3 minute time delayed start if the unit is turned off and on quickly. This prevents overheating of the compressor and possible circuit breaker tripping.

Make sure the tank is fitted correctly otherwise unit will not turn on. 2009 Electrolux Home Products, Inc. All rights reserved. 3 Operating Instructions Operating Instructions Allow the unit to reach room temperature before operating. To begin operating the dehumidifier, follow these steps: **NOTE:** Unit must be upright for one hour prior to operating.

1. Plug the power cord into a properly grounded 115 volt AC outlet. **NOTE:** If the "BUCKET FULL" light is on, remove the bucket and re-install to reset the float switch. 2. To turn the unit on, press the ON/OFF button. The indicator light will show the setting you have selected. A higher fan speed will result in quicker moisture removal. 5. The CLEAN FILTER light will illuminate after 250 hours of operation.

Once that happens the above steps have to be repeated.

NOTE: 1. 2. To shut the unit down, press the ON/OFF button. **Fault Codes** 1. Emptying the Bucket: a. When the bucket is full, the unit will shut down and the BUCKET FULL indicator will illuminate. b. Do not move the unit at this time otherwise water may spill on the floor. c. Press sides of bucket gently to unclip the bucket from the unit.

d. Remove the bucket as shown in the photographs below and empty the bucket. **WARNING** Discard water from bucket. Water is not potable and cannot be used for drinking. e.

Replace the empty bucket back into the unit and once seated correctly, the unit will start up again. f. You should hear a click when the bucket is in the correct position If the bucket full light does not extinguish, check that the float is correctly snapped in place as indicated by the diagram. 2009 Electrolux Home Products, Inc. All rights reserved.

7 Operating Instructions, Care and Cleaning & Storage Removing Collected Water (continued) 2. Continuous Drainage: a. b. c. d. e. f. g. h. For continuous drainage operation, you will need a garden hose and a drain nearby to discharge the water into.

Unscrew the drain cap on the back side of the unit. (fig.1) Insert the female threaded end of the hose onto the drain connector of the unit. (fig.2) Screw the garden hose onto the threaded portion of the drain connector. (fig.3) Make sure the hose is secure so there are no leaks. Place the end of the hose into the drain. 1 fig. 2 fig.

3 fig. 4 **NOTE:** 1. Check the seal between the hose and the drain connector. 2. Filter a.

b. To remove the filter, remove Bucket then pull filter downwards. c. Wash the filter with clean water then dry. d.

Re-install the filter, then replace Bucket. 2. Cabinet a. Dust cabinet with an oil-free cloth, or using a damp cloth. b. Vacuum grill using brush attachment. 3. Water Bucket a. It may save you time and expense. Push plug firmly into wall outlet.

House fuse blown or circuit breaker tripped. Replace fuse with time delay type or reset circuit breaker. The dryness level you selected has been reached. Dehumidifier automatically shuts off when selected amount of the unit. 4. Products purchased "as-is" are not covered by this warranty. 5. Food loss due to any refrigerator or freezer failures. 6. Products used in a commercial setting.

7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. 8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FAD704DUD user guide](http://yourpdfguides.com/dref/3876223)
<http://yourpdfguides.com/dref/3876223>

Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory. 10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11.

Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska. 12. @ @ 13. @ @ @ @ CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. @ @ @ @ @ This warranty only applies in the USA and Canada. @ @ In Canada, your appliance is warranted by Electrolux Canada Corp.

Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

USA 1.800.944.9044 Electrolux Major Appliances North America P.O. Box 212378 Augusta, GA 30907 Canada 1.800.

265.8352 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 10 2009 Electrolux Home Products, Inc. All rights reserved.



[You're reading an excerpt. Click here to read official FRIGIDAIRE
FAD704DUD user guide
http://yourpdfguides.com/dref/3876223](http://yourpdfguides.com/dref/3876223)