




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FAD704TDP. You'll find the answers to all your questions on the FRIGIDAIRE FAD704TDP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FRIGIDAIRE FAD704TDP**  
**User guide FRIGIDAIRE FAD704TDP**  
**Operating instructions FRIGIDAIRE FAD704TDP**  
**Instructions for use FRIGIDAIRE FAD704TDP**  
**Instruction manual FRIGIDAIRE FAD704TDP**

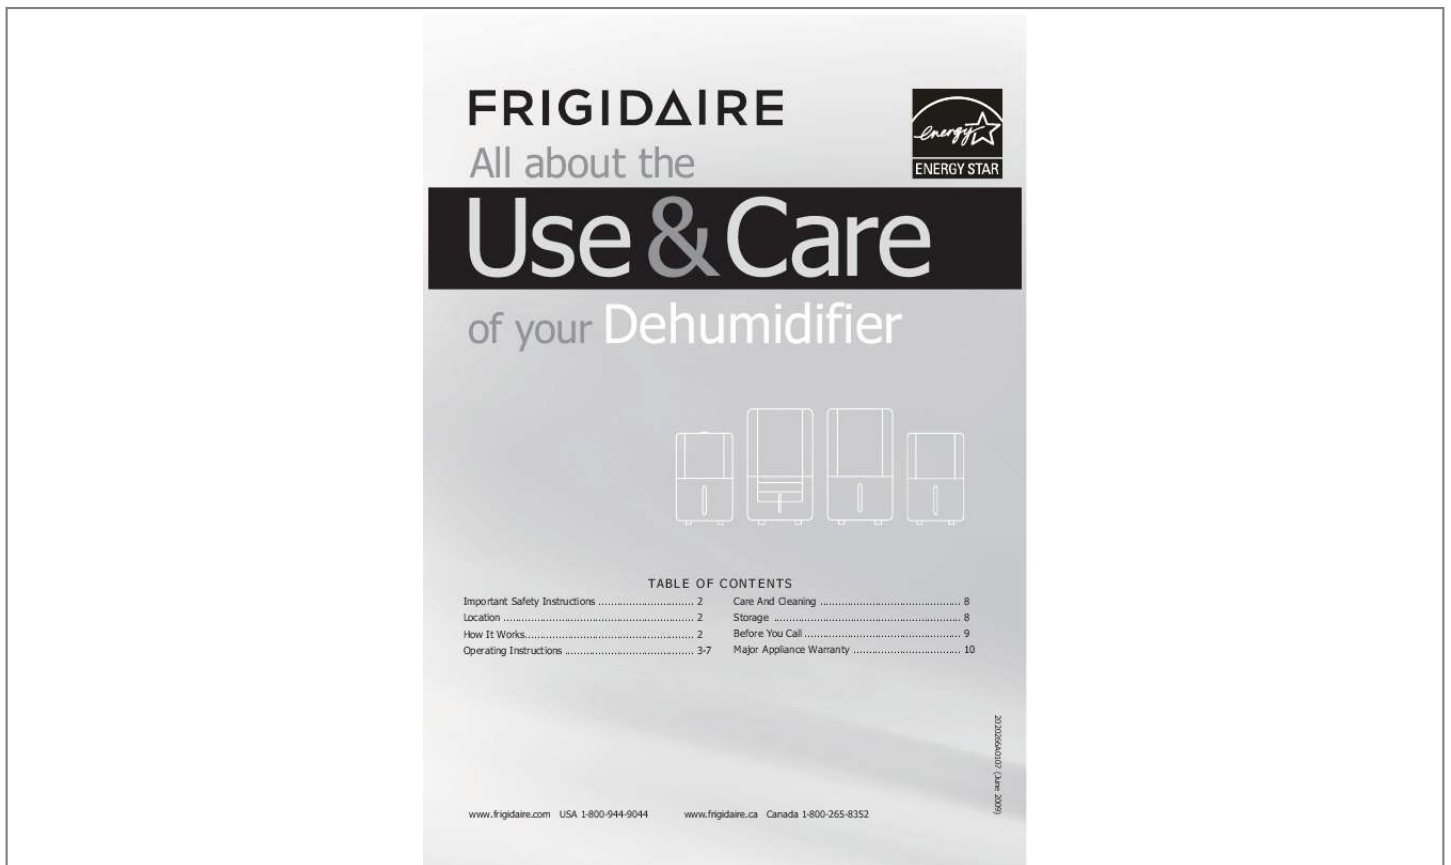

[You're reading an excerpt. Click here to read official FRIGIDAIRE FAD704TDP user guide](http://yourpdfguides.com/dref/3808601)  
<http://yourpdfguides.com/dref/3808601>

**Manual abstract:**

.....  
.....  
.....  
.....

*2 Location .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 2 How It Works.....*

.....  
.....  
.....

.....  
.....  
.....

*..... 2 Operating Instructions ...*

.....  
.....  
.....  
.....

*..... 3-7 Care And Cleaning .*

.....  
.....  
.....

.....  
.....  
.....

*..... 8 Storage .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 8 Before You Call ....*

.....  
.....  
.....  
.....

.....  
.....

*.. 9 Major Appliance Warranty ...*

.....  
.....  
.....  
.....

instructed in this USE & CARE MANUAL. These instructions are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating, and maintaining any appliance.

**WARNING** Avoid fire hazard or electric shock. Do not use an extension cord or an adaptor plug. Do not remove any prong from the power cord. **WARNING For Your Safety** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Read product labels for flammability and other warnings. Discard water from bucket. Water is not potable and cannot be used for drinking. Grounding type wall receptacle Do not, under any circumstances, cut, remove, or bypass the grounding prong. **WARNING Child Safety Precautions** Destroy the carton, plastic bags, and any packing materials immediately after the dehumidifier is unpacked. Children should never use these items for play.

Do not leave children unattended in an area where the appliance is operating. @@@@Do not use an extension cord or an adapter plug. Never unplug the dehumidifier by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle. Do not pinch, bend, or knot the power cord.

**Location** Selecting a Location **IMPORTANT:** 1. Dehumidifier must be operated in an enclosed area to be most effective. Close all doors, windows, and other outside openings to the room. The effectiveness of the dehumidifier depends on the rate at which new moisture-laden air enters the room. 2.

Place dehumidifier in a location that does not restrict airflow through the front of the unit or out of the louvers on the left side of cabinet. 3. A dehumidifier operating in a basement will have little or no effect in drying an adjacent enclosed storage area, such as a closet, unless there is adequate circulation of air in and out of the area. It may be necessary to install a second dehumidifier in the enclosed area for satisfactory drying. 4. The dehumidifier must be installed on a level floor that will support it with a full bucket of water. 5. There should be a minimum of 12 inches clearance around the dehumidifier. **How It Works** When the unit is started, the fan begins to pull moisture-laden air across the dehumidifying coils. The coils condense or draw moisture from the air, and air flows through the side louvers into the room as dry, warm air.

Moisture removed from air is collected in a bucket on the front of the dehumidifier. The unit is designed to operate between 41 °F (5 °C), and 96 °F(35 °C). The "Compressor" circuit has an automatic 3 minute time delayed start if the unit is turned off and on quickly. This prevents overheating of the compressor and possible circuit breaker tripping. Make sure the tank is fitted correctly otherwise unit will not turn on. 2 2009 Electrolux Home Products, Inc. All rights reserved. Operating Instructions Operating Instructions Allow the unit to reach room temperature before operating. To begin operating the dehumidifier, follow these steps: **NOTE:** Unit must be upright for one hour prior to operating. 1.

Plug the power cord into a properly grounded 115 volt AC outlet. The POWER indicators will illuminate. **NOTE:** If the "BUCKET FULL" light is on, remove the bucket and re-install to reset the float switch. 2. To turn the unit on press the ON/OFF button.

The unit will run in the factory setting of CONTINUOUS and high fan speed. In the Continuous Mode the unit will only display CO and not the room humidity. It is recommended you leave the unit running in the CONTINUOUS setting for the first three or four days until the sweating and dampness odors have stopped. 2009 Electrolux Home Products, Inc. All rights reserved.

3 Operating Instructions Operating Instructions (continued) 3. After a few days when the Relative Humidity has declined, press the HUMIDITY or buttons to choose a value between 35% to 85%, so the room is kept at a comfortable concentration. Pressing the or buttons will change the humidity selection in 5% increments. After you have set the desired humidity, the readout will display the actual room humidity. If at any time you want to return to the CONTINUOUS Mode, pressing the HUMIDITY button will lower the Relative Humidity through the 5% increments until the display reads CO. 4. You can also use the FAN button to change the fan speed to HIGH or LOW. The indicator light will show the setting you have selected. A higher fan speed will result in quicker moisture removal. 5.

The FILTER RESET light will illuminate after 250 hours of operation. @@@@

Emptying the Bucket: a. @@@@c. Press sides of bucket gently to unclip the bucket from the unit. d. @@Water is not potable and cannot be used for drinking. e. @f. @@Continuous Drainage: a. b. c. d. e. f.

g. h. i. j. For constant drainage operation, you will need a garden hose and a drain nearby to discharge the water into.

Remove the bucket from the unit and set aside. Lift up the side flap located on the right side of the unit as looking from the front. (fig.1) Insert the female threaded end of the hose through the opening. (fig.2) Screw the garden hose onto the threaded portion of the tray underneath the bucket opening. (fig.3) Make sure the hose is secure so there are no leaks. Direct the hose toward the drain, making sure that there are no kinks that will stop the water flowing. Place the end of the hose into the drain.

Place the bucket back in the unit and make sure that it is located correctly. (fig.4) Select the desired humidity setting and fan speed on the unit for continuous draining to start. fig. 1 fig. 2 fig. 3 fig. 4 **NOTE:** If the unit stops operating check that the bucket full light is illuminated. If it is remove the bucket and empty the contents and then check the seal between the hose and the drip tray. If there is a small leak then replace the hose gasket and re-tighten the hose 2009 Electrolux Home Products, Inc.

All rights reserved. 7 Care And Cleaning & Storage Care And Cleaning 1. Filter a. Remove the filter every two weeks based on normal operating conditions. b.

To remove the filter, remove Bucket then pull filter downwards. c. Wash the filter with clean water then dry. d. Re-install the filter, replace Bucket. 2. Cabinet a. Dust cabinet with an oil-free cloth, or using a damp cloth. b. Vacuum grill using brush attachment. 3. Water Bucket a. Clean bucket with warm water and detergent. Storage When unit is not in use unplug and use the cord wrap shown for your model type.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FAD704TDP user guide](http://yourpdfguides.com/dref/3808601)  
<http://yourpdfguides.com/dref/3808601>

1.

2. 8 2009 Electrolux Home Products, Inc. All rights reserved. Before You Call Before calling for service, review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance. OCCURRENCE DEHUMIDIFIER

DOES NOT OPERATE. SOLUTION Wall plug disconnected. Push plug firmly into wall outlet. House fuse blown or circuit breaker tripped.

Replace fuse with time delay type or reset circuit breaker. The dryness level you selected has been reached. Dehumidifier automatically shuts off when selected amount of moisture has been removed from the air. If you want to remove more moisture, Select 'CONTINUOUS' by using the humidity button or knob. After the dehumidifier starts, reset the control to the desired setting.

Bucket not installed properly. See "Removing Collected Water". Water in the bucket has reached its preset level. Dehumidifier automatically turns off when this occurs. Empty bucket and return bucket to position.

Dehumidifier is not turned on. Turn unit on. "BUCKET FULL" light is on. Remove bucket, empty water and re-install correctly. DEHUMIDIFIER RUNS TOO MUCH. Windows or doors near dehumidifier are open to outdoors. Close all windows or doors to outside. Area to be dehumidified is too large. Check with your dealer to see if capacity is adequate. O Air movement through dehumidifier is blocked.

Grill may be dirty. Use brush attachment of vacuum cleaner to clean grill. See "Care and Cleaning". Dehumidifier must be placed in a space that does not restrict air flowing into the rear coil or out of the front grill. Dehumidifier has been installed or restarted recently. The higher the moisture in the room, the longer the dehumidifier will operate. Dehumidifier is in the CONT mode and will remain on in this mode use the humidity button or ARRANTIES;

LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

@@@This warranty only applies in the USA and Canada. @@In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty.

Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1.800.944.

9044 Electrolux Major Appliances North America P.O. Box 212378 Augusta, GA 30907 Canada 1.800.265.8352 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 10 2009 Electrolux Home Products, Inc. All rights reserved. .



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[FAD704TDP user guide](#)

<http://yourpdfguides.com/dref/3808601>