



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FDB1100RH. You'll find the answers to all your questions on the FRIGIDAIRE FDB1100RH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE FDB1100RH
User guide FRIGIDAIRE FDB1100RH
Operating instructions FRIGIDAIRE FDB1100RH
Instructions for use FRIGIDAIRE FDB1100RH
Instruction manual FRIGIDAIRE FDB1100RH

Dishwasher
Use & Care Guide
1500 Series with Fully Electronic Control



For a more indepth description of your product's features and solutions to common dishwasher problems visit our Web Site at www.frigidaire.com to download a free copy of the Use and Care Manual or simply call us at 1-800-944-9044 and one will be sent to you.

Version en español
Si desea obtener una copia en español de este Manual del Usuario, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 154659803, Spanish Use & Care Manual, Electrolux Home Products North America, P.O. Box 212378, Augusta, GA 30917.

Product Registration Card
Please fill in completely, sign and return promptly!

Safety Instructions.....2

Operating Instructions.....3

Dishwasher Features.....4

Preparing and Loading Dishes.....5

Dishwasher Dispenser and Detergents.....6

Care and Cleaning.....7

Consumer Services
Warranty & Service.....8

Record All Information For Future Reference

Brand: _____ Purchase Date: _____

Model #: _____

Serial #: _____
(see Features page for location)

Questions? 1-800-944-9044
(United States)

1-866-213-9397
(Canada)

READ AND SAVE THESE INSTRUCTIONS PIN 154659801 (0706)



[You're reading an excerpt. Click here to read official FRIGIDAIRE FDB1100RH user guide](http://yourpdfguides.com/dref/3808605)
<http://yourpdfguides.com/dref/3808605>

Manual abstract:

.....
.....
.....
.....

...2 Operating Instructions.....

.....

..3 Dishwasher Features...

.....

....4 Preparing and Loading Dishes.....

.....

.....

.....

.....

.....

..5 Dishwasher Dispenser and Detergents...

.....

.....

.....

6 Care and Cleaning.....

.....

.....

.....

.....

.....7 Consumer Services Warranty & Service....

.....

.....

.....

.....8 Record All Information For Future Reference For a more indepth description of your product's features and solutions to common dishwasher problems visit our Web Site at www.frigidaire.com

frigidaire.com to download a free copy of the Use and Care Manual or simply call us at 1-800-944-9044 and one will be sent to you. Brand: Model #: Serial #: (see Features page for location) Purchase Date: Questions? 1-800-944-9044 (United States) Versión en español 1-866-213-9397 (Canada) Si desea obtener una copia en español de este Manual del Usuario, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 154659803, Spanish Use & Care Manual, Electrolux Home Products North America, P.O. Box 212378, Augusta, GA 30917. READ AND SAVE THESE INSTRUCTIONS P/N 154659801 (0706) Important Safety Instructions make sure disposer is completely empty before running dishwasher. This symbol will help alert you to such dangers as personal injury, burns, fire, and electrical shock. · Disconnect electrical power to dishwasher before servicing. · Repairs should be done by a qualified technician.

To reduce the risk of fire, electrical shock, or injury when using your dishwasher, follow basic precautions including the following: · Do not tamper with controls. · Do not touch the heating element during or immediately after use. · Use care unloading the dishware when the SANITIZE option has been selected. Contents may be hot to the touch immediately after the end of cycle. Water vapor from the vent may be hot to the touch when the SANITIZE option has been selected.

Use care and do not let small children play around or touch the vent area of the dishwasher. - Locate sharp items and knives so that they are not likely to damage the door seal or tub. @@@@HYDROGEN GAS IS EXPLOSIVE. @@This will release any accumulated hydrogen gas. HYDROGEN GAS IS FLAMMABLE.

Do not smoke or use an open flame during this time. @@ · Use your dishwasher only as instructed in this Use and Care Manual. · This Manual does not cover every possible condition and situation that may occur. Use common sense and caution when installing, operating and maintaining any appliance. · NSF certified residential dishwashers are not intended for licensed food establishments. · DISHWASHER MUST BE ELECTRICALLY GROUNDED. Read the Installation Instructions for details. · This dishwasher is designed to operate on regular house current (120 V, 60 Hz). Use a circuit equipped with a 15 ampere fuse or circuit breaker. Use a 20 ampere fuse if dishwasher is connected with a food waste disposer.

· Do not operate dishwasher unless all enclosure panels are in their proper place. · To avoid entrapment and/or suffocation, remove door or door latch mechanism from any dishwasher that is discarded or not in use. · Keep young children and infants away from dishwasher when it is operating. · Do not let children abuse, sit, stand or play on door or racks of a dishwasher. · Use only detergents and rinse agents recommended for use in a dishwasher. · Store dishwasher detergent and rinse agents out of the reach of children. · Do not wash plastic items unless marked "dishwasher safe" or the equivalent. Check with manufacturer for recommendations, if not marked. Items that are not dishwasher safe may melt and create a potential fire hazard. · If the dishwasher drains into a food disposer, ©2003 Electrolux Home Products, Inc.

All rights reserved. · · When loading items to be washed: SAVE THESE INSTRUCTIONS Printed in U.S.A. 2 Operating Instructions Appearance may vary from your model.

Cycle Chart Cycle Pots & Pans For pots, pans, casseroles and dinnerware with dried-on or baked-on soils. Normal Wash For regularly soiled dishes and

silverware. To Select Cycle Water (approx.) 8.5 gal.

7.1 imp. gal. 32.2 liters Time* (minutes) 104 Washes/ Rinses 2 washes 5 rinses Select POTS & PANS and desired OPTIONS. HI-TEMP WASH and SANITIZE will automatically be provided. Select NORMAL WASH and desired OPTIONS. 6.1 to 8.4 gal.

5.1 to 7.0 imp. gal. 23.1 to 31.8 liters 4.9 gal. 4.1 imp.

gal. 18.6 liters 89 2 washes 3 rinses Eco Wash For lightly soiled and pre-rinsed dishes and silverware. Upper Rack 74 Select ECO WASH and desired OPTIONS. 2 wash 2 rinses For lightly soiled or pre-rinsed Select UPPER RACK and dishes and silverware when desired OPTIONS.

you do not have a full load. Rinse Only For rinsing dishes that will be washed later. 3.7 gal. 3.

1 imp. gal. 14.0 liters 2.4 gal. 2.0 imp. gal. 9.1 liters 65 2 wash 1 rinses 18 2 rinses Select RINSE ONLY.

DO NOT USE detergent. * Includes drying time. 3 Dishwasher Features Your dishwasher cleans by spraying a mixture of hot water and detergent through the spray arms against soiled surfaces. Next, the dishwasher fills with water covering the filter area. Water is then pumped through the filter and spray arms. Soil particles go down the drain as the water is pumped out and replaced with clean water. The number of water fills will vary with the cycle being used. Nozzle

Cup Shelves (on some models) Serial Label (located on right side of tub) Middle Spray Arm Bottom Rack Silverware Basket Lower Spray Arm Overflow Protector Detergent Dispenser Rinse Aid Dispenser Glass Trap Self-Cleaning Filter Heating Element Top Rack Tub Gasket Vent Appearance may vary from your model. Very Important Information--Read Before Operating Your Dishwasher! @@@@ Then the lower arm rotates and circulates water.

@@@@ Select desired CYCLE Select desired OPTIONS.

The indicator light above the pad will glow when selected. 7. Run hot water faucet nearest dishwasher until water is hot. Turn water off. 8.

To start, press START/CANCEL pad. 1. 2. 3. 4.

5. @@@@ Hot water is needed for best dishwashing and drying results. @@@@@@ This option is available in POTS & PANS, NORMAL WASH and ECO WASH. @@ Washing action will continue during the water heating delay. @@@@ To turn off the SANITIZE option, press the pad a second time.

@@@ Wait until water use is reduced before starting dishwasher. @@@@@@ · Hold a candy or meat thermometer in stream of water to check the temperature. · If temperature is below 120°F (49°C), have a qualified person raise the hot water heater thermostat setting. Important: Before starting a cycle, run hot water at the tap to clear cool water from pipe. Heated Dry The HEATED DRY option in combination with rinse aid will enhance drying performance.

HEATED DRY option is available on all cycles except ECO WASH & RINSE ONLY. A HEATED DRY option in combination with rinse aid will enhance drying performance. The energy required to use these options costs pennies per cycle.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[FDB1100RH user guide](#)

<http://yourpdfguides.com/dref/3808605>

You may choose to select the option; however you will have items in your dish load that will not be completely dry at the end of the cycle. 5 Dishwasher Dispenser & Detergents Filling the Detergent Dispenser The detergent dispenser has one main wash and one pre wash cup. The covered cups open automatically to release detergent. · Use only fresh automatic dishwashing detergent. Other detergents will cause oversudsing. When using automatic dishwashing detergent tabs, place one tab in main wash cup and close. Add detergent just before starting cycle.

Store detergent in a cool, dry location. Moist or caked detergent will not dissolve properly. Rinse Aid Rinse aid greatly improves drying and reduces water spots and filming. Water "sheets" off dishes rather than forming water droplets that cling and leave spots. A dispenser, located next to the detergent cup, automatically releases a measured amount of rinse aid during the last rinse.

If spotting and poor drying are problems, increase the amount of rinse aid dispensed by rotating the dial to a higher number. The dial is located under the dispenser cap. The indicator will be dark when full and will show clear when it is time to refill. To add liquid rinse aid, turn dispenser cap 1/4 turn counterclockwise and lift out. Pour in rinse aid until liquid touches the indicated fill level.

Replace cap. Do not overfill since this can cause oversudsing. Wipe up any spills with a damp cloth. · · · The use of industrial grade detergent can damage the heating coil and other parts of the dishwasher leading to damage to the unit and surrounding property. Use only household grade automatic dishwasher detergents. The dispenser holds enough for 35 to 140 washes, depending on setting. Dispenser Opening Indicator How much Detergent to use The amount of detergent to use depends on the water hardness. Water hardness is measured in grains per gallon. Using too little detergent can result in poor cleaning and hard water filming or spotting. Using too much detergent in soft water can cause a permanent film called etching.

Your local water company, water softener company or county extension agent making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory. 10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska. 12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc. 13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. @@THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

@@@In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

USA 1.800.944.9044 Electrolux Major Appliances North America P.O. Box 212378 Augusta, GA 30907 Canada 1.800.668.4606 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 8 .



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[FDB1100RH user guide](#)

<http://yourpdfguides.com/dref/3808605>