




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FEQ1442ES. You'll find the answers to all your questions on the FRIGIDAIRE FEQ1442ES in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE FEQ1442ES
User guide FRIGIDAIRE FEQ1442ES
Operating instructions FRIGIDAIRE FEQ1442ES
Instructions for use FRIGIDAIRE FEQ1442ES
Instruction manual FRIGIDAIRE FEQ1442ES

Use & Care Guide
Gas & Electric Dryer
Guide de L'Utilisateur
Secadora a Gas y Eléctrica

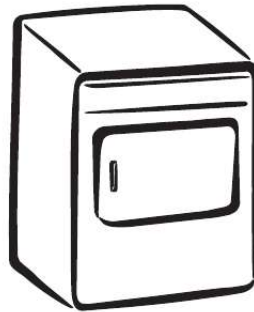

www.frigidaire.com

P/N 134674100B (0806)



[You're reading an excerpt. Click here to read official FRIGIDAIRE FEQ1442ES user guide](http://yourpdfguides.com/dref/3258557)
<http://yourpdfguides.com/dref/3258557>

Manual abstract:

This Read and Save These Instructions book contains valuable information about: Record Your Model and Serial Numbers The model and serial numbers of your dryer are found on the dryer · Operation serial plate located of the left side of the door opening. Record and · Care retain these numbers. · Service Notes les numéros de modèle et de série Keep it in a safe place. Model Number _____ This Use and Care Guide provides general operating Serial Number _____ Purchase Date _____ instructions for your dryer. It also contains information about features for several other models. Your dryer may not have every feature included. Use the dryer only as instructed in this Use & Care Guide and the Operating Instructions included with your dryer. Pedestal A pedestal accessory, Model No. NLPWD15 (White), NLPWD15GB (Glacier Blue), NLPWD15P (Platinum) and NLPWD15E (Black) specifically designed for this washer may be used when elevating the washer for ease of use. Failure to use accessories certified by the manufacturer could result in personal injury, property damage or damage to the washer. Important Safety Instructions Your safety and the safety of others is very important. We have provided many important safety messages in the Use and Care Guide, Operating Instructions, Installation Instructions and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you or others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING". These words mean: DANGER You will be killed or seriously injured if you don't follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. - WHAT TO DO IF YOU SMELL GAS: · Do not try to light any appliance. @@ · Clear the room, building or area of all occupants. @@ Follow the gas supplier's instructions. @@ Installation and service must be performed by a qualified installer, service agency or the gas supplier. 2 ELECTRIC DRYERS: 14-30R DRYER FUSED 30 AMP 120/240 V OR 120/208 V WALL RECEPTACLE CORRECT Use this way ONLY Important Safety Instructions Con't Grounding type wall receptacle GAS DRYERS: Do not under any circumstances cut, remove or bypass the grounding prong from this plug DRYER SERVICE CORD Power supply cord with 3-prong grounding plug CORRECT Use this way ONLY Avoid fire hazard or electrical shock. Do not use an adaptor plug or extension cord or remove grounding prong from electrical power cord. Failure to follow this warning can cause serious injury, fire or death. Note: The instructions appearing in this Use and Care Guide are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating and maintaining any appliance.

You can be killed or seriously injured if you don't follow these Important Safety Instructions: · To reduce the risk of fire, electrical shock, or injury to persons when using this dryer, comply with the basic warnings listed below. · Failure to comply with these warnings could result in serious personal injuries. Prevent Fire · Do not dry items that have been previously cleaned in, soaked in, or spotted with gasoline, cleaning solvents, kerosene, waxes, etc. Do not store these items on or near the dryer. These substances give off vapors that could ignite or explode. · Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. @@@@ · Clean the lint screen before or after each load. @@@@ See Care and Cleaning. @@ Fire hazard, overheating and damage to fabrics can occur.

@@@ · Risk of Fire - A clothes dryer produces combustible lint. The dryer must be connected to an exhaust outdoors. @@ · Do not obstruct the flow of ventilating air. @@ · Do not spray any type of aerosol into, on or near dryer at any time. · Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.

· Failure to comply with these warnings could result in fire, explosion, serious bodily injury and/or damage to the rubber or plastic parts of the dryer. Protect Children · Do not allow children to play on or in the dryer. Close supervision of children is necessary when the dryer is used near children. As children grow, teach them the proper, safe use of all appliances. · Destroy the carton, plastic bag and other packing materials after the dryer is unpacked.

Children might use them for play. Cartons covered with rugs, bedspreads or plastic sheets can become airtight chambers. · Keep laundry products out of children's reach. To prevent personal injury, observe all warnings on product labels. · Before the dryer is removed from service or discarded, remove the dryer door to prevent accidental entrapment. · Failure to comply with these warnings could result in serious personal injuries. SAVE THESE INSTRUCTIONS 3 Printed in U.S.A. Important Safety Instructions Con't Prevent Injury · To prevent shock hazard and assure stability during operation, the dryer must be installed and electrically grounded by a qualified service person in accordance with local codes.

Installation instructions are packed in the dryer for the installer's reference. Refer to INSTALLATION INSTRUCTIONS for detailed grounding procedures. If the dryer is moved to a new location, have it checked and reinstalled by a qualified service person. · To prevent personal injury or damage to the dryer, the electrical power cord of a gas dryer must be plugged into a properly grounded and polarized 3-prong outlet. The third grounding prong must never be removed. Never ground the dryer to a gas pipe. Do not use an extension cord or an adaptor plug. · ALWAYS disconnect the dryer from the electrical supply before attempting any service or cleaning. Failure to do so can result in electrical shock or injury. · Do not use any type spray cleanser when cleaning dryer interior.

Hazardous fumes or electrical shock could occur. @@@@ Use only authorized factory parts. - Do not tamper with controls.

@@@@@ @1. Prepare items for drying.

@@ · Separate dark items from light-colored items.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FEQ1442ES user guide](http://yourpdfguides.com/dref/3258557)

<http://yourpdfguides.com/dref/3258557>

Separate items that shed lint from those that attract lint. If an item sheds lint, turn it inside out. @@Close zippers, fasten hooks and Velcro®-like fasteners. Tie strings and sashes to prevent snagging and tangling.

· If possible, turn pockets inside out for even drying. · Check for stains which may not have been removed in washing. Dryer heat may permanently set some stains. Repeat stain removal process before drying. @@2. Check that lint screen is clean and in place. 3. Load the dryer. · The average load will fill the drum 1/3 to 1/2 full. Items need room to tumble freely for even drying and less wrinkling.

Do not overload dryer. · When drying large items, dry only 2 or 3 at a time. Fill out the load with small and medium sized items. @@ · Do not overdry items. Overdrying can cause wrinkling, shr cleansers. @@Rinse several times with clear water. @@Or, touch residue with the sticky side of the tape or label.

@@@@@@@@@@@@@@@@. Some "silk-like" fabrics should be air dried. · Use proper drying temperature. @@ · Do not overload dryer. @@@@ · Check that lint screen is clean and in place. · Use fabric softener to lubricate fibers. @@@@@@electricity. @@when cycle began. · Use lint brush or roller to remove lint.

@@This is due to abrasion from normal wear. · Overdrying. · Use a lint brush or shaver to remove pills. Pilling (Fibers break off, ball up and cling to fabric.) Shrinking · Irreversible condition.

· Follow fabric care label directions. · If shrinking is a concern, check load often. · Remove items while slightly damp and hang or lay flat to complete drying. · Block knits into shape. · Do not overload dryer. · Remove items as soon as cycle ends. Wrinkling · Overloading. · Leaving items in dryer after cycle ends. · Reduce load size and tumble at medium or low heat for 5-10 minutes. · Remove items immediately.

Hang or fold. 6 Avoid Service Checklist OCCURRENCE Dryer does not start. Before calling for service, review this list. It may save both time and expense. The list includes common occurrences that are not the result of defective workmanship or materials in this dryer. POSSIBLE CAUSE Electrical power cord is not securely plugged in or plug may be loose. House fuse blown or circuit breaker tripped. SOLUTION Make sure the plug fits tightly in wall outlet. Reset circuit breaker or replace fuse. Make sure electrical line is not overloaded and the dryer is on a separate circuit.

Thermal limiter tripped. Dryer runs but won't heat. There are 2 house fuses in the dryer circuit. @@Gas supply valve is not open (gas models). @@@@Drying cycle takes too long, outside of the dryer feels too hot or smells hot.

Lint screen is clogged with lint. Call authorized service person for replacement. Replace fuse. Check to make sure supply valve is open. See INSTALLATION INSTRUCTIONS for procedure.

See INSTALLATION INSTRUCTIONS. Refill or replace tank. Dryer should heat when utility service is restored. Make sure all lint has been removed from the dryer lint screen before starting each cycle. Exhaust duct must be at least 4 inches in diameter and made of rigid or flexible metal. When in place, the duct must have no more than two 90° bends and must not exceed length listed in INSTALLATION INSTRUCTIONS. Exhaust duct requirements have not been met. Electric dryer is connected to a 208 volt circuit. Drying procedures have not been followed. Outside exhaust hood or exhaust duct may be clogged or restricted.

High humidity. Excessive wriny obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1.800.944.9044

Electrolux Major Appliances North America P.O. Box 212378 Augusta, GA 30907 Canada 1. 800.668.4606 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 .



[You're reading an excerpt. Click here to read official FRIGIDAIRE FEQ1442ES user guide](http://yourpdfguides.com/dref/3258557)
<http://yourpdfguides.com/dref/3258557>