



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FFTR1814L. You'll find the answers to all your questions on the FRIGIDAIRE FFTR1814L in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE FFTR1814L
User guide FRIGIDAIRE FFTR1814L
Operating instructions FRIGIDAIRE FFTR1814L
Instructions for use FRIGIDAIRE FFTR1814L
Instruction manual FRIGIDAIRE FFTR1814L

FRIGIDAIRE

All about the

Use & Care

of your Refrigerator



TABLE OF CONTENTS

Important Safety Instructions.....	2	Controls.....	9
Installation.....	4	Normal Operating Sounds and Sights.....	10
Door Removal Instructions.....	5	Care and Cleaning.....	11
Handle Installation.....	6	Before you Call.....	12
Connecting Water Supply.....	8	Major Appliance Warranty.....	13
Ice Service.....	9		

www.frigidaire.com USA 1-800-944-9044 www.frigidaire.ca Canada 1-800-265-8352

©2008 ARIQ 1088292XK



[You're reading an excerpt. Click here to read official FRIGIDAIRE FFTR1814L user guide](http://yourpdfguides.com/dref/3876186)
<http://yourpdfguides.com/dref/3876186>

Manual abstract:

· Avoid contact with any moving parts of automatic ice maker. @ @ It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. Ice Maker House water supply connected to refrigerator No water leaks present at all connections recheck in 24 hours Ice maker is turned ON Ice & water dispenser operates correctly Front filter must be flushed with filter housing (select models) DANGER DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. Final Checks Shipping material removed Fresh food and freezer temperatures set Crisper humidity controls set Registration card sent in WARNING WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. CAUTION CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. IMPORTANT IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related. 2 IMPORTANT SAFETY INSTRUCTIONS Child Safety Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the refrigerator is unpacked. Children should NEVER use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

Fault Interrupter (GFI) circuit. Do not use an extension cord or adapter plug. · If the power cord is damaged, it should be replaced by an authorized service technician to prevent any risk. · Never unplug the refrigerator by pulling on the power cord. Always grip the plug firmly, and pull straight out from the receptacle to prevent damaging the power cord.

· Unplug the refrigerator before cleaning and before replacing a light bulb to avoid electrical shock. · Performance may be affected if the voltage varies by 10% or more. Operating the refrigerator with insufficient power can damage the compressor. Such damage is not covered under your warranty. ·

Do not plug the unit into an electrical outlet controlled by a wall switch or pull cord to prevent the refrigerator from being turned off accidentally.

Proper Disposal of your refrigerator or Freezer risk of child entrapment Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators or freezers are still dangerous even if they will sit for "just a few days". If you are getting rid of your old refrigerator or freezer, please follow the instructions below to help prevent accidents. Proper Disposal of refrigerators/Freezers We strongly encourage responsible appliance recycling/disposal methods. Check with your utility company or visit www.recyclemoldfridge.com for more information on recycling your old refrigerator. Before you throw away your old refrigerator/freezer: · Remove doors. · Leave shelves in place so children may not easily climb inside. · Have refrigerant removed by a qualified service technician.

IMPORTANT Pressing and holding the On/Off button for three (3) seconds, located on the left side of the temperature control panel (Electronic controls), or turning the Freezer and Fresh Food controls to "0" (Mechanical controls) will disable your refrigerator's cooling system, but does not disconnect the power to the light bulb and other electrical components. To turn off power to your refrigerator you must unplug the power cord from the electrical outlet. WARNING These guidelines must be followed to ensure that safety mechanisms in this refrigerator will operate properly. Electrical information · The refrigerator must be plugged into its own dedicated 115 Volt, 60 Hz., 15 Amp, AC only electrical outlet. The power cord of the appliance is equipped with a three-prong grounding plug for your protection against electrical shock hazards. It must be plugged directly into a properly grounded three prong receptacle. The receptacle must be installed in accordance with local codes and ordinances. Consult a qualified electrician. Avoid connecting refrigerator to a Ground CAUTION To avoid personal injury or property damage, handle tempered glass shelves carefully.

Shelves may break suddenly if nicked, scratched, or exposed to sudden temperature change. 3 INSTALLATION This Use & Care Guide provides general operating instructions for your model. Use the refrigerator only as instructed in this Use & Care Guide. Before starting the refrigerator, follow these important first steps. Leveling All four corners of your refrigerator must rest firmly on a solid floor.

Your refrigerator is equipped with adjustable front rollers or front leveling screws to help level your unit. To level your refrigerator: 1 Remove toe grille. 2 Use flat-blade screwdriver or 3/8" socket wrench to adjust front rollers. Use adjustable wrench to adjust leveling screws. Location ·

Choose a place that is near a grounded electrical outlet.

Do Not use an extension cord or an adapter plug. · If possible, place the refrigerator out of direct sunlight and away from the range, dishwasher or other heat sources. · The refrigerator must be installed on a floor that is level and strong enough to support a fully loaded refrigerator. ·

Consider water supply availability for models equipped with an automatic ice maker. If you do not hook up water to the refrigerator, remember to turn the ice maker off. CAUTION Do Not install the refrigerator where the temperature will drop below 55°F (13°C) or rise above 110°F (43°C). The compressor will not be able to maintain proper temperatures inside the refrigerator. Do Not block the toe grille on the lower front of your refrigerator. Sufficient air circulation is essential for the proper operation of your refrigerator. NOTE Raise the front of the refrigerator enough so the doors close freely when opened halfway.

The refrigerator should slope 1/4" to 1/2" from front to back. Then level the refrigerator from side-to-side. Installation Installation clearances · Allow the following clearances for ease of installation, proper air circulation, and plumbing and electrical connections: Sides & Top Back 1/8 inch 1 inch 3 Raise NOTE If your refrigerator is placed with the door hinge side against a wall, you may have to allow additional space so the door can be opened wider. Adjustable Front roller (some models) Stationary Front roller with Leveling Screw (some models) 4 DOOR REMOVAL INSTRUCTIONS Top Hinge Cover Front Screw Top Hinge Cover Rear Screw Tools Necessary: Top Hinge Screw Bottom Hinge Screw AND Phillips Head TM OR Socket Wrench Set OR Adjustable Wrench 3/8" Fixed Wrench NOTE The direction in which your refrigerator doors open (door swing) can be reversed, from left to right or right to left, by moving the door hinges from one side to the other. Reversing the door swings should be performed by a qualified person.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[FFTR1814L user guide](#)

<http://yourpdfguides.com/dref/3876186>

IMPORTANT Before you begin, turn the refrigerator temperature control to "0" and remove the electrical power cord from the wall outlet. Remove any food from door shelves. Door removal and reversal instructions: Top Hinge Cover 1 Remove toe grille. 2 Remove top hinge cover. Trace around the hinge with a soft lead pencil.

This makes reinstallation easier. Remove top hinge and lift door off center hinge pin. Set door aside. 3 Unscrew center hinge pin using adjustable wrench and save for reassembly. Ensure plastic washer stays on hinge pin.

4 Lift refrigerator door off of bottom hinge and set aside. 5 Remove center hinge and shim by removing inside screw and loosening two outside screws enough to allow hinge and shim to slide out. Tighten screws. 6 Loosen two outside screws on opposite side of refrigerator, remove inside screw and install center hinge. 7 Remove two screws on bottom hinge with 3/8" socket wrench.

8 Install bottom hinge on opposite side with the two screws removed from step 7. 9 Unscrew bottom hinge pin using adjustable wrench. Move hinge pin to other hole in hinge and tighten with adjustable wrench. 10 Reverse door handles (see instruction on next page). 11 Move freezer and refrigerator door stops to opposite side. Before starting screws, use an awl to puncture the foam. 12 Position refrigerator door onto bottom hinge pin and screw center hinge pin through center hinge into top of door. Close refrigerator door to help align hinge hole. Top Hinge Door Stop Screw Door Stop Washer Hinge Pin Bottom Hinge Screws 13 Tighten center hinge pin with adjustable wrench. 14 Remove cabinet and hinge hole plugs and move to opposite side.

15 Lower freezer door onto center hinge pin. 16 Close freezer door. Have an assistant lift up on opposite side of door while tightening screws to install top hinge. 17 Flip toe grille and reinstall. 18 Plug in electrical power cord and turn refrigerator temperature control to center position. Adjust setting as necessary. Toe Grille 5 **HANDLE INSTALLATION CAUTION** Wear gloves and use extreme CAUTION when installing these handles. The rounded end of the handles may be sharp. To attach metal freezer handle: 1 Place rounded part of handle onto shoulder screw on face of door and align the two (2) holes in bottom of handle with the two (2) holes in bottom of door. Do not tighten the set screw yet.

2 Install the two (2) screws into the bottom of the handle. 3 Tighten the set screw on the rounded part of the handle until the handle is flush with the door, then tighten another 1/2 turn. **IMPORTANT** To ensure proper installation of handles, please review these instructions and illustrations thoroughly prior to installing the handles. Additionally, before installing the door handles, make sure the door swing is correct. Your model will have either a right hand or left hand door swing.

Follow instructions in the Use & Care Guide to reverse the doors, if necessary. To attach metal refrigerator handle: 1 Place rounded part of handle onto shoulder screw on face of door and align the two (2) holes in top of handle with the two (2) holes in top of door. Do not tighten the set screw yet. 2 Install the two (2) screws into the top of the handle. 3 Tighten the set screw on the rounded part of the handle until the handle is flush with the door, then tighten another 1/2 turn.

Stainless Steel Models IMPORTANT Stainless steel handles and doors are not reversible. 6 **HANDLE INSTALLATION** To attach plastic refrigerator handle: 1 Place top of handle over dovetail screw, pull handle straight down until handle is aligned with screw holes on top of door. 2 Secure top of handle with two screws. To reverse refrigerator/freezer handles: Handles may be easier to reverse while doors are off. Reverse freezer and refrigerator handles as shown. **CAUTION** Be sure doors are set aside in a secure position where they cannot fall and cause personal injury. To attach plastic Freezer Smart Choice® water line kit 5305513409 (with a 6 ft. Stainless Steel Water Line) and for homes without an existing valve, Frigidaire recommends its Smart Choice water® line kit 5305510264 (with a 20 ft. Copper Water Line with self-tapping saddle valve). @@@@ @@@@ This is the recommended initial setting.

@@@@ @@@@@@ Turning the freezer control will change only the freezer temperature. @@@@@ @@@@@@ After defrosting, a popping sound may occur. **NOTE** Rigid foam insulation is very energy efficient, but is not a sound insulator. **IMPORTANT** During the automatic defrost cycle, you may notice a red glow in the vents on the back wall of your freezer compartment. This is normal during the defrost cycle. D Automatic ice maker When ice has been produced, you will hear ice cubes falling into the ice bin. The ice maker will produce 2.5 to 3 pounds of ice every 24 hours depending on usage conditions. E Electronic control & automatic defrost control These parts can produce a snapping or clicking sound when turning the cooling system on and off. F Condenser fan You may hear air being forced through the condenser.

G Compressor Modern, high-efficiency compressors run much faster than in the past. The compressor may have a high-pitched hum or pulsating sound. H Water valve Makes a buzzing sound each time it opens to fill the ice maker. I Drain pan (not removable) You may hear water dripping into the drain pan during the defrost cycle. J Condenser May create minimal sounds from forced air.

10 **CARE & CLEANING** Protecting your investment Keeping your refrigerator clean maintains appearance and prevents odor build-up. Wipe up any spills immediately and clean the freezer and fresh food compartments at least twice a year. When cleaning, take the following precautions: · Never use **CHLORIDE** or cleaners with bleach to clean stainless steel. · Do not wash any removable parts in a dishwasher. · Always unplug the electrical power cord from the wall outlet before cleaning.

· Remove adhesive labels by hand. Do not use razor blades or other sharp instruments which can scratch the appliance surface. · Do not remove the serial plate. Do not use abrasive cleaners such as window sprays, scouring cleansers, brushes, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior doors, gaskets or cabinet liners. Do not use paper towels, metallic scouring pads, or other abrasive cleaning materials or strong alkaline solutions. **NOTE** If you set your temperature controls to turn off cooling, power to lights and other electrical components will continue until you unplug the power cord from the wall outlet. **CAUTION** ·

Pull the refrigerator straight out to move it. Shifting it from side to side may damage flooring. Be careful not to move the refrigerator beyond the plumbing connections. · Damp objects stick to cold metal surfaces.

Do not touch refrigerated surfaces with wet or damp hands. **IMPORTANT** If you store or move your refrigerator in freezing temperatures, be sure to completely drain the water supply system. Failure to do so could result in water leaks when the refrigerator is put back into service.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](http://yourpdfguides.com/dref/3876186)

[FFTR1814L user guide](http://yourpdfguides.com/dref/3876186)

<http://yourpdfguides.com/dref/3876186>

Contact a service representative to perform this operation. Care & Cleaning Tips Part Interior & Door Liners Door gaskets Drawers & Bins glass Shelves Toe grille Exterior & Handles Exterior & Handles (Stainless Steel Models Only) What To Use Soap and water Baking soda and water Soap and water Soap and water Soap and water Glass cleaner Mild liquid sprays Soap and water Mild liquid sprays Vacuum attachment Soap and water Non Abrasive Glass Cleaner Soap and water Stainless Steel Cleaners Tips and Precautions Use 2 tablespoons of baking soda in 1 quart of warm water. Be sure to wring excess water out of sponge or cloth before cleaning around controls, light bulb or any electrical part. Wipe gaskets with a clean soft cloth. Use a soft cloth to clean drawer runners and tracks. Allow glass to warm to room temperature before immersing in warm water. Vacuum dust from front of toe grille.

Remove toe grille (see Installation Instructions). Vacuum backside, wipe with sudsy cloth or sponge. Rinse and dry. Do not use commercial household cleaners containing ammonia, bleach or alcohol to clean handles. Use a soft cloth to clean smooth handles.

DO NOT use a dry cloth to clean smooth doors. Never use CHLORIDE or cleaners with bleach to clean stainless steel. Clean stainless steel front and handles with non-abrasive soapy water and a dishcloth. Rinse with clean water and a soft cloth. Use a non-abrasive stainless steel cleaner.

These cleaners can be purchased at most home improvement or major department stores. Always follow manufacturer's instructions. Do not use household cleaners containing ammonia or bleach. NOTE: Always clean, wipe and dry with the grain to prevent scratching. Wash the rest of the cabinet with warm water and mild liquid detergent. Rinse well, and wipe dry with a clean soft cloth. replacing Light Bulbs Unplug refrigerator Wear gloves Remove light cover Replace old bulb Replace light cover Plug in the refrigerator CAUTION: Wear gloves when replacing light bulbs to avoid getting cut. Use same wattage when replacing bulb 11 BEFORE YOU CALL 1-800-944-9044 (United States) 1-800-265-8352 (Canada) Common Occurrences Visit our web site at www.frigidaire.com.

Before calling for service, review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance. @@Check/replace fuse with a 15 amp time-delay fuse. Reset circuit breaker. The temperature control is turned to "O". Refrigerator may be in defrost cycle. Wait 20 minutes and check again. @@Allow 24 hours for the temperature to stabilize. Set refrigerator control to a warmer setting.

Allow 24 hours for temperature to stabilize. Then check freezer temperatures and adjust as needed. The cabinet is not level. Floor is weak. See Normal Operating Sounds and Sights section.

Interior needs to be cleaned. Foods that produce odors should be covered or wrapped. Replace light bulb. Ensure plug is tightly pushed into electrical outlet. Light switch may be stuck.

@@Ensure the Wire Signal Arm is not in UP position. Ice maker should produce 2.5 to 3 pounds of ice in a 24 hour period. Water supply is turned off. Water pressure is too low. @@Refrigerator temperature is satisfactory. Refrigerator temperature too cold. Freezer temperature is satisfactory. Refrigerator is noisy or vibrates. Odors in refrigerator.

. Cabinet light not working. Automatic ice maker not working. (some models) 12 Major Appliance Warranty Information MAJOR APPLIANCE WARRANTY Your appliance is covered by a one year limited warranty. For one year from your original date of purchase, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions. Exclusions This warranty does not cover the following: 1. Products with original serial numbers that have been removed, altered or cannot be readily determined. 2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada. 3. Rust on the interior or exterior of the unit.

4. Products purchased "as-is" are not covered by this warranty. 5. Food loss due to any refrigerator or freezer failures. 6. Products used in a commercial setting. 7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. 8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.

9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory. 10. Service call to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.

12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc. 13.

Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God. DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. If you Need Service Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](http://yourpdfguides.com/dref/3876186)

[FFTR1814L user guide](http://yourpdfguides.com/dref/3876186)

<http://yourpdfguides.com/dref/3876186>

This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1.800.944.9044 Electrolux Major Appliances North America 10200 David Taylor Drive Charlotte, NC 28262 Canada 1.800.265.8352 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 13 .



[You're reading an excerpt. Click here to read official FRIGIDAIRE FFTR1814L user guide](#)

<http://yourpdfguides.com/dref/3876186>