




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FGX831FS1. You'll find the answers to all your questions on the FRIGIDAIRE FGX831FS1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE FGX831FS1
User guide FRIGIDAIRE FGX831FS1
Operating instructions FRIGIDAIRE FGX831FS1
Instructions for use FRIGIDAIRE FGX831FS1
Instruction manual FRIGIDAIRE FGX831FS1

LAUNDRY CENTER DRYER OPERATING INSTRUCTIONS

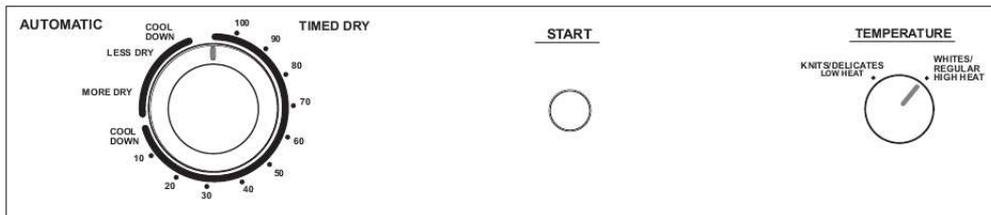

Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best drying results.

WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance.

Operating Steps

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet.
4. Close the dryer door.
5. Set Temperature control.
6. Turn cycle selector clockwise to desired setting.

7. Start dryer. Push the Push to Start button for 2 seconds, or turn Turn to Start knob to ON, hold for 2 seconds and release.
8. A signal will sound when the cycle ends.
9. Remove items immediately and hang or fold.
10. Clean lint screen after every load.

Temperature Selection

Always follow directions on fabric care labels.

The WHITES/REGULAR-HIGH HEAT and DELICATES-LOW HEAT temperature settings may be used with any cycle setting.

Cool Down setting tumbles the load without heat. Use Cool Down to freshen clothing, pillows or blankets, or to dust draperies.

WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use the Cool Down setting only.

Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Auto Dry Cycle

This cycle is best for regular and permanent press items that can be tumble dried.

Drying time is determined automatically at the temperature selection of your choice. This cycle is best for items of similar fabric, weight and construction.

- For items requiring more drying time, set cycle selector on **MORE DRY**.
- For items requiring less drying time, set cycle selector on **LESS DRY**.

Time Dry Cycle

This cycle provides up to 100 minutes of drying time at the temperature selection of your choice.

P/N 134808700(0610)



[You're reading an excerpt. Click here to read official FRIGIDAIRE FGX831FS1 user guide](http://yourpdfguides.com/dref/3200272)
<http://yourpdfguides.com/dref/3200272>

Manual abstract:

@@Each cycle ends with a cool down period. @@This reduces wrinkling and makes items easier to handle during unloading. Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time. Clean lint screen after every load. Or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance. Always follow directions on fabric care labels. This cycle is best for regular and permanent press items that can be tumble dried. drying time is determined automatically at the temperature selection of your choice. This cycle is best for items of similar fabric, weight and construction.

@@@This is only a general guide. Keep the lint screen clean and exhaust the dryer correctly. @@Single items and small loads usually take longer to dry. Dry one load after another to take advantage of a warm dryer. @@ If possible, use the dryer on low humidity days.

@@DO NOT pour fabric softener directly onto the wash load. 7. Add laundry load loosely to wash tub. The dry load should not be higher than top of agitator vanes. @@ 9.

Close lid and pull out cycle selector knob to start washer. @@ to stop the washer , push in the Cycle Selector knob. @@Wait about 2-3 minutes for safety lid lock to release. @@@@Read Washing Procedures in your Owner's Guide. Sort laundry into loads that can be washed together. Add the measured amount of detergent to wash tub before adding the laundry load. This cycle provides 8 minutes of wash/pause agitation and a shorter spin for the gentle care of knits and delicate items. When small wash loads cannot be avoided, use lower water levels. To reduce drying time, select a wash cycle with a fast spin speed to remove more water from heavy items such as towels and jeans. â Operate the washer in early morning and late evening when utility demands are low.

For best results, follow washing instructions on the fabric care labels. Wash / Rinse Temperature Turn the Wash/Rinse Temperature knob to select the wash water temperature suitable for the fiber content and soil level of each load. A cold water rinse saves energy and reduces wrinkling. @@Warm and cold wash and rinse water temperatures are not regulated. @@The dry load should not be higher than the top of the agitator vanes. There should be enough water in the tub for items to move freely. .



[You're reading an excerpt. Click here to read official FRIGIDAIRE
FGX831FS1 user guide
http://yourpdfguides.com/dref/3200272](http://yourpdfguides.com/dref/3200272)