



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FPHD2481KF. You'll find the answers to all your questions on the FRIGIDAIRE FPHD2481KF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE FPHD2481KF
User guide FRIGIDAIRE FPHD2481KF
Operating instructions FRIGIDAIRE FPHD2481KF
Instructions for use FRIGIDAIRE FPHD2481KF
Instruction manual FRIGIDAIRE FPHD2481KF



[You're reading an excerpt. Click here to read official FRIGIDAIRE FPHD2481KF user guide](http://yourpdfguides.com/dref/3200294)
<http://yourpdfguides.com/dref/3200294>

Manual abstract:

.....

.....

.....

.....

.....

.. 3 Dishwasher Features ...

.....

.....

.....

.....

.....

... 4 Operating Instructions

.....

.....

.....

.....

5-8 Preparing and Loading Dishes

.....

.....

.... 9-12 Dishwasher Dispenser and Detergents

..... 13 Factors Affecting Performance .

.....

.....

.....

..... 14 Care and Cleaning

.....

.....

.....

.....

.....

... 15 Solutions to Common Dishwashing Problems ..

@@@@@@Check with manufacturer for recommendations, if not marked. Items that are not dishwasher safe may melt and create a potential fire hazard. ·

WARNING To reduce the risk of fire, electrical shock, or injury when using your dishwasher, follow basic precautions including the following: Disconnect electrical power to dishwasher before servicing. · If the dishwasher drains into a food disposer, make sure disposer is completely empty before running dishwasher. · Repairs should be done by a qualified technician. · Do not tamper with controls. · Do not touch the heating element during or immediately after use. · Use care unloading the dishware when the SANITIZE option has been selected. Contents may be hot to the touch immediately after the end of cycle. · Water vapor from the vent may be hot to the touch when the SANITIZE option has been selected.

Use care and do not let small children play around or touch the vent area of the dishwasher. · Locate sharp items and knives so that they are not likely to damage the door seal or tub. · Load sharp items and knives with the handles up to reduce the risk of cut-type injuries. · Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If hot water system has not been used for such a period, before using dishwasher, turn on all hot water faucets and let water flow from each for several minutes. This will release any accumulated hydrogen gas. **HYDROGEN GAS IS FLAMMABLE.** Do not smoke or use an open flame during this time. · Do not store or use combustible materials, gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

· Use your dishwasher only as instructed in this Use and Care Manual. · This Manual does not cover every possible condition and situation that may occur. Use common sense and caution when installing, operating and maintaining any appliance. · NSF certified residential dishwashers are not intended for licensed food establishments. · **DISHWASHER MUST BE ELECTRICALLY GROUNDED.**

Read the Installation Instructions for details. · This dishwasher is designed to operate on regular house current (120 V, 60 Hz). Use a circuit equipped with a 15 ampere fuse or circuit breaker. Use a 20 ampere fuse if dishwasher is connected with a food waste disposer. · Do not operate dishwasher unless all enclosure panels are in their proper place.

· To avoid entrapment and/or suffocation, remove door or door latch mechanism from any dishwasher that is discarded or not in use. · Keep young children and infants away from dishwasher when it is operating. · Do not let children abuse, sit, stand or play on door or racks of a dishwasher. · Use only detergents and rinse agents recommended for use in a dishwasher. · Store dishwasher detergent and rinse agents out of the reach of children. · When loading items to be washed: 2 ©2009 Electrolux Home Products, Inc. All rights reserved. Printed in the USA **PRODUCT REGISTRATION** Thank you for choosing Frigidare.

This Use & Care Guide is part of our commitment to customer satisfaction and product quality throughout the service life of your new appliance. We view your purchase as the beginning of a relationship.

To ensure our ability to continue serving you, please use this page to record important product information. **NOTE Very Important Information-- Read Before**

Operating Your Dishwasher! Normal Operating Sounds This dishwasher does not sound like most Purchase date Model number Serial number Registering your product with Frigidaire enhances our ability to serve you. You can register online at www.frigidaire.com or by dropping your Product Registration Card in the mail. dishwashers--IT'S QUIETER. Your Precision Direct Wash System® dishwasher uses energy efficient motors for the wash and drain portions of the cycle you select. Each cycle has a series of water fills and drains for washing and rinsing dishes. As each cycle begins, you may or may not hear the drain motor. The next sound you will hear is the splashing water as it enters the tub.

Then the lower arm rotates and circulates water. This is followed by a pause and a slightly different sound as the upper arms spray water. If you listen closely, you will hear the change in sound as the wash action switches from one arm to the other. PLEASE BE ADVISED: If you compare this dishwasher to previous models, you may be surprised at what you DON'T hear! 3 DISHWASHER FEATURES Your dishwasher cleans by spraying a mixture of hot water and detergent through the spray arms against soiled surfaces. Each cycle begins with a pre-drain.

Next, the dishwasher fills with water covering the filter area. Water is then pumped through the filter and spray arms. Soil particles go down the drain as the water is pumped out and replaced with clean water. The number of water fills will vary with the cycle being used. Upper Spray Arm Tub Gasket Middle Spray

Arm Top Rack Blower Vent Assembly Removable Versa-tray Bowl Tines Adjustable Upper Rack Serial Label (located on right side of tub) Bottom Rack Silverware Basket Lower Spray Arm Overflow Protector Self-Cleaning Filter Detergent Dispenser Heating Element Glass Trap Removable High Side Shelf Rinse Aid Dispenser 4 OPERATING INSTRUCTIONS 1-24 hrs my favorite hold 3s power plus normal wash quick clean top rack energy saver rinse only add rinse aid wash pressure heavy medium lite wash temp sanitize hi temp normal power plus dry heat air delay start hold to lock START cancel delay washing drying clean s Press the CIRCLE to activate Getting Started 1.

Load dishwasher (See Preparing and Loading Dishes). 2. Add detergent (See Dishwasher Dispenser & Detergents). 3. Add rinse aid (See Rinse Aid). 4. Select desired CYCLE (See Cycle Chart). The indicator light above the pad will glow when selected. 5. Select desired OPTIONS (See Energy Options).

The indicator light above the pad will glow when selected. 6. Run hot water faucet nearest dishwasher until water is hot. Turn water off. 7. To start, press START/CANCEL pad. 8. Close door to latch. Options Selections Wash Pressure The WASH PRESSURE option allows you to select the desired wash pressure depending on your dishload. When HIGH WASH PRESSURE is selected, the wash pressure is increased by 30% to provide faster and more effective cleaning. When LOW WASH PRESSURE is selected, the wash pressure is decreased by 30% to clean delicate dishes without damage. HIGH WASH PRESSURE can be used with all cycles except CHINA CRYSTAL and RINSE ONLY.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FPHD2481KF user guide](http://yourpdfguides.com/dref/3200294)
<http://yourpdfguides.com/dref/3200294>

HIGH WASH PRESSURE is automatically provided when POWER PLUS or QUICK CLEAN cycles are selected. LOW WASH PRESSURE can be used with all cycles except QUICK CLEAN and RINSE ONLY. LOW WASH PRESSURE is automatically provided when CHINA CRYSTAL (TOP RACK) is selected. WASH PRESSURE may be selected before the wash cycle is started, or anytime during the wash cycle. NOTE The dishwasher is programmed to remember your last cycle so you do not have to reset each time. To start the dishwasher using the same cycle and options selected on the previous wash, just press the START/CANCEL pad. Hi-Temp Wash When HI-TEMP WASH option is selected, the dishwasher heats water in the main wash to approximately 140°F (60°C).

This increase in water temperature helps dishwasher detergent remove food grease and soil from dishes more effectively and aids in drying.

This option is available in NORMAL WASH and TOP RACK. HI-TEMP WASH is automatically provided when POWER PLUS cycle is selected. Wash Cycle Selections Cycle times are approximate and will vary with options selected. Hot water is necessary to activate dishwasher detergent and melt fatty food soils. An automatic sensor will check the incoming water temperature and, if it is not hot enough, the timer will be delayed for automatic water heating in the main wash of all cycles. This happens even when HI-TEMP WASH option has not been selected. When HI-TEMP WASH is selected, an even higher temperature will be guaranteed to handle heavier soil loads. 5 OPERATING INSTRUCTIONS Sanitize Option To sanitize your dishes and glassware, select the SANITIZE option. When selected, the light above the pad will come on and remain on until end of cycle. The water temperature in the final rinse will be raised to 155°F (68°C) assuring bacteria is destroyed.

This option is available in NORMAL WASH and TOP RACK. SANITIZE is automatically provided when POWER PLUS is selected. Only these sanitization cycles have been designed to meet NSF requirements. Heat Dry The cycle time will be extended until the proper water temperature is reached. Washing action will continue during the water heating delay. For best results, the incoming water temperature should be at least 120°F (49°C). The sanitize criteria may not be satisfied if there is an interruption of the cycle, power failure or if the incoming water temperature is below 120°F (49°C). To turn off the SANITIZE option, press the pad a second time. The light above the pad will turn off. The HEATED DRY option in combination with rinse aid will enhance drying performance.

HEATED DRY option is available on all cycles except ENERGY SAVER & RINSE ONLY. You may see water vapor coming from the vent during the drying portion of cycle. The vent is closed during washing to hold moisture and sound inside. The vent opens during the last few minutes of the final rinse and remains open for drying. The drying option may be changed at any time during the cycle and affects only the drying period.

Opening the door longer than one minute during the dry cycle cancels the selected dry program. Sahara Dry When the SAHARA DRY option is selected, the dishwasher increases the temperature of the final rinse and extends drying time by approximately twenty minutes. The SAHARA DRY option can be used with all cycles except CHINA CRYSTAL, ENERGY SAVER AND RINSE ONLY. For best drying performance, select HiTemp Wash and/or sanitize. This will increase the temperature during the wash cycle to improve drying.

The energy required to use the SAHARA DRY option costs pennies per cycle. You may choose not to select the SAHARA DRY option; however you may have items in your dish load that will not be completely dry at the end of the cycle. To Cancel a Cycle You can cancel a cycle anytime during the cycle. Press START/CANCEL pad and the dishwasher will start a 90 second drain. At the end of the drain, select the desired cycle. When an option is selected, the light above the pad will come on and remain on until end of cycle. To turn off the option, press the pad a second time. The light above the pad will turn off. Delay Start The DELAY START option allows you to automatically delay starting your dishwasher from 1-24 hours. On models with 1-24 hour delay, press the DELAY START pad until the desired delay time shows in the STATUS window.

A light will come on indicating the delay start hours and will remain on until cycle starts. To cancel the DELAY START option and begin the cycle before the delay period is over, press the START/CANCEL pad. Child Lock Controls To prevent children from accidentally changing the dishwasher cycle or starting the dishwasher, lock the dishwasher controls by pressing and releasing the DELAY START pad (some models) or the AIR DRY pad (some models) for 3 seconds. An indicator light on the lock graphic pad will illuminate when the controls are interrupted. HI-TEMP WASH and NO HEAT DRY indicator lights will also flash. To clear, touch START/CANCEL pad. Number of delay start hours. The last hour will count down in minutes. Close dishwasher door. The status indicator lights will also flash to indicate current cycle status.

Indicate a water heat delay. Number of minutes left in cycle (1-99). If cycle is longer than 99 minutes, a small plus sign will appear beside the number of minutes and remain on until time counts below 99. CL..

.....
.....

. HO or Hd..... MINUTES.

.....

... NOTE The time remaining could suddenly increase or drop several minutes. This means the Smart Sensor has checked the soil level and determined if additional water fills are needed or if water fills can be deleted.

8 PREPARING AND LOADING DISHES Dish Preparation Scrape away large pieces of food, bones, pits, toothpicks, etc. The continuous filtered wash system will remove remaining food particles. Burned-on foods should be loosened before loading. Empty liquids from glasses and cups. Foods such as mustard, mayonnaise, vinegar, lemon juice and tomato based products may cause discoloration of stainless steel and plastics if allowed to sit for a long period of time. Unless the dishwasher is to be operated at once, it is best to rinse off these food soils. · Load racks so that large items do not prevent the detergent dispenser from opening. · Check manufacturer's recommendations before washing items in question. · If the dishwasher drains into a food disposer, be sure disposer is completely empty before starting dishwasher. 10 place settings standard loading pattern (For best washing performance, the upper rack should be in the raised position.

) Loading the Top Rack Features and appearance of racks and silverware basket may vary from your model. The upper rack is designed for flexibility in loading a wide variety of items including cups, glasses, stemware, small plates, bowls, etc. Load glasses in top rack. Damage may occur if placed in bottom rack. Load plastic items in top rack only. Melting may occur if placed in bottom rack. Load items with open ends facing down for better cleaning and draining.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](http://yourpdfguides.com/dref/3200294)

[FPHD2481KF user guide](http://yourpdfguides.com/dref/3200294)

<http://yourpdfguides.com/dref/3200294>

Damage may occur if delicate items touch each other during dishwasher operation. Use the Versa-Tray for long-handled knives and utensils. Be sure nothing protrudes through the bottom of the rack to block rotation of middle spray arm.

12 place settings standard loading pattern (For best washing performance, the upper rack should be in the raised position.) Some models have a fold-down cup shelf or a cup shelf/ stemware holder. They can be used to load two levels of cups, juice glasses, and other short items. Stagger items on upper level so that water can reach all inside surfaces. Fold up to load tall glasses.

9 PREPARING AND LOADING DISHES Bowl Tines The bowl tines offer the ultimate in flexibility. When closed, load with saucers or small dishes. Open halfway and it is perfect for small casseroles. Open completely for those hard to fit items such as coffee pots, food processors, etc. As you load your dishwasher, you will find many other ways to use this unique feature.

Upper Rack Option LIGHT WASH--UPPER RACK option can be used to wash a wide assortment of items when you don't have a full load. Also, when the upper rack fills up with glasses and the lower rack is still empty, you don't have to wait anymore for clean glasses. Adjustable Upper Rack (available on select models) To raise the upper rack, refer to the figure below. A) Lift the rack straight upward. B) Pull rack slightly forward as the adjustable mechanism locks into place. To lower the upper rack, lift the rack straight upward and push rack slightly towards the rear of the dishwasher as it is lowered. 10 PREPARING AND LOADING DISHES Loading the Bottom Rack Features and appearance of racks and silverware basket may vary from your model. The lower rack is best for plates, saucers, bowls, and cookware. Large items should be placed along the edge so they do not block the spray arm rotation. For best results, place bowls, casseroles, and sauce pans with soiled surface facing down or toward the center.

Tilt slightly for better drainage. Make sure tall items do not block spray arm rotation. Be sure pan handles do not protrude through the bottom of the rack and block the spray arm rotation. Removable High-Side Shelf The removable high-side shelf can be used to hold serving spoons, spatulas, or other small items.

The shelf can also fold up or be removed for more space to load large pots or pans. When using the high-side shelf, ensure that objects in the lower rack do not block the rotation of the middle spray arm. To install the removable high-side shelf: 1A) Guide the support arms through the lower rack as shown below. 1B) Align clamps with upper rack wire and press down firmly to lock into place. Next, 2A,B) Guide the support arms from the outside to the inside of the rack. 10 place settings standard loading pattern 2C) Slide the shelf to the rear of the rack.

To uninstall repeat the following steps in reverse order. 12 place settings standard loading pattern 11 PREPARING AND LOADING DISHES Versa-Tray The Versa-Tray can be used in the upper rack or lower rack to hold large utensils, juice cups, baby bottles, long knives, etc. Place small items like baby bottle caps, jar lids, corn cob holders, etc., in a covered section. @@@@Fold down for more space to load large pots or pans.

@@@@Do not mix silver and stainless to avoid damaging the silver finish. @@Load silverware in all sections or just one, depending on your load.

@@@@@@@@@@@@@@@@The covered cup opens automatically to release detergent. @@@Other detergents will cause oversudsing. @@Add detergent just before starting cycle.

Store detergent in a cool, dry location. @@Water hardness is measured in grains per gallon. @@@@@@@@@@@@@@@@@@As a rule, use 1 teaspoon for each grain above 12. @@Close the door to latch and the dishwasher will continue through the cycle. NOTE 13 FACTORS AFFECTING PERFORMANCE Rinse Aid Rinse aid greatly improves drying and reduces water spots and filming. Water "sheets" off dishes rather than forming water droplets that cling and leave spots. A dispenser, located next to the detergent cup, automatically releases a measured amount of rinse aid during the last rinse. If spotting and poor drying are problems, increase the amount of rinse aid dispensed by rotating the dial to a higher number. The dial is located under the dispenser cap. The indicator will be dark when full and will show clear when it is time to refill.

On models with a STATUS window, LO will appear at the end of the cycle indicating that it is time to refill. To add liquid rinse aid, turn dispenser cap 1/4 turn counterclockwise and lift out. Pour in rinse aid until liquid touches the indicated fill level. Replace cap. Do not overfill since this can cause oversudsing.

Wipe up any spills with a damp cloth. The dispenser holds enough for 35 to 140 washes, depending on setting. Water Pressure The hot water line to dishwasher must provide water pressure between 20 and 120 psi. Low water pressure may occur when laundry or showers are in operation. Wait until water use is reduced before starting dishwasher.

Water Temperature Hot water is needed for best dishwashing and drying results. Water entering dishwasher should be at least 120°F (49°C) to give satisfactory results. To check water temperature entering dishwasher: · Turn on hot water faucet nearest dishwasher for several minutes to clear cool water from pipes. · Hold a candy or meat thermometer in stream of water to check the temperature. · If temperature is below 120°F (49°C), have a qualified person raise the hot water heater thermostat setting.

IMPORTANT Before starting a cycle, run hot water to clear cool water from pipe. Dispenser Opening Indicator The HEAT DRY option in combination with rinse aid will enhance drying performance. The energy required to use the HEAT DRY option costs pennies per cycle. You may choose not to select the HEAT DRY option; however you will have items in your dish load that will not be completely dry at the end of the cycle. Less More Dispenser Cap Adjustable setting 14 CARE AND CLEANING Care of Drain Air Gap Burn Hazard If a drain air gap was installed for your built-in dishwasher, check to make sure it is clean so the dishwasher will drain properly.

A drain air gap is usually mounted on countertop and can be inspected by removing the cover. This is not part of your dishwasher and is not covered by warranty. WARNING Allow heating element to cool before cleaning the interior. Failure to do so can result in burns. Outside--Occasionally wipe with a mild nonabrasive detergent and water. Rinse and dry. CAUTION Property Damage Hazard Freezing temperatures may cause water lines to rupture. Be sure all supply lines to and circulating lines within dishwasher are protected. Failure to do so could result in property damage. Models with Stainless Steel Door-- Clean outer door with warm soapy water and a dishcloth or sponge.

Rinse with clean water and a dry cloth.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FPHD2481KF user guide](http://yourpdfguides.com/dref/3200294)
<http://yourpdfguides.com/dref/3200294>

Do not use harsh cleaners. with normal use. If needed, clean around the tub gasket area with a damp cloth. The filter is self-cleaning. A glass trap located in the center of the filter is designed to collect pieces of broken glass, straws, bones and pits. To remove items in glass trap, grasp handle, lift out, empty and replace. Inside--The inside of the dishwasher is self-cleaning Winterizing A dishwasher left in an unheated place should be protected from freezing. Have a qualified person do the following: To Disconnect Service: 1. Turn off electrical power to the dishwasher at the supply source by removing fuses or tripping circuit breaker.

2. Shut off water supply. 3. Place a pan under the inlet valve. Disconnect water line from inlet valve and drain into pan.

4. Disconnect drain line from pump and drain water into pan. NOTE Hard water may cause lime deposit buildup on the interior of the dishwasher. For cleaning instructions see "Removing Spots and Film" section. To Restore Service: 1.

Reconnect the water, drain, and electrical power supply. 2. Turn on water and electrical power supply. 3. Fill both detergent cups and run dishwasher through a POWER PLUS cycle. 4. Check connections to make sure they do not leak. Overfill Protector--keeps dishwasher from overflowing and is located in the left front corner of the tub. · Clean occasionally with household cleaner containing vinegar or bleach to dissolve any buildup. · Overfill Protector should move up and down freely about one inch.

If it does not move, lift and clean underneath. NOTE See Installation Instructions for more details on disconnecting and restoring service to your dishwasher.

15 SOLUTIONS TO COMMON DISHWASHING PROBLEMS Before calling for service, review this list. It may save you both time and expense. This list includes common experiences that are not the result of defective workmanship or material in your dishwasher. Dishware Stained or Discolored · Tea and coffee can stain cups. Remove the stains by hand washing in a solution of 1/2 cup (120 ml) bleach and one quart (1 L) of warm water. Rinse thoroughly. · Iron deposits in water can cause a yellow or brown film. A special filter installed in the water supply line will correct this problem.

(See Removing Spots and Film.) · Aluminum utensils can leave gray/black marks when they rub against other items. Load properly. · Certain high acid foods can cause discoloration of stainless steel and plastics if allowed to sit for a long period. Use the Rinse & Hold cycle or rinse by hand if not operating dishwasher at once.

· Mixing stainless steel and silver utensils in silverware basket can cause pitting of the stainless steel blades. Avoid mixing stainless steel and silver. Food Soils Left on Dishes · Choose another cycle for longer washing time. · Check rack loading section for proper loading--avoid nesting items. · Home water pressure may be too low--should be 20 to 120 pounds per square inch (psi).

· Check incoming water temperature. It should be at least 120°F (49°C). (See Factors Affecting Performance.) · Check water hardness. For extremely hard water, it may be necessary to install a water softener. (See Detergent Chart.) · Use fresh detergent. · Check to make sure funnel in top rack is not blocked. · Make sure items are not blocking the spray arms, preventing them from rotating. Glassware/Flatware Spotted or Cloudy · Check water hardness.

For extremely hard water, it may be necessary to install a water softener. (See Detergent Chart.) · Water temperature may be low. Avoid extremely low or high temperatures. (See Factors Affecting Performance.) · Avoid overloading and improper loading. (See Preparing and Loading Dishes.) · Use fresh detergent. Old detergent is ineffective. · Make sure rinse aid dispenser is filled.

· Check to see that proper amount of detergent is being used for cycle selected. Also, check phosphate level. (See Detergent Dispenser.) · Home water pressure may be too low--it should be 20 to 120 pounds per square inch (psi). Dishes not Dry · · · · Select heat dry option.

Make sure the rinse aid dispenser is filled. Increase the amount of rinse aid. (See Rinse Aid.) Check the incoming water temperature. Be sure it is at least 120°F (49°C).

· Check for proper loading--avoid nesting items. · Plastic items may need to be towel dried. · Cups with a concave bottom will collect water. 16 SOLUTIONS TO COMMON DISHWASHING PROBLEMS Dishwasher Leaks · Use only fresh detergent designed for automatic dishwashers. Measure detergent carefully. Try a different brand. · Spilled rinse aid can cause foam and lead to overflowing. Wipe up any spills with a damp cloth. · Check to see that dishwasher is level. (See Installation Instructions.

) Water in Bottom of Tub · Water left in bottom of tub after cycle is complete is not normal. If water remains in the bottom of the tub, dishwasher may not be draining properly. (See Dishwasher Does Not Drain Properly.) Dishware Chipped · Load with care and do not overload. (See Preparing and Loading Dishes.) · Place delicate items in top rack. · Place glasses securely against pins and not over pins. · Load items so they are secure and don't jar loose when moving racks in and out. Move racks in and out slowly. · Make sure tall glasses and stemware will clear top of tub when rack is pushed in.

· Fine antique china and crystal should be hand-washed. Normal Sounds You Will Hear · Normal sounds include water fill, water circulation and motor sounds. · There is a noticeable change in sound when the wash action switches between the lower and middle spray arm. This is normal since each spray arm has its own sound. · It is normal for dishwasher to pause (no sound) when the wash action is switching between the lower and middle spray arms.

Vapor at Vent · Water vapor escapes from the vent during the drying part of cycle. This is normal. Etching · Using too much detergent in soft or softened water causes this film that cannot be removed. · Adjust the amount of detergent based on the water hardness. (Check Detergent Chart.

) · Lower the water temperature. · Use no heat dry option. Dishwasher Won't Run · Check to see if circuit breaker is tripped or if a fuse is blown. · Make sure water supply is turned on. · Check to see if cycle is set correctly. (See Operating Instructions.) · Is dishwasher set for delay start option? · Make sure door is closed and latched. Detergent Left in Cups · Detergent may be old. Discard and use fresh detergent. · Be sure water action can reach the dispenser.

· Check to see if cycle has been completed. · Make sure items do not prevent the detergent dispenser from opening.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](http://yourpdfguides.com/dref/3200294)

[FPHD2481KF user guide](http://yourpdfguides.com/dref/3200294)

<http://yourpdfguides.com/dref/3200294>

17 SOLUTIONS TO COMMON DISHWASHING PROBLEMS Dishwasher Does Not Drain Properly · If unit is hooked up to a food waste disposer, make sure the disposer is empty. · Check to see if the knockout plug has been removed from inside the food waste disposer inlet. · Check to see if drain hose is kinked. · Make sure cycle is complete, not in a pause. Stains on Tub Interior · Washing large amounts of dishware with tomato based soil can cause a pink/orange appearance. This will not affect performance and will gradually fade over time. Pre-rinsing or using the Rinse & Hold cycle will reduce the chance of staining. Using no heat dry option will lessen staining.

Removing Spots and Film Hard water can cause lime deposit buildup on the interior of the dishwasher. Dishes and glasses may also get spots and film for a number of reasons. (See Glassware/Flatware Spotted or Cloudy section.) To remove buildup, spots and film, clean using the following instructions: 1. Load clean dishes and glasses in normal manner.

Do not load any metal utensils or silverware. 2. Do not add detergent. 3. Select the NORMAL WASH cycle.

Close and latch door. Press START/CANCEL pad. 4. Allow dishwasher to run until it starts the second water fill (approximately 10 minutes). The SENSING light will be off. 5. Unlatch and open door and pour 2 cups of white vinegar into the bottom of dishwasher. 6. Close and latch door and allow cycle to finish.

Dishwasher Won't Fill · Is water supply turned on? · Does overflow protector move up and down freely? (See Overflow Protector section.)

) Dishwasher Has an Odor · Soiled dishes left in dishwasher too long can create an odor. Use Rinse & Hold cycle. · There will be a "new" smell when first installed. This is normal. · Check to see if unit is draining properly. (See Dishwasher Does Not Drain Properly.) Cycle Takes a Long Time · Is cycle in a water heating delay? · Has the delay start option been selected? @@@@Exclusions This warranty does not cover the following: 1. @@2. @@3. Rust on the interior or exterior of the unit.

4. 5. 6. Products purchased "as-is" are not covered by this warranty. Food loss due to any refrigerator or freezer failures.

Products used in a commercial setting. 7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. 8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.

9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory. 10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska. 12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc. 13.

Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God. **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. If You Need Service Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.**

This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1.800.944.9044 Electrolux Major Appliances North America P.

O. Box 212378 Augusta, GA 30907 Canada 1.800.265.8352 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 19 .



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[FPHD2481KF user guide](#)

<http://yourpdfguides.com/dref/3200294>