



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FRA053PU1. You'll find the answers to all your questions on the FRIGIDAIRE FRA053PU1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FRIGIDAIRE FRA053PU1**  
**User guide FRIGIDAIRE FRA053PU1**  
**Operating instructions FRIGIDAIRE FRA053PU1**  
**Instructions for use FRIGIDAIRE FRA053PU1**  
**Instruction manual FRIGIDAIRE FRA053PU1**

 
## FRIGIDAIRE

All about the

# Use & Care

of your

## Portable Air Conditioner



### TABLE OF CONTENTS

Important Safety Instructions .....	2-3	Air Conditioner Features .....	8
Product Registration .....	4	Operating Instructions .....	9-11
Normal Sounds .....	4	Care and Cleaning .....	11
Unit Description .....	5	Before You Call .....	12
Accessories Included .....	5	Major Appliance Warranty .....	13
Installation Instructions .....	6-7		

www.frigidaire.com USA 1-800-944-9044 www.frigidaire.ca Canada 1-800-265-8352

6000-26110-1/01-09/05/2008



[You're reading an excerpt. Click here to read official FRIGIDAIRE FRA053PU1 user guide](http://yourpdfguides.com/dref/3876147)  
<http://yourpdfguides.com/dref/3876147>



minimize shock and fire hazards, proper grounding is important. @@@@Do not run air conditioner without outside protective cover in place. This could result in mechanical damage within the air conditioner. @@Avoid Serious Injury or Death This air conditioner contains no user-serviceable parts.

Always call an authorized Electrolux servicer for repairs. Do not insert or place fingers or objects into the air discharge area on top of the unit. Do not start or stop the air conditioner by unplugging the power cord or turning off the power at the electrical box. Do not cut or damage the power cord. If the power cord is damaged, it should only be replaced by an authorized Electrolux servicer. In the event of a malfunction (sparks, burning smell, etc.), immediately stop the operation, disconnect the power cord, and call an authorized Electrolux servicer. Do not operate the air conditioner with wet hands. Do not pull on the power cord. Do not drink any water that is drained from the air conditioner.

© 2009 Electrolux Home Products, Inc. All rights reserved. Important Safety Instructions SAFETY PRECAUTIONS CAUTION! Avoid Injury or damage to the unit or other property Provide occasional ventilation during use. Do not direct airflow at fireplaces or other heat related sources as this could cause flare ups or make units run excessively. Do not climb on or place objects on the unit.

Do not hang objects off the unit. Do not place containers with liquids on the unit. Turn off the air conditioner at the power source when it will not be used for an extended period of time. Periodically check the condition of the unit's installation accessories for any damage. Do not apply heavy pressure to the radiator fins of the unit.

Operate the unit with air filter in place. Do not block or cover the intake grille, discharge area and outlet ports. Ensure that any electrical/electronic equipment is one yard away from the unit. @@@@The power supply cord will have TWO buttons on the plug head. Press the TEST button. You will notice a click as the RESET button pops out. Press the RESET button. Again you will notice a click as the button engages. The power supply cord is now supplying electricity to the unit. @@Always make sure the RESET button is pushed in for correct operation.

@@A new one can be obtained from the product manufacturer. If power supply cord is damaged, it CANNOT be repaired. @@@@Model No.

@@@@@First position unit on a flat floor and make sure there's a minimum of 12" clearance around the unit, and is within the vicinity of a single circuit outlet power source. 1. Extend either side of the hose (Fig. 3) and screw the hose to adaptor A (Fig. 4) . 2. Extend the other side of the hose and screw it to adaptor B (Fig.

5). 3. Slide the assembly onto unit (Fig. 6). 4.

Affix the adaptor B into the window slider kit and seal. (Fig. 7&8) Extend the side of hose Fig. 3 Vertical window Fig. 4 Window Slider Kit Minimum:26.6"(67.5cm) Maximum:48.5"(123cm) Fig. 7 Fig. 5 Horizontal window Window Slider Kit Minimum:26.6"(67.5cm) Maximum:48.5"(123cm) Slide onto Fig. 8 Fig. 6 The hose can be extended from its original length of 15" up to 55", but it is the best to keep the length to minimum required.

Also make sure that the hose does not have any sharp bends or sags. (Fig. 9) Fig. 9 6 2009 Electrolux Home Products, Inc. All rights reserved. Installation Instructions Installation Instructions (continued) Installation in a double-hung sash window 1. Cut the foam seals(adhesive type) to the proper lengths and attach them to the window and stool. (Fig. 10) 2. Open the window sash and place the window slider kit on the window stool (Fig.

11). Attach the window slider kit to the window stool. Adjust the length of the window slider kit according to the width of window. Screw down the two screws on the window slider kit. See Fig.

11. Cut the adjustable window slider kit if the width of window is less than 26.6 inches (Fig. 12). 3.

Close the window sash securely against the window slider kit. (Fig. 13) 4. @@(FIG. 13) 5. Secure the window slider kit to the window stool (FIG. 13): A: For wooden windows: Use 3/4" screws for securing. for securing. B: For Vinyl-Clad windows: Use 6. To secure lower sash in place, attach right angle sash lock with NOTE: It is difficult to lock the windows with the sash lock for Vinyl-Clad windows, so you can use lock by window itself.

7. Cut the foam seal to an appropriate length and seal the open gap between the top window sash and outer window sash, as shown in Fig.15. Foam seal A (adhesive type) Fig. 10 screws Window slider kit 26.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](http://yourpdfguides.com/dref/3876147)

[FRA053PU1 user guide](http://yourpdfguides.com/dref/3876147)

<http://yourpdfguides.com/dref/3876147>

6"~48.5" Window stool Fig. 11 Cut this side to fit your window Window slider kit Foam seal hex head cap screws Fig. 14 Fig. 15 Fig. 12 Window stool Fig. 13 Installation in a sliding sash window 1. Cut the foam seals(adhesive type) to the proper lengths and attach them to the window frame. See Fig.16.

2. Open the window sash and place the window slider kit on the window stool. See Fig.17. Attach the window slider kit to the window stool. Adjust the length of the window slider kit according to the height of window. Screw down the two screws on the window slider kit. See Fig.17. 3. Close the sliding sash securely against the window slider kit. (Fig. 18) 4.

18) 5. 6. 7. 17 Window stool Window slider kit Foam seal Fig. 19 2009 Electrolux Home Products, Inc. Fig. 20 All rights reserved. Fig. 22 Battery Size: AAA Warning: the mode is selected. You can press the SWING button to let the louver swing automatically. Restart the machine until the "PI" symbol disappears. Remove the rubber stopper from the hose connector, then screw on a garden hose to the connector as shown on fig 23. The hose may then: A. Discharge into a drain that is lower than the unit. B. Be connected to a condensate pump (sold separately). Garden hose Remove the supplied rubber stopper Fig. The fan will continue to run during this time. This is to cover the possibility of having tobution. Front of unit is blocked by drapes, blinds, furniture, etc. - restricts air distribution. Clear blockage in front of unit. Doors, windows, registers, etc. open - cool air escapes. Close doors, windows, registers, etc. Unit recently turned on in hot room. Clean air filter. Outside temperature extremely hot. Air movement sound.

This is normal. If too loud, set to lower FAN setting. Vibration from uneven floor. Room too hot. Set temperature too low. Increase set temperature. Set temperature too high. Lower setting. If These Solutions Fail, Call 1-800-944-9044 For Frigidaire Service. 12 2009 Electrolux Home Products, Inc. All rights reserved. Major Appliance Warranty Your appliance is covered by a limited one-year warranty and a limited 2-5 year warranty on the sealed system (the compressor, condenser, evaporator and tubing). For one year from your original date of purchase, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions. From the second to the fifth year from your original purchase date, Electrolux will repair or replace any parts in the Sealed Refrigeration System (compressor, condenser, evaporator and tubing) that prove to be defective in materials or workmanship. The consumer will be responsible for diagnostic costs and any removal, transportation and reinstallation costs which are required because of service, costs for labor, parts and transportation other than with respect to the Sealed Refrigeration System. Rust on the interior or exterior of the unit. 4. 5.

Food loss due to any refrigerator or freezer failures. 6. Products used in a commercial setting. 7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. 8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance. 9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.

10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska. 12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc. 13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If You Need Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period Service should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below. This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc.

In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1. 800.944.9044 Electrolux Major Appliances North America P.O. Box 212378 Augusta, GA 30907 Canada 1.800.265.8352 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 2009 Electrolux Home Products, Inc. All rights reserved.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FRA053PU1 user guide](http://yourpdfguides.com/dref/3876147)  
<http://yourpdfguides.com/dref/3876147>