



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FRA12EZU2. You'll find the answers to all your questions on the FRIGIDAIRE FRA12EZU2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual FRIGIDAIRE FRA12EZU2**
- User guide FRIGIDAIRE FRA12EZU2**
- Operating instructions FRIGIDAIRE FRA12EZU2**
- Instructions for use FRIGIDAIRE FRA12EZU2**
- Instruction manual FRIGIDAIRE FRA12EZU2**

FRIGIDAIRE

All about the

Use & Care

of your
Room Air Conditioner

 


TABLE OF CONTENTS

Important Safety Instructions	2-3	Operating Instructions	5-11
Product Registration	4	Care and Cleaning	11
Packaging	4	Energy Saving Ideas	11
Normal Sounds	4	Before You Call	12
Air Conditioner Features	5	Major Appliance Warranty	13

www.frigidaire.com USA 1-800-944-9044 www.frigidaire.ca Canada 1-800-265-8352

6000-26110-1/0127/1200C



You're reading an excerpt. Click here to read official FRIGIDAIRE FRA12EZU2 user guide

<http://yourpdfguides.com/dref/3876168>

immediately stop the operation, disconnect the power cord, and call an authorized Electrolux servicer. Do not operate the air conditioner with wet hands. Do not pull on the power cord. Do not drink any water that is drained from the air conditioner. © 2009 Electrolux Home Products, Inc. All rights reserved. Important Safety Instructions SAFETY PRECAUTIONS CAUTION! Avoid Injury or damage to the unit or other property Provide occasional ventilation during use. Do not direct airflow at fireplaces or other heat related sources as this could cause flare ups or make units run excessively.

Do not climb on or place objects on outdoor part of the unit. Do not hang objects off the unit. Do not place containers with liquids on the unit. Turn off the air conditioner at the power source when it will not be used for an extended period of time. ©©Do not apply heavy pressure to the radiator fins of the unit. Operate the unit with air filter in place. ©©©©©©©©The power supply cord will have TWO buttons on the plug head. Press the TEST button. You will notice a click as the RESET button pops out. Press the RESET button.

Again you will notice a click as the button engages. The power supply cord is now supplying electricity to the unit. ©©Always make sure the RESET button is pushed in for correct operation. ©©A new one can be obtained from the product manufacturer. If power supply cord is damaged, it CANNOT be repaired.

©©©©Model No. Serial No. Register Your Product The self-addressed PRODUCT REGISTRATION CARD should be filled in completely, signed and returned to the Frigidaire Company. Packaging Remove all packaging from inside the carton, along with any inserts placed into the side louvers. Remove the plastic ties and foam pad that secure the compressor to the fan shroud (where applicable).

See diagram. foam pad + plastic ties Packing Inserts Normal Sounds High pitched Chatter Today's high efficiency compressors may have a high pitched chatter during the cooling cycle. Vibration Unit may vibrate and make noise because of poor wall or window construction or incorrect installation. Sound of Rushing Air At the front of the unit, you may hear the sound of rushing air being moved by the fan. Pinging or Swishing Droplets of water hitting condenser during normal operation may cause "pinging or swishing" sounds. Gurgle/Hiss "Gurgling or hissing" noise may be heard due to refrigerant passing through evaporator during normal operation. © 2009 Electrolux Home Products, Inc. All rights reserved. Air Conditioner Features & Operating Instructions Air Conditioner Features CLEAN AIR FEATURE (some models) ELECTRONIC CONTROL Before you begin, thoroughly familiarize yourself with the control panel and remote as shown below and all its functions, then follow the symbol for the functions you desire. The unit can be controlled by the touch pad alone or with the remote.

REMOTE TEMP DISPLAYS SENSING INDICATOR CHECK FILTER TEMPERATURE/TIME (some models) RESET BUTTON ACTIVATES TIMER SETS MODE TURNS UNIT ON OR OFF ADJUSTS TEMPERATURE OR TIME SLEEP MODE SETS FAN SPEED Battery Size: AAA Warning: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickelcadmium) batteries. STANDARD REMOTE FOR HEAT MODELS w/DISPLAY & REMOTE SENSING BUTTON Operating Instructions NOTE The following instructions represent the Touch Pad, the same instructions can be used for the Remote Control. TO TURN UNIT ON: YOU WILL SEE: DO THIS: PRESS ON/OFF BUTTON © 2009 Electrolux Home Products, Inc.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FRA12EZU2 user guide](http://yourpdfguides.com/dref/3876168)
<http://yourpdfguides.com/dref/3876168>

All rights reserved. 5 Operating Instructions Operating Instructions (continued) TO CHANGE TEMPERATURE SETTING: YOU WILL SEE: DO THIS: PRESS PRESS TO RAISE TO LOWER Note: Tap or hold either up () or down () button until the desired temperature is seen on the display. This temperature will be automatically maintained anywhere between 60 °F (16 °C) and 90 °F (32 °C) . If you want the display to read the actual room temperature. See "To Operate on Fan Only" section on Page 7. TO ADJUST FAN SPEEDS: YOU WILL SEE: DO THIS: PRESS TO SELECT TO USE AUTO FAN FEATURE: YOU WILL SEE: DO THIS: PRESS FAN BUTTON, CHOOSE AUTO Note: Fan starts at High Speed and adjusts to a slower speeds the room temperature dictates.

For example, if the room doesn't get too warm, it will stay at the slowest speed. If the room temperature rises quickly, such as a door being opened, it will automatically go to the highest speed. The fan speeds will re-adjust back to the slowest speed as the room returns to the original set temperature. Press either the fan slower or fan faster button to adjust the fan speed manually. 6 2009 Electrolux Home Products, Inc.

All rights reserved. Operating Instructions Operating Instructions (continued) TO OPERATE ON FAN ONLY: YOU WILL SEE: DO THIS: PRESS MODE BUTTON CHOOSE FAN ONLY Note: Use this function only when cooling is not desired, such as for room air circulation or to exhaust stale air on some models. (Remember to open the vent during this function, but keep it closed during cooling for maximum cooling efficiency.) You can choose any fan speed you prefer. (Except "Auto Fan").

@@@@@@@@@@@@@@@@@@@@The Delay Start Operation automatically selects cooling with maximum Fan sat you have mastered the operating procedure, here are more features in your control that you should become familiar with. @@@@The fan will continue to run during this time.

@@@@@@@@@Recirculate inside air - Vent Closed (see Fig. 1) 2. Draw fresh air into the room - Fresh Air (see Fig. 2) 3. Exchange air from the room - Vent Open (see Fig. @@@@@@@@@@@@@@Push the vent handle to the Vent Closed position(where applicable). Open the front panel. Grasp the filter by the center and pull up and out.

Wash the filter using liquid dishwashing detergent and warm water. Rinse filter thoroughly. Gently shake excess water from the filter. @@NOTE: When replacing the air filter after cleaning, make sure the tabs on the air filter are on the upper part of filter, and placed outward as shown in the drawing on the left side. Cabinet Cleaning Tab Be sure to unplug the air conditioner to prevent shock or fire hazard. @@Rinse thoroughly and wipe dry. Never use harsh cleaners, wax or polish on the cabinet front. @@@@Plug in air conditioner. @@@@Install the room air conditioner on the shady side of your home.

@@@@Keep blinds and drapes in otherl rights reserved.

Major Appliance Warranty Your appliance is covered by a limited one-year warranty and a limited 2-5 year warranty on the sealed system (the compressor, condenser, evaporator and tubing). @@@@The consumer will be responsible for diagnostic costs and any removal, transportation and reinstallation costs which are required because of service, costs for labor, parts and transportation other than with respect to the Sealed Refrigeration System. @@@@2. @@@3. Rust on the interior or exterior of the unit.

4. @@@5. Food loss due to any refrigerator or freezer failures. 6. Products used in a commercial setting.

7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. 8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance. 9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory. 10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11.

Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska. 12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc. 13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God. DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. @@@@THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. @@If service is performed, it is in your best interest to obtain and keep all receipts.

Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below. This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1.800.944.

9044 Electrolux Major Appliances North America P.O. Box 212378 Augusta, GA 30907 Canada 1.800.265.8352 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 2009 Electrolux Home Products, Inc. All rights reserved. 13 .



[You're reading an excerpt. Click here to read official FRIGIDAIRE FRA12EZU2 user guide](http://yourpdfguides.com/dref/3876168)
<http://yourpdfguides.com/dref/3876168>