





Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FRA14EHT2. You'll find the answers to all your questions on the FRIGIDAIRE FRA14EHT2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual FRIGIDAIRE FRA14EHT2
- User guide FRIGIDAIRE FRA14EHT2
- Operating instructions FRIGIDAIRE FRA14EHT2
- Instructions for use FRIGIDAIRE FRA14EHT2
- Instruction manual FRIGIDAIRE FRA14EHT2



Home Comfort
FRA14EHT2



**Through-The-Wall
Air Conditioner / Heater**

Product Dimensions

Height	14-1/2"
Width	24"
Depth	20-1/2"

More Easy-To-Use Features

Effortless™ Clean Filter
Our antibacterial filter reduces bacteria, room odors and other airborne particles for a cool, comfortable environment.

Multi-Speed Fan
Features three different fan speeds, for more cooling flexibility.

Sleep Mode
Quiet operation keeps you cool without keeping you awake. Plus, Sleep Mode gradually increases room temperature after being activated.

Quickly Cools
Quickly cool a room on hot days.

Comfort Control Design
Easily control the direction of your cool air, wherever your unit is.

Effortless™ Restart
Automatically resumes operating at its previous settings when power is restored to your unit.

Clean Filter Alert
Notifies you when your filter needs to be cleaned.

Power Cord
Comes with an extra long three-prong cord that makes extension cords unnecessary.

**SpaceWise™ Adjustable Design
Optional Side Panels**
Easily so you can adjust your unit to fit your window.

24-Hour On/Off Timer
Keep things cool on your schedule.

Performance	BTUs
Cool	14,000 / 18,600
Heat	10,800 / 8,600

frigidaire.com

Signature Features

Effortless™ Temperature Control
Our air conditioners maintain the preset room temperature, so you will remain comfortable at all times.

Supplemental Heat Only
Our versatile unit offers a supplemental heating capability, providing you with an additional heat source when needed.

Ready-Select® Controls
Easily select options with the touch of a button.

Remote Control
Allows you to precisely control the temperature and fan speed from across the room.



[You're reading an excerpt. Click here to read official FRIGIDAIRE FRA14EHT2 user guide](http://yourpdfguides.com/dref/3876229)
<http://yourpdfguides.com/dref/3876229>

Manual abstract:

Quickly Cools Quickly cool a room on hot days. Comfort Control Design Easily control the direction of your cool air, wherever your unit is. Effortless™ Restart Automatically resumes operating at its previous settings when power is restored to your unit. Clean Filter Alert Notifies you when your filter needs to be cleaned. Signature Features Effortless™ Temperature Control Our air conditioners maintain the preset room temperature, so you will remain comfortable at all times. Power Cord Comes with an extra long three-prong cord that makes extension cords unnecessary. Ready-Select® Controls Easily select options with the touch of a button. SpaceWise® Adjustable Design Optional Side Panels Extend so you can adjust your unit to fit your window. 24-Hour On/Off Timer Keep things cool on your schedule. Supplemental Heat Only Our versatile unit offers a supplemental heating capability, providing you with an additional heat source when needed.

Remote Control Allows you to precisely control the temperature and fan speed from across the room. Performance Cool Heat BTUs 14,000/13,600 10,600/8,600 frigidaire.com Home Comfort FRA14EHT2 Performance BTU (Cool) BTU (Heat) Dehumidification (Pints/Hour) Cool Area (Sq. Ft.) Energy Efficiency Ratio 14,000/13,600 10,600/8,600 4.3 640 9.0 Through-The-Wall Air Conditioner/Heater Electrical Volts Amps (Cool) Amps (Heat) Watts (Cool) Watts (Heat) Length of Power Cord Plug Type (NEMA) 240/208 7.4/8.4 15.0/13.13 1,550/1,520 6' 3,450/2,800 RAC Through-The-Wall Models (18" Sleeve Kit EA Frigidaire Baseline A C D B LCDI (6-20P) Features Electronic Controls Fan Speeds (Cool/Fan/Heat) Low Voltage Start-Up Auto Cool Function Energy Save Sleep Mode Filter Check 24-Hour On/Off Timer Clean Air Ionizer Remote Control Air CFM (High/Med/Low) Air Direction Control Fresh Air/Exhaust Vent/Closed Filter Type Filter Access Slide-Out Chassis Warranty 1 Yes Full-Function with Heat 302/279/252 4-Way No/No/Yes Antibacterial Mesh Slide-Out Ready-Select® Controls 3/3/3 Yes Yes Yes Yes Yes Yes Optional Accessories Through-The-Wall 18" Sleeve Kit Trim Kit (for larger existing sleeve) Architectural-Style Exterior Louvered Grille PN# EA108T PN# EA120T PN# EA109T Certifications Performance AHAM Specifications Refrigerant Shipping Weight (Approx.) 1 R410a 88 Lbs. Warranty 5 year sealed system/1 year full parts and labor. Plug Type (NEMA) 6-20P NOTE: For planning purposes only. Always consult local and national electric codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.com. Product Dimensions A-Height B-Width C-Depth D - Max. Wall Thickness 14-1/2" 24" 20-1/2" 18" Wall Cutout Dimensions Height Width 15-1/4" 25-1/2" Accessories information available on the web at frigidaire.com USA · 10200 David Taylor Drive · Charlotte, NC 28262 · 1-800-FRIGIDAIRE · frigidaire.

com CANADA · 5855 Terry Fox Way · Mississauga, ON L5V 3E4 · 1-800-265-8352 · frigidaire.ca FRA14EHT2 04/11 © 2011 Electrolux Home Products, Inc. Specifications subject to change. Printed in the U.S.A. Frigidaire Baseline FRA14EHT2 Home Comfort Through-The-Wall Air Conditioner/Heater Plug Type (NEMA) 6-20P Home Comfort Specifications · Product Shipping Weight (approx.) 88 Lbs. · Single phase 3-wire cable, 240/208Volt, 60 Hertz AC only electrical Replacement Installation · When replacing existing air conditioner with new unit, refer to supply with ground required on separate circuit fused on both sides of line. · Amps @ 240/208Volts = (Cool) 7.4/8.4 Amps / (Heat) 15.0/13.13 Amps · Recommended Circuit Breaker 20 Amps · Unit equipped with 240/208V 3-wire power supply cord, NEMA plug type 6-20P, approximately 72" long. @@@@ · Existing decorative exterior grille may be left in place, provided that proper air-directional rear louvered grille is installed. · For installation into larger existing sleeve, optional Trim Kit PN# EA120T available. Note: For planning purposes only. Refer to Product Installation Guide on the web at frigidaire.com for detailed instructions. · Through-the-wall installation requires 18" maximum wall thickness. · For energy-saving purposes, install unit in shady location, preferably a northern exposure; and do not block airflow inside with blinds, curtains or furniture; or outside with shrubs, enclosures or other buildings. Optional Accessories · Through-The-Wall 18" Sleeve Kit (PN# EA108T). · Trim Kit (for larger existing sleeve) (PN# EA120T). .



[You're reading an excerpt. Click here to read official FRIGIDAIRE FRA14EHT2 user guide](http://yourpdfguides.com/dref/3876229)
<http://yourpdfguides.com/dref/3876229>