



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE GLEH1642FS4. You'll find the answers to all your questions on the FRIGIDAIRE GLEH1642FS4 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FRIGIDAIRE GLEH1642FS4**  
**User guide FRIGIDAIRE GLEH1642FS4**  
**Operating instructions FRIGIDAIRE GLEH1642FS4**  
**Instructions for use FRIGIDAIRE GLEH1642FS4**  
**Instruction manual FRIGIDAIRE GLEH1642FS4**

## Installation Instructions

Full Size Laundry Center Gas & Electric

## Instrucciones para la instalación

Centro de lavandería a gas y eléctrica

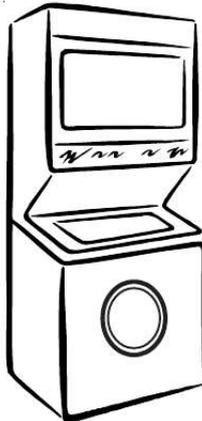


Table Of Contents

Indice

<i>SUBJECT</i>	<i>PAGE</i>	<i>MATERIA</i>	<i>PAGINA</i>
Pre-Installation Requirements.....	2	Requerimientos de instalación preliminares.....	11
Electrical Requirements.....	3	Requerimientos eléctricos.....	12
Water Supply Requirements.....	3	Requerimientos del suministro de agua.....	12
Drain Requirements.....	3	Requerimientos del desagüe.....	12
Exhaust System Requirements.....	4-5	Requerimientos del sistema de escape.....	13-14
Gas Supply Requirements.....	5	Requerimientos del suministro de gas.....	14
Location.....	5	Ubicación.....	14
Rough-In Dimensions.....	6	Dimensiones para la instalación.....	15
Mobile Home Installation.....	7	Instalación en casas móviles.....	16
Unpacking.....	7	Desembalaje.....	16
Electrical Installation.....	8	Instalación eléctrica.....	17
Grounding Requirements.....	8	Requerimientos para la puesta a tierra.....	17
3 & 4-Wire Connections.....	8-9	Conexiones eléctricas - trifásicas y tetrafásicas.....	18
Installation.....	9-10	Instalación.....	19-20
Replacement Parts.....	10	Repuestos.....	20

P/N134889400B (0904)

www.frigidaire.com



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEH1642FS4 user guide](http://yourpdfguides.com/dref/3200350)  
<http://yourpdfguides.com/dref/3200350>

**Manual abstract:**

This symbol alerts you to hazards that can kill or hurt you or others. All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING". DANGER You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life. Do not store or use gasoline or other flammable vapors and liquid in the vicinity of this or any other appliance. Read all of the following instructions before installing and using this appliance. Destroy the carton and plastic bags after the Laundry Center is unpacked. Children might use them for play.

Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers causing suffocation. @@ Before beginning installation, carefully read these instructions. @@@@The gas service to the Laundry Center must conform with local codes and ordinances and the latest edition of the National Fuel Gas Code ANSI Z223. This Laundry Center is not recommended for commercial applications such as restaurants or beauty salons, etc. Do not install a Laundry Center with flexible plastic venting materials.

Flexible venting materials are known to collapse, be easily crushed and trap lint. These conditions will obstruct clothes dryer airflow and increase the risk of fire. Your safety and the safety of others is very important. We have provided many important safety messages in the Installation Instructions / Use & Care Guide and on your appliance. Always read and obey all safety messages.

The instructions in this manual and other literature included with this dryer are not meant to cover every possible condition and situation that may occur. Good safe practice and caution MUST be applied when installing, operating and maintaining any appliance. WHAT TO DO IF YOU SMELL GAS · Do not try to light any appliance. Do not touch any electrical switch; do not use any phone in your building. Clear the room, building or area of all occupants. Immediately call your gas supplier from a neighbor's phone. If you cannot reach your gas supplier, call the fire department. Phillips, straight, & square bit screwdrivers. ½ NPT union flare adapters (x2) and flexible gas supply line (gas dryer), with 3 open end spade lug connectors with upturned ends or closed loop connectors and marked for use with clothes dryers.

, with 4 open end spade lug connectors with upturned ends or closed loop connectors and marked for use with clothes dryers. Grounding through the neutral link is prohibited for (1) New branch circuit installations (2) mobile homes; (3) recreational vehicles; and (4) areas where local codes do not permit grounding through the neutral, (1) disconnect the link from the neutral, (2) use grounding terminal or lead to ground appliance in accordance with local codes and (3) connect neutral terminal or lead to branch circuit neutral in usual manner (if the appliance is to be connected by means of a cord kit, use 4-conductor cord for this purpose). USE COPPER CONDUCTOR ONLY. OUTLET RECEPTACLE - NEMA 10-30R receptacle to be located so the power supply cord is accessible when the dryer is in the installed position. NOTE: Do not under any circumstances remove grounding prong from plug. Hot and cold water faucets MUST be installed within 42 inches (106.9 cm) garden hose type so inlet hoses can be connected. Water pressure MUST be between 10 and 120 pounds per square inch (maximum unbalance pressure, hot vs. cold, 10 psi). Your water department can advise you of your water pressure.

The standpipe height above the floor should be: Minimum height: 33 inches (83.82cm) NEMA 10-30R NEMA 14-30R NOTE: For installations requiring a longer drain hose, have a qualified technician install a longer hose, PIN 134049201, available from an authorized parts distributor. For drain systems in the floor, install a siphon break kit, available from your local hardware store. POWER SUPPLY CORD -The gas laundry center is equipped with a 120 volt 3-wire power cord. 2 cm diameter (minimum) rigid or flexible metal duct and approved vent hood which has a swing-out damper(s) that open when the dryer is in operation.

When the dryer stops, the dampers automatically close to prevent drafts and the entrance of insects and rodents. to avoid restricting the outlet, maintain a minimum of 12 inches (30.5 cm) clearance between the vent hood and the ground or any other obstruction. The following are specific requirements for proper and safe operation of your dryer. Failure to follow these instructions can create excessive drying times and fire hazards. Do not install a clothes dryer with flexible plastic venting materials. If your present system is made up of plastic duct or metal foil duct, replace it with a rigid or flexible metal duct. Flexible venting materials are known to collapse, be easily crushed and trap lint. These conditions will obstruct clothes dryer airflow and increase the risk of fire. Ensure the present duct is free of any lint prior to installing dryer duct. Do not allow combustible materials (for example: clothing, draperies/curtains, paper) to come in contact with exhaust system. The dryer MUST NOT be exhausted into a chimney, a wall, a ceiling, or any concealed space of a building which can accumulate lint, resulting in a fire hazard. Exceeding the length of duct pipe or number of elbows allowed in the "MAXIMUM LENGTH" charts can cause an accumulation of lint in the exhaust system. Plugging the system could create a fire hazard, as well as increase drying times. Do not screen the exhaust ends of the vent system, nor use any screws, rivets or other fastening means that extend into the duct and catch lint to assemble the exhaust system.

@@@Failure to do so can result in death, explosion, fire or burns. The exhaust system back pressure MUST not exceed 0. @@@@- Risk of Fire - A clothes dryer must be exhausted outdoors. @@ a clothes dryer produces combustible lint. @@@ the dryer must be connected to an exhaust outdoors. @@@@The unit will be positioned about 4½ inches (11. @@@@In an area exposed to dripping water or outside weather conditions. 2. In an area where it will come in contact with curtains or drapes. Floor MUST be solid with a maximum slope of 1 inch (2. @@ 2. @@Your laundry center needs the space around it for proper ventilation. 2 square cm) of opening, equally divided at the top and bottom of the door, is required. Air openings are required to be unobstructed when a door is installed. The following illustrations show minimum clearance dimensions and air openings for proper operation in a recess or closet installation.



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEH1642FS4 user guide](http://yourpdfguides.com/dref/3200350)  
<http://yourpdfguides.com/dref/3200350>

Dryer **MUST** be exhausted outside (outdoors, not beneath the mobile home) using metal ducting that will not support combustion. If dryer is exhausted through the floor and area beneath the mobile home is enclosed, the exhaust system **MUST** terminate outside the enclosure with the termination securely fastened to the mobile home structure. Using the four shipping carton corner posts (two on each side), carefully lay the laundry center on its left side and remove the foam shipping base. excessive weight. Use two or more people to CAUTION move Laundry Center.

When installing a gas dryer into a mobile home, a provision must be made for outside make up air. This provision is to be not less than twice the area of the dryer exhaust outlet. 5. Installation **MUST** conform to current Manufactured Home Construction & Safety Standard (which is a Federal Regulation Title 24 CFR-Part 32-80) or when such standard is not applicable, with American National Standard for Mobile Homes. Return laundry center to an upright position. 3. Remove the following from the back side of the washer: 4 bolts, 4 yellow plastic spacers, 3 metal "P" clamps. 4. Remove the service panel from the front of the washer. 5.

Remove the 4 nuts and 6 large washers that attach the 2 yellow shipping braces to the drum and the base. Remove the large styrofoam block located 3 under the drum. Lift up on the drum, tilt the base of the foam block inwards toward the rear of the washer until free, then pull it out. 7. Remove and discard the yellow ribbon and label from the front of the washer. Carefully move the laundry center to within 4 feet (1.22m) of the final location to begin the installation.

**NOTE:** If the laundry center is to be transported at a later date, the shipping support hardware must be reinstalled to prevent shipping damage. For proper and safe electrical installation of your laundry center. Failure to follow these instructions can create an electrical shock and/or a fire hazard.

For a permanently connected laundry center: The laundry center **MUST** be connected to a grounded metal, permanent wiring system; or an equipment grounding conductor **MUST** be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance. The laundry center is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from the plug. Electrical shock can result if the laundry center is not properly grounded.

Follow the in-ster power cord and the ground wire from the appliance harness to the silver-colored center terminal on the terminal block.

Attach the red and black wires from the power cord to the outer brass-colored terminals on the terminal block. Tighten the screws securing the cord restraint firmly against the power cord. Determine which water faucet is the HOT water faucet and carefully connect the bottom inlet hose to the HOT water faucet, tighten by hand, then tighten another 2/3 turn with pliers. Carefully connect the top inlet hose to the COLD water faucet, tighten by hand, then tighten another 2/3 turn with pliers. Turn the water on and check for leaks at both connections.

Semi-rigid or approved pipe from the gas supply line to the 3/8 inch (0. NOTE: Check to ensure the power is off at a circuit breaker fuse box before plugging the power cord into an outlet. 4. Turn on the power at a circuit breaker/fuse box. Before operating the dryer, make sure the dryer area is clear and free from combustible materials, gasoline, and other flammable vapors. Run the washer and dryer through a cycle. check for proper operation. NOTE: On gas dryers, before the burner will light, it is necessary for the gas line to be bled of air. If the burner does not light within 45 seconds the first time the dryer is turned on, the safety switch will shut the burner off. If this happens, turn the timer to "OFF" and wait 5 minutes before making another attempt to light.

6. If your laundry center does not operate, please review the "Avoid Service Checklist" located in your Owner's Guide before calling for service. 7. Place these instructions in a location near the laundry center for future reference. NOTE: A wiring diagram is located behind the dryer front access panel. An air gap must be around the drain hose. Remove the two (2) screws securing the dryer front access panel to the dryer cabinet. Lift the panel until the tabs can be disengaged from the cabinet. If replacement parts are needed for your laundry center, contact the source where you purchased your laundry center.

**WARNING** Destroy the carton, plastic bags, and metal band after the laundry center is unpacked.

Children might use them for play. Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers causing suffocation. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing. @@@@ Plug the power cord into a grounded outlet.

@@@NOTE: Do not under NOTA: No saque por any motivo la ningúncircunstancias espiga remove grounding de puesta a tierra del prong from plug. La constrapresión del sistema de escape NO DEBE exceder 0,6 pulgadas (1,52 cm) de columna de agua, medida con un manómetro inclinado en la conexión del ducto de escape a la secadora. Mientras más se use la secadora, con mayor frecuencia deben inspeccionarse el sistema de escape y la caperuza de salida para verificar su buen funcionamiento. Una caperuza de escape colocada en forma tal que se alinie con el escape de la secadora, El tubo de escape de la secadora DEBE ser instalado hacia el exterior (El escape debe colocarse en la parte exterior y no debajo de la casa móvil. Si el tubo de escape de la secadora corre a través del piso y el área debajo de la casa móvil es cerrada, el ducto de escape DEBE terminar fuera del recinto, con el extremo final asegurado en contra de la estructura de la casa móvil.

Conecte el ducto de escape al sistema de escape exterior. .



[You're reading an excerpt. Click here to read official FRIGIDAIRE](http://yourpdfguides.com/dref/3200350)

[GLEH1642FS4 user guide](http://yourpdfguides.com/dref/3200350)

<http://yourpdfguides.com/dref/3200350>