




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE GLEQ2152ES. You'll find the answers to all your questions on the FRIGIDAIRE GLEQ2152ES in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE GLEQ2152ES
User guide FRIGIDAIRE GLEQ2152ES
Operating instructions FRIGIDAIRE GLEQ2152ES
Instructions for use FRIGIDAIRE GLEQ2152ES
Instruction manual FRIGIDAIRE GLEQ2152ES

Use & Care Guide
Gas & Electric Dryer
Guide de L'Utilisateur
Secadora a Gas y Eléctrica

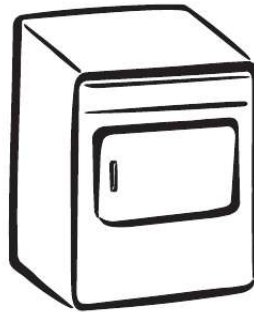

www.frigidaire.com

P/N 134763300A (0806)



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2152ES user guide](http://yourpdfguides.com/dref/2936245)
<http://yourpdfguides.com/dref/2936245>

Manual abstract:

This Read and Save These Instructions book contains valuable information about: Record Your Model and Serial Numbers The model and serial numbers of your dryer are found on the dryer · Operation serial plate located of the left side of the door opening. Record and · Care retain these numbers. · Service Notes les numéros de modèle et de série Keep it in a safe place. Model Number _____ This Use and Care Guide provides general operating Serial Number _____ Purchase Date _____ instructions for your dryer. It also contains information about features for several other models. Your dryer may not have every feature included. Use the dryer only as instructed in this Use & Care Guide and the Operating Instructions included with your dryer. Pedestal A pedestal accessory, Model No. NLPWD15 (White), NLPWD15GB (Glacier Blue), NLPWD15P (Platinum) and NLPWD15E (Black) specifically designed for this washer may be used when elevating the washer for ease of use. Failure to use accessories certified by the manufacturer could result in personal injury, property damage or damage to the washer. Important Safety Instructions Your safety and the safety of others is very important. We have provided many important safety messages in the Use and Care Guide, Operating Instructions, Installation Instructions and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you or others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING". These words mean: DANGER You will be killed or seriously injured if you don't follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. - WHAT TO DO IF YOU SMELL GAS: · Do not try to light any appliance. · Do not touch any electrical switch; do not use any phone in your building. · Clear the room, building or area of all occupants. · Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. · If you cannot reach your gas supplier, call the fire department. Installation and service must be performed by a qualified installer, service agency or the gas supplier. 2 ELECTRIC DRYERS: 14-30R DRYER FUSED 30 AMP 120/240 V OR 120/208 V WALL RECEPTACLE CORRECT Use this way ONLY Important Safety Instructions Con't Grounding type wall receptacle GAS DRYERS: Do not under any circumstances cut, remove or bypass the grounding prong from this plug DRYER SERVICE CORD Power supply cord with 3-prong grounding plug CORRECT Use this way ONLY Avoid fire hazard or electrical shock. Do not use an adaptor plug or extension cord or remove grounding prong from electrical power cord.

Failure to follow this warning can cause serious injury, fire or death. Note: The instructions appearing in this Use and Care Guide are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating and maintaining any appliance. You can be killed or seriously injured if you don't follow these Important Safety Instructions: · To reduce the risk of fire, electrical shock, or injury to persons when using this dryer, comply with the basic warnings listed below. · Failure to comply with these warnings could result in serious personal injuries. Prevent Fire · Do not dry items that have been previously cleaned in, soaked in, or spotted with gasoline, cleaning solvents, kerosene, waxes, etc. Do not store these items on or near the dryer. These substances give off vapors that could ignite or explode. · Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.

· Do not dry articles containing rubber, plastic or similar materials such as bras, galoshes, bath mats, rugs, bibs, baby pants, plastic bags and pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion. · Clean the lint screen before or after each load. The interior of the dryer, lint screen housing and exhaust duct should be cleaned approximately every 18 months by qualified service personnel. An excessive amount of lint build-up in these areas could result in inefficient drying and possible fire.

See Care and Cleaning. · Do not operate the dryer if the lint screen is blocked, damaged or missing. Fire hazard, overheating and damage to fabrics can occur. If your dryer has a drying rack, always replace the lint screen when finished using the drying rack. · - Risk of Fire - A clothes dryer produces combustible lint.

The dryer must be connected to an exhaust outdoors. Regularly inspect the outdoor exhaust opening and remove any accumulation of lint around the outdoor exhaust opening and in the surrounding area. · Do not obstruct the flow of ventilating air. Do not stack or place laundry or throw rugs against the front or back of the dryer. · Do not spray any type of aerosol into, on or near dryer at any time. · Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product. · Failure to comply with these warnings could result in fire, explosion, serious bodily injury and/or damage to the rubber or plastic parts of the dryer. Protect Children · Do not allow children to play on or in the dryer. Close supervision of children is necessary when the dryer is used near children. As children grow, teach them the proper, safe use of all appliances.

· Destroy the carton, plastic bag and other packing materials after the dryer is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads or plastic sheets can become airtight chambers. · Keep laundry products out of children's reach. To prevent personal injury, observe all warnings on product labels. · Before the dryer is removed from service or discarded, remove the dryer door to prevent accidental entrapment. · Failure to comply with these warnings could result in serious personal injuries. SAVE THESE INSTRUCTIONS 3 Printed in U.S.A.

Important Safety Instructions Con't Prevent Injury · To prevent shock hazard and assure stability during operation, the dryer must be installed and electrically grounded by a qualified service person in accordance with local codes.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[GLEQ2152ES user guide](#)

<http://yourpdfguides.com/dref/2936245>

Installation instructions are packed in the dryer for the installer's reference. Refer to INSTALLATION INSTRUCTIONS for detailed grounding procedures. If the dryer is moved to a new location, have it checked and reinstalled by a qualified service person. · To prevent personal injury or damage to the dryer, the electrical power cord of a gas dryer must be plugged into a properly grounded and polarized 3-prong outlet.

The third grounding prong must never be removed. Never ground the dryer to a gas pipe. Do not use an extension cord or an adaptor plug. · ALWAYS disconnect the dryer from the electrical supply before attempting any service or cleaning. Failure to do so can result in electrical shock or injury. · Do not use any type spray cleanser when cleaning dryer interior. Hazardous fumes or electrical shock could occur. @@@@ Use only authorized factory parts. - Do not tamper with controls. @@@@. Prepare items for drying. @@ · Separate dark items from light-colored items. Separate items that shed lint from those that attract lint. If an item sheds lint, turn it inside out. @@ Close zippers, fasten hooks and Velcro®-like fasteners.

Tie strings and sashes to prevent snagging and tangling. · If possible, turn pockets inside out for even drying. · Check for stains which may not have been removed in washing. Dryer heat may permanently set some stains. Repeat stain removal process before drying. @@2. Check that lint screen is clean and in place. 3. Load the dryer. · The average load will fill the drum 1/3 to 1/2 full.

Items need room to tumble freely for even drying and less wrinkling. Do not overload dryer. · When drying large items, dry only 2 or 3 at a time. Fill out the load with small and medium sized items. @@ · Do not overdry items.

Overdrying can cause wrinkling, shr cleansers. @@ Rinse several times with clear water. @@ Or, touch residue with the sticky side of the tape or label. @@@@. Some "silk-like" fabrics should be air dried. · Use proper drying temperature.

· Place fabric softener sheet on top of load before starting the dryer. · Do not overload dryer. · Use fabric softener in washer or dryer to reduce static electricity. · Remove items when they are slightly damp to avoid overdrying. · Check that lint screen is clean and in place. · Use fabric softener to lubricate fibers. · When ironing, use spray starch or fabric finish on collars and cuffs. · Turn items inside out to reduce abrasion. Lint · Overloading. · Reduce load size and rewash using · Overdrying causes static liquid fabric softener in the final rinse.

electricity. · Or, add a fabric softener sheet and · Lint screen not clean tumble without heat. when cycle began. · Use lint brush or roller to remove lint. · Lint is attached to "pills." · Pilling is normal with synthetic and permanent press fabrics. This is due to abrasion from normal wear. · Overdrying. · Use a lint brush or shaver to remove pills. Pilling (Fibers break off, ball up and cling to fabric.

) Shrinking · Irreversible condition. · Follow fabric care label directions. · If shrinking is a concern, check load often. · Remove items while slightly damp and hang or lay flat to complete drying. · Block knits into shape.

· Do not overload dryer. · Remove items as soon as cycle ends. Wrinkling · Overloading. · Leaving items in dryer after cycle ends. · Reduce load size and tumble at medium or low heat for 5-10 minutes.

· Remove items immediately. Hang or fold. 6 Avoid Service Checklist OCCURRENCE Dryer does not start. Before calling for service, review this list. It may save both time and expense. The list includes common occurrences that are not the result of defective workmanship or materials in this dryer. POSSIBLE CAUSE Electrical power cord is not securely plugged in or plug may be loose. House fuse blown or circuit breaker tripped. SOLUTION Make sure the plug fits tightly in wall outlet. Reset circuit breaker or replace fuse.

Make sure electrical line is not overloaded and the dryer is on a separate circuit. Thermal limiter tripped. Dryer runs but won't heat. There are 2 house fuses in the dryer circuit. If 1 of the 2 fuses is blown, the drum may turn but the heater will not operate. Gas supply valve is not open (gas models). Dryer does not have enough air supply to support the burner flame (gas models). LP gas supply tank is empty or there has been a utility interruption of natural gas (gas models). Drying cycle takes too long, outside of the dryer feels too hot or smells hot. Lint screen is clogged with lint.

Call authorized service person for replacement. Replace fuse. Check to make sure supply valve is open. See INSTALLATION INSTRUCTIONS for procedure. See INSTALLATION INSTRUCTIONS.

Refill or replace tank. Dryer should heat when utility service is restored. Make sure all lint has been removed from the dryer lint screen before starting each cycle. Exhaust duct must be at least 4 inches in diameter and made of rigid or flexible metal. When in place, the duct must have no more than two 90° bends and must not exceed length listed in INSTALLATION INSTRUCTIONS.

Exhaust duct requirements have not been met. Electric dryer is connected to a 208 volt circuit. Drying procedures have not been followed. Outside exhaust hood or exhaust duct may be clogged or restricted. High humidity. Excessive wrinkling. Dryer is overloaded. Items left in dryer too long. Insufficient sorting of items. Drying temperature too high.

Scratching or chipping of the drum finish. Foreign objects such as coins, pins, clips or buttons are inside the dryer. Permanently attached items such as belt buckles, zippers and fasteners may be hitting the inside of the drum. Drying time will be 20% longer than drying on a 240 volt circuit. See Drying Procedures. Clean out any obstruction. Use a dehumidifier near the dryer. Do not overload. See Drying Procedures. Remove items as soon as cycle ends.

See Drying Procedures. Follow fabric care label instructions. Always remove foreign objects from pockets before laundering. Remove objects from drum and restart dryer. It may be necessary to baste a scrap of material securely around ornaments before drying to prevent scratching and damage to the dryer.

@@@2. 3. 4. 5. 6.

7. 8. 9. @@@@ Rust on the interior or exterior of the unit. Products purchased "as-is" are not covered by this warranty. Food loss due to any refrigerator or freezer failures. Products used in a commercial setting. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. Service calls to correct the installation of your appliance or to instruct you how to use your appliance. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc.



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2152ES user guide](http://yourpdfguides.com/dref/2936245)
<http://yourpdfguides.com/dref/2936245>

,which are not a part of the appliance when it is shipped from the factory. 10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska. 12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc. 13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God. **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES**
CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN.

CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If You Need Service Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below. This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc.

In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1.800.944.9044 Electrolux Major Appliances North America P.O. Box 212378 Augusta, GA 30907 Canada 1.

800.668.4606 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 .



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2152ES user guide](http://yourpdfguides.com/dref/2936245)
<http://yourpdfguides.com/dref/2936245>